

 BY JOHNSON CONTROLS	AIR-COOLED LIQUID CHILLERS HERMETIC SCROLL 60 HZ	
RENEWAL PARTS	Supersedes: 150.63-RP5 (903)	Form 150.63-RP5 (713)

**MODELS YCUL0016, 0026, 0030, 0036, 0040, 0046, 0050, 0056,
0060, 0066, 0076, 0080, 0086 AND YCUL0090
STYLE "C"**



YCUL



200-3-60
230-3-60
315-3-60
460-3-60
575-3-60
MODELS ONLY

**16 - 90 TON
270 - 457KW
60 HZ**

Issue Date:
July 31, 2013



TABLE OF CONTENTS

	<u>PAGE</u>
UNIT NOMENCLATURE NAMEPLATE ENGINEERING DATA	3
CONDENSER COILS	
CONDENSER COIL COMPONENTS	4
FAN	
FAN COMPONENTS.....	6
PIPING	
REFRIGERANT PIPING COMPONENTS.....	7
COMPRESSOR	
COMPRESSOR	10
CONTROL AND POWER PANELS	
CONTROL PANEL AND POWER PANEL	16
SENSOR HARNESS.....	68
TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS	71
WIRE HARNESS CONNECTORS-FIELD REPLACEMENT PART NUMBERS	72
CHILLER OPTIONS	
YCUL CHILLER OPTIONS - KITS	73
ENCLOSURE KIT OPTIONS	75
REMOTE CONTROL CENTER	80
REMOTE CURRENT/TEMPERATURE RESET PARTS BREAKDOWN	81
RECOMMENDED SPARE PARTS.....	82

WARNING

HIGH VOLTAGE

Is used in the operation of this equipment.

DEATH OR SERIOUS INJURY

may result if personnel fail to observe safety precautions.

Work on electronic equipment should not be undertaken unless the individual(s) have been trained in the proper maintenance of equipment and is (are) familiar with its potential hazards.

Shut off power supply to the equipment before beginning work and follow lockout procedures. When working inside equipment with power off, take care to discharge every capacitor likely to hold dangerous potential.

Be careful not to contact high voltage connections when installing or operating this equipment.

LOW VOLTAGE

DO NOT be misled by the term "low voltage." Voltages as low as 50 volts may cause death.

CONDENSER COIL COMPONENTS

Condenser

POWER
PANEL
END OF
CHILLER

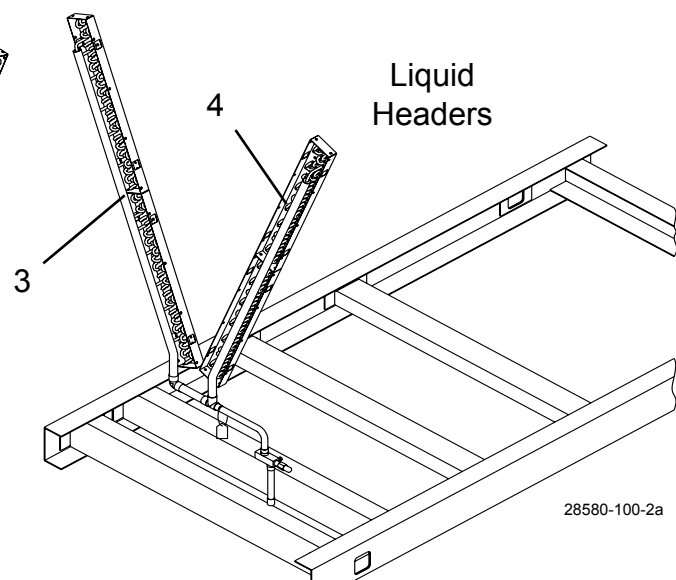
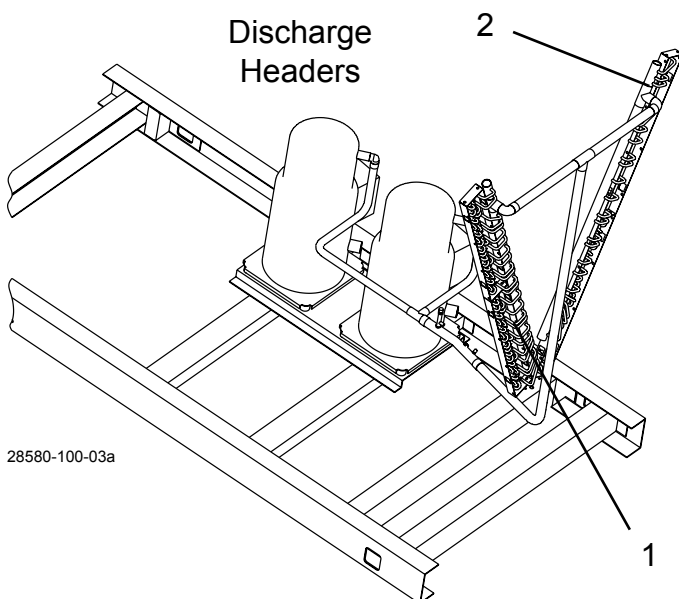
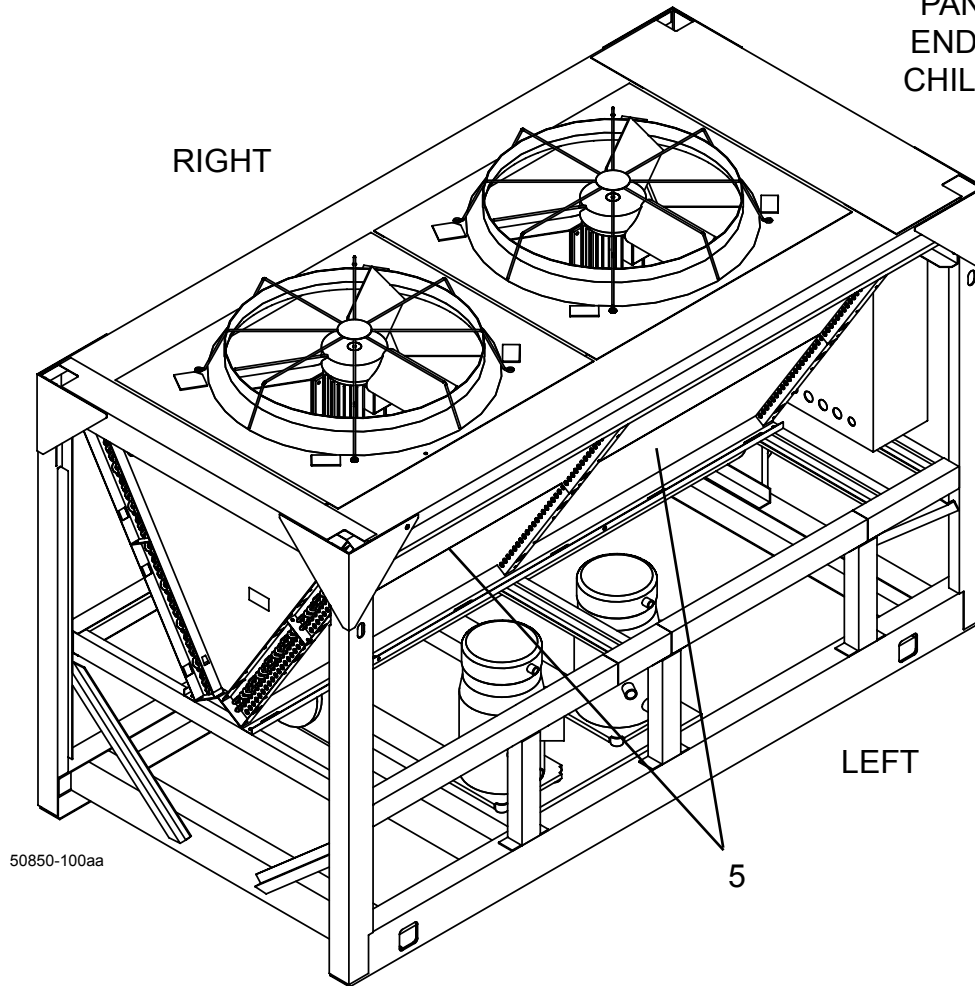


FIG. 1 – CONDENSER COIL COMPONENTS (REF. TABLE 1, PAGE 5)

CONDENSER COIL COMPONENTS (CONT'D)

TABLE 1 – CONDENSER COIL COMPONENTS (SEE FIG. 1, PAGE 4)

ITEM NUMBER	DESCRIPTION	POSITION	QTY	YCUL0016 & YCUL0026	YCUL0030	YCUL0036	YCUL0040
1	Header, Discharge	RH	1	375-31223-000	375-30685-000	375-25897-000	375-25897-000
2	Header, Discharge	LH	1	375-31224-000	375-30686-000	375-25894-000	375-25894-000
3	Header, Liquid	RH	1	375-51203-000* 375-51207-000**	375-51205-000	375-51196-000	375-51196-000
4	Header, Liquid	LH	1	375-51202-000* 375-51206-000**	375-51204-000	375-51197-000	375-51197-000
ALUMINUM FIN COILS							
5	Coil	BOTH	4	375-46182-100	375-46182-200	375-46182-300	375-46182-300
BLACK FIN COILS							
5	Coil	BOTH	4	375-46183-100	375-46183-200	375-46183-300	375-46183-300
PHENOLIC COILS							
5	Coil	BOTH	4	375-46184-100	375-46184-200	375-46184-300	375-46184-300
COPPER COILS							
5	Coil	BOTH	4	375-46185-100	375-46185-200	375-46185-300	375-46185-300

Note: Header left or right position is viewed from power panel end of chiller.

Note: Coils for each circuit are denoted left and right as viewed from the power panel end of chiller.

***Note:** YCUL0016 only.

****Note:** YCUL0026 only.

TABLE 1 (CONT'D) – CONDENSER COIL COMPONENTS (SEE FIG. 1, PAGE 4)

ITEM NUMBER	DESCRIPTION	POSITION	QTY	YCUL0046, 0050, 0056 & YCUL0060	YCUL0066	YCUL0076	YCUL0080, 0084 & YCUL0090
1	Header, Discharge	RH	2	375-30619-000	375-30764-000	375-30662-000	375-45820-000
2	Header, Discharge	LH	2	375-30620-000	375-30765-000	375-30663-000	375-45817-000
3	Header, Liquid	RH	2	375-51200-000	375-51193-000	375-30669-000	375-45813-000
4	Header, Liquid	LH	2	375-30626-000	375-30766-000	375-30668-000	375-45815-000
ALUMINUM FIN COILS							
5	Coil	BOTH	8	375-46182-400	375-46182-500	375-46182-600	375-45259-100
BLACK FIN COILS							
5	Coil	BOTH	8	375-46183-400	375-46183-500	375-46183-600	375-45259-200
PHENOLIC COILS							
5	Coil	BOTH	8	375-46184-400	375-46184-500	375-46184-600	375-45259-300
COPPER COILS							
5	Coil	BOTH	8	375-46185-400	375-46185-500	375-46185-600	375-45259-400


Note: Header left or right position is viewed from power panel end of chiller.

Note: Coils for each circuit are denoted left and right as viewed from the power panel end of chiller.

FAN COMPONENTS

Service Note:

Fan Hub to Shaft Joint should be sealed with protective coating - use RUST VETO 344 - a solvent type, rust preventative coating.

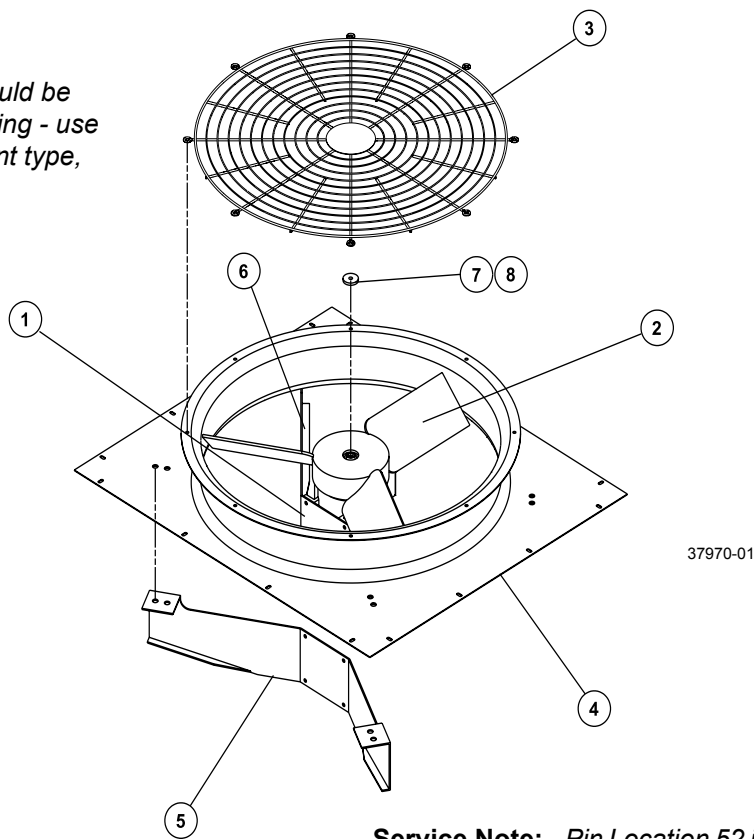

Service Note: Pin Location 52 in Model Number will be "X" for Standard Fan, or "L" for Low Noise Fan. See page 3.

FIG. 2 – FAN COMPONENTS
TABLE 2 – FAN COMPONENTS

ITEM NUMBER	DESCRIPTION	VOLTAGE CODE	FAN TYPE	
			STANDARD 7/8", 1160 RPM	LOW NOISE 7/8", 850 RPM
1 ^s	Motor, Fan 2 HP (YCUL0016-YCUL0090)	-17	024-30900-002	024-30933-002
		-28	024-30900-002	024-30933-002
		-40	024-30900-004	024-30933-004
		-46	024-30900-001	024-30933-001
		-50	024-30900-001	024-30933-001
		-58	024-30900-003	024-30933-003
2 ^s	Blade	All	026-37577-000	026-37579-000
3	Guard	All	026-35605-000	
4	Orifice	All	026-36760-000	
5	Support, Inner	All	075-29060-000	
6	Support, Outer	All	075-29061-000	
7	Screw, Cap (M8x125)	All	021-18494-000	
8	Spacer		075-29007-000	

^s = Recommended Spare Parts

REFRIGERANT PIPING COMPONENTS

CHILLER MODEL YCUL

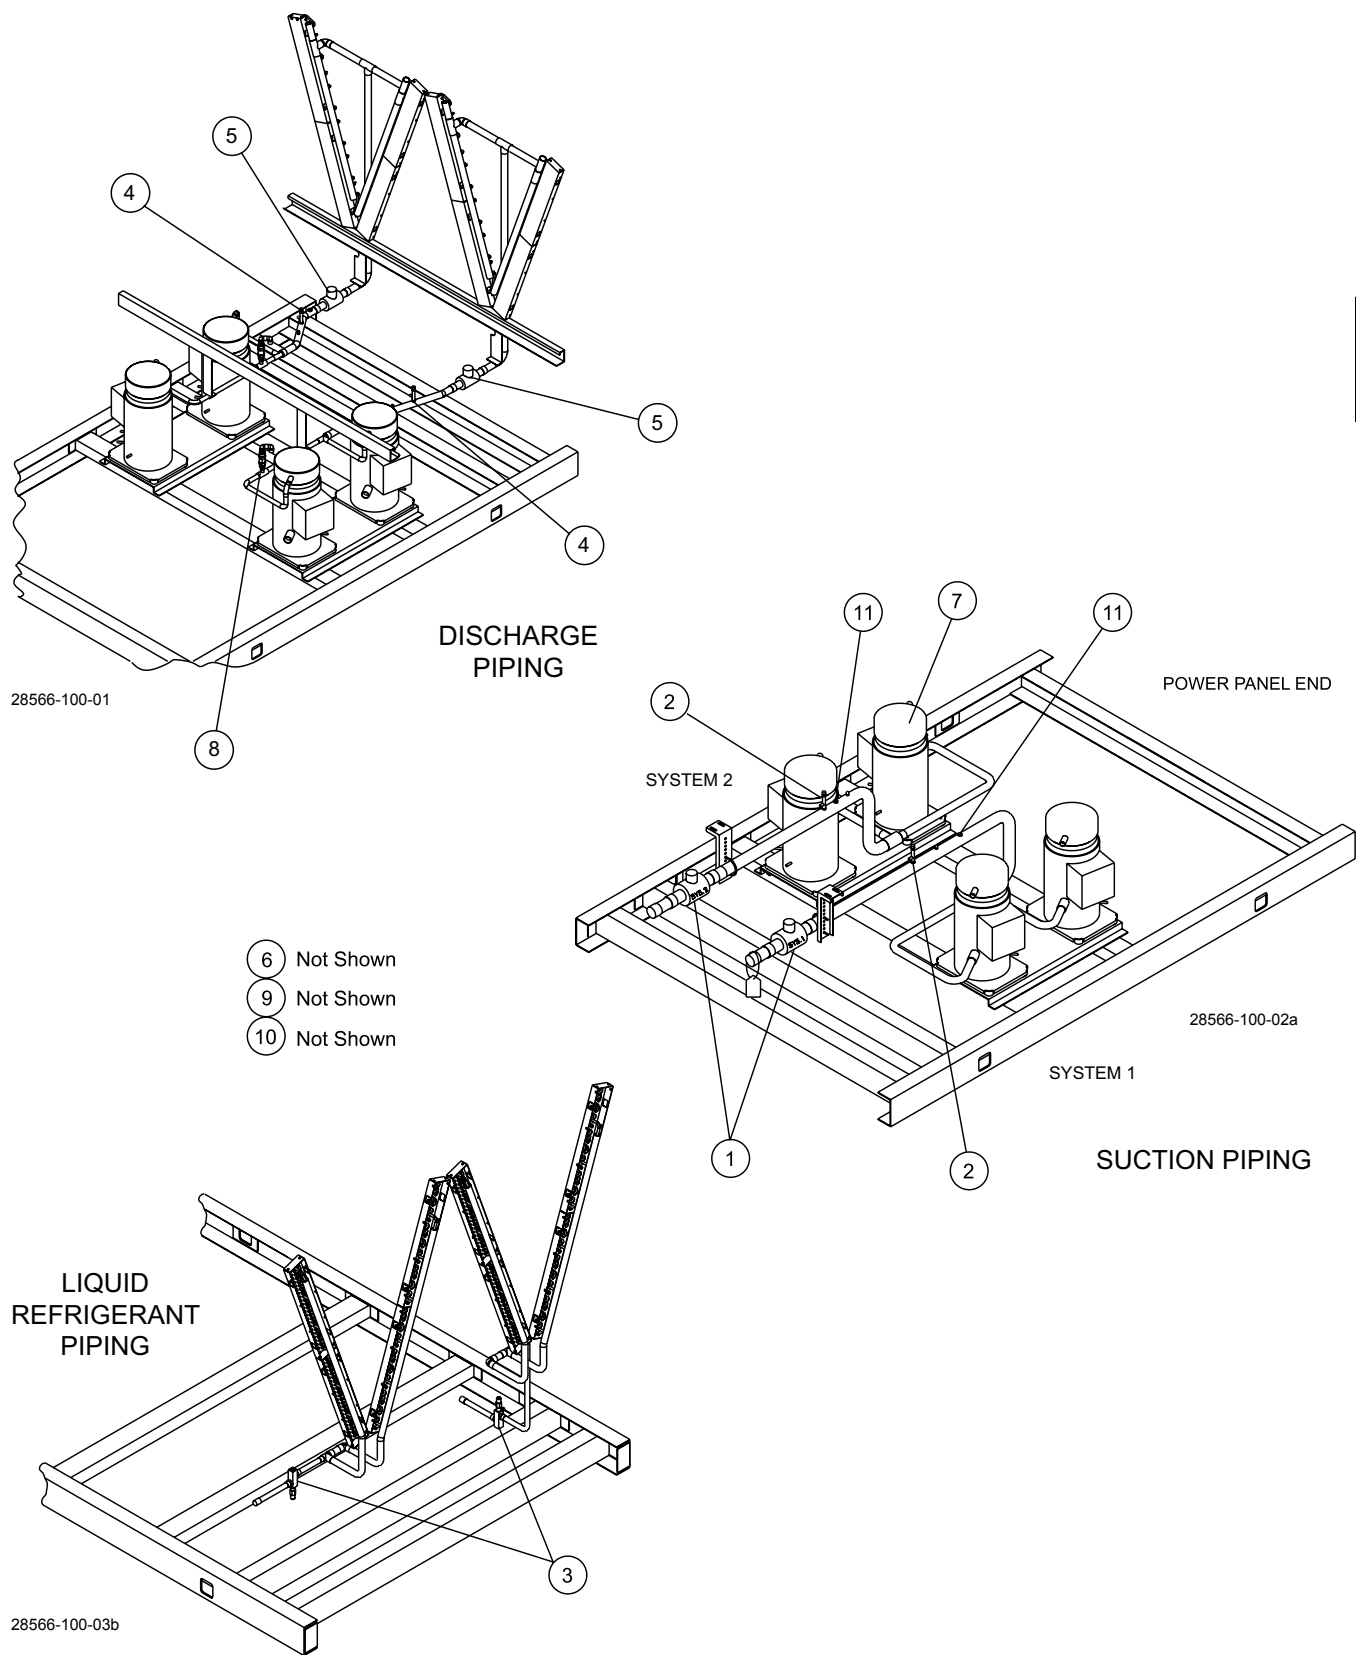


FIG. 3 – REFRIGERANT PIPING COMPONENTS - MODEL YCUL0046 SHOWN
(REF. TABLE 3, PAGES 8 AND 9)

REFRIGERANT PIPING COMPONENTS (CONT'D)

CHILLER MODEL YCUL

TABLE 3 – REFRIGERANT PIPING COMPONENTS
(SEE FIG. 3, PAGE 7)

ITEM NO.	SYS.	DESCRIPTION	YCUL0016 & YCUL0026	YCUL0030	YCUL0036 & YCUL0040
1	1	Valve, Ball (Suction)	022-08883-000	022-09752-000	022-09752-000
2	1	Valve, Shut-Off	022-00009-000	022-00009-000	022-00009-000
3	1	Valve, Liquid Stop	022-02992-000	022-10022-000	022-10022-000
4	1	Valve, Shut-Off	022-00009-000	022-00009-000	022-00009-000
5	1	Valve, Ball (Discharge)	022-09749-000	022-09750-000	022-09750-000
6	1	Insulation, 1 1/8"	010-02841-000	N/A	N/A
		Insulation, 1 3/8"	010-02848-000	N/A	N/A
		Insulation, 1 5/8"	010-03628-000	010-03628-000	010-03628-000
		Insulation, 2 1/8"	N/A	010-02842-000	010-02842-000
7	1	Compressor	See pages 12 and 13		
8	1	Valve, Relief	022-08863-000	022-08863-000	022-08863-000
9	1	Dehydrator	026-36510-000	026-36510-000	026-30598-000
10^s	1	Core, Dehydrator	N/A	N/A	026-18328-000
11	1	Moisture Indicator	026-15305-000	026-15305-000	026-15305-000

^s = Recommended Spare Parts

REFRIGERANT PIPING COMPONENTS (CONT'D)

CHILLER MODEL YCUL

TABLE 3 (CONT'D) – REFRIGERANT PIPING COMPONENTS
(SEE FIG. 3, PAGE 7)

ITEM NO.	SYS.	DESCRIPTION	YCUL0046, 0050, 0056 & YCUL0060	YCUL0066, 0076, 0080 & YCUL0086	YCUL0090
1	Both	Valve, Ball (Suction)	022-09752-000	022-09752-000	022-09753-000
2	Both	Valve, Shut-Off	022-00009-000	022-00009-000	022-00009-000
3	Both	Valve, Liquid Stop	022-10022-000	022-10022-000	022-10022-000
4	Both	Valve, Shut-Off	022-00009-000	022-00009-000	022-00009-000
5	Both	Valve, Ball (Discharge)	022-09750-000	022-08883-000	022-08883-000
6	Both	Insulation, 1 3/8"	010-02848-000	010-02848-000	N/A
		Insulation, 1 5/8"	010-03628-000	010-03628-000	010-03628-000
		Insulation, 2 1/8"	010-02842-000	010-02842-000	010-02842-000
7	Both	Compressor	See pages 12 and 13		
8	Both	Valve, Relief	022-08863-000	022-08882-000	022-08882-000
9	Both	Dehydrator	026-30598-000	026-36759-000	026-36759-000
10^s	Both	Core, Dehydrator	026-18328-000	026-18328-000	026-18328-000
11	Both	Moisture Indicator	026-15305-000	026-32397-000	026-32397-000
				026-32800-000	026-32800-000

Piping

COMPRESSOR

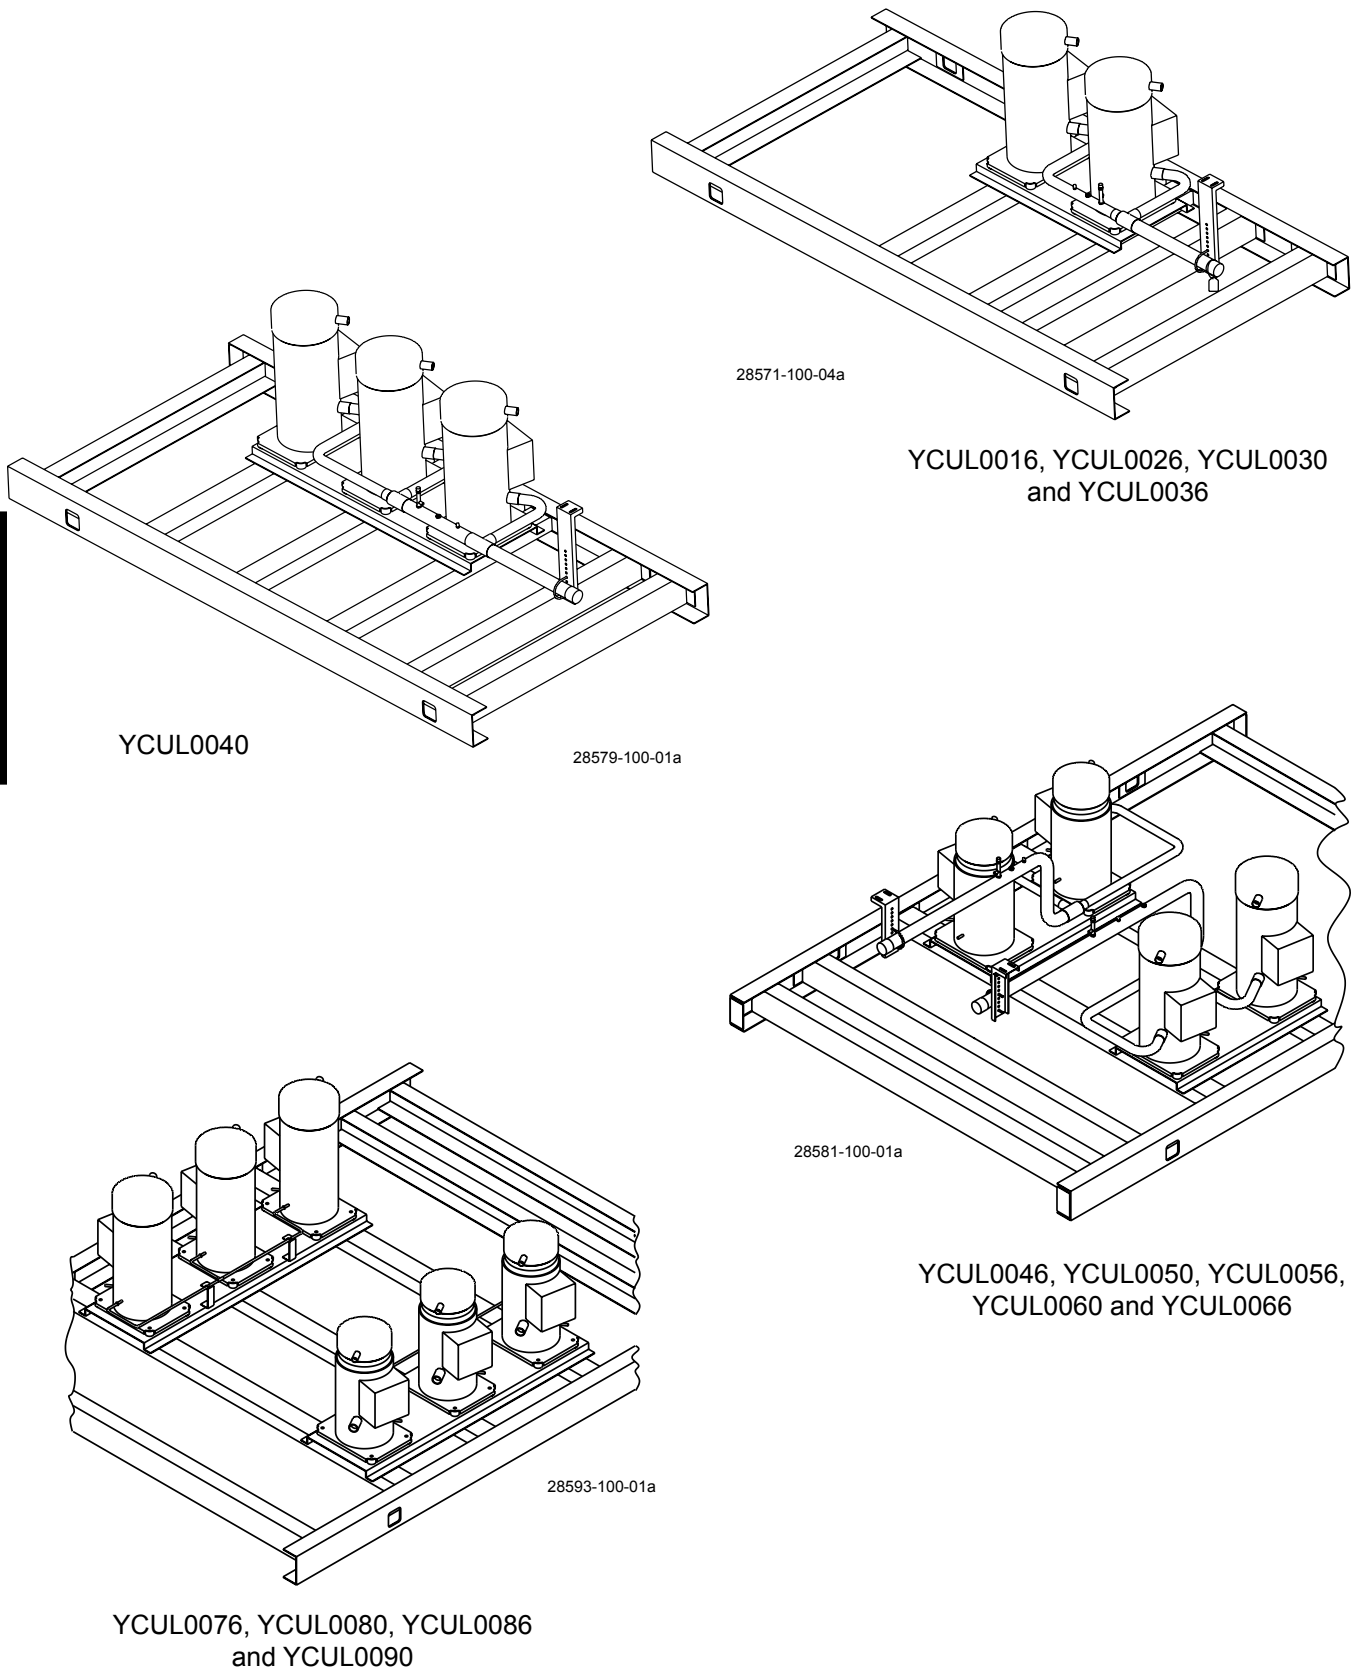


FIG. 5 – COMPRESSOR LAYOUTS (REF. TABLES 4, 4A AND 4B, PAGES 11 - 15)

COMPRESSOR (CONT'D)

TABLE 4A – COMPRESSOR OIL TYPE

ITEM	REF.	DESCRIPTION	1 GALLON	5 GALLON
OIL^s	R-22	Oil, Type 'F' (Mineral)	—	011-00434-000
	R-407C	Oil, Type 'V'	011-00948-000	011-00949-000

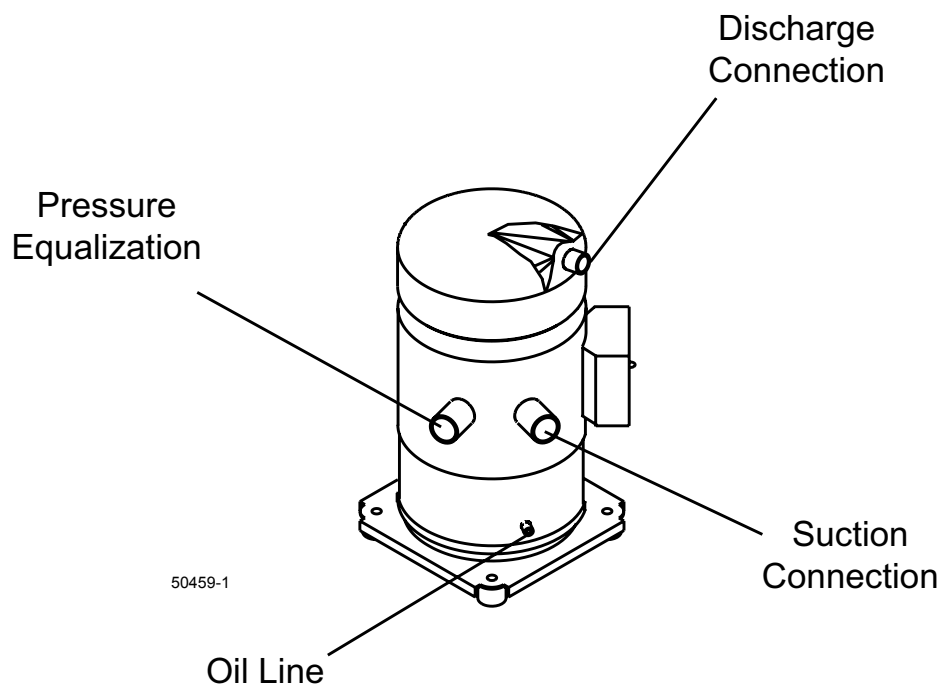
^s = Recommended Spare Parts

TABLE 4B – HEATER AND ISOLATOR KIT PART NUMBERS

COMPRESSOR MODEL	COMPRESSOR PART NUMBER	HEATER PART NUMBER	ISOLATOR KIT PART NUMBER
ZR90K3	015-02895-1xx	025-37888-000	328-15080-001
ZR12M3	015-02896-1xx		
ZR16M3	015-02897-1xx		
ZR19M3	015-02894-1xx		
ZR90K3E	015-02895-3xx		
ZR12M3E	015-02896-3xx		
ZR16M3E	015-02897-3xx		
ZR19M3E	015-02894-3xx		

Compressor

ITEM	REF. NO.	DESCRIPTION	YORK NO.
A	071-0520-05	Module Protector, Copeland	025-38995-000
B	005-0892-00	Cover, T-Box	025-38996-000
C	052-1201-00	Label, Wiring Diagram	035-19345-000


FIG. 5A – COMPRESSOR (REF. TABLE 4, 4A AND 4B, PAGES 11 - 15)

COMPRESSOR (CONT'D)

TABLE 4 – COMPRESSOR PART NUMBERS - R-22
(SEE FIGS. 5 AND 5A, PAGE 10 AND 11)

R-22

MODEL	VOLTAGE CODE	SYSTEM #1 COMPRESSOR			SYSTEM #2 COMPRESSOR		
		PART #	MODEL #	QTY	PART #	MODEL #	QTY
YCUL0016	-17	015-02895-101	ZR90K3	2	N/A	N/A	N/A
	-28	015-02895-101	ZR90K3	2	N/A	N/A	N/A
	-40	015-02895-102	ZR90K3	2	N/A	N/A	N/A
	-46	015-02895-104	ZR90K3	2	N/A	N/A	N/A
	-58	015-02895-105	ZR90K3	2	N/A	N/A	N/A
YCUL0026	-17	015-02896-101	ZR12M3	2	N/A	N/A	N/A
	-28	015-02896-101	ZR12M3	2	N/A	N/A	N/A
	-40	015-02896-102	ZR12M3	2	N/A	N/A	N/A
	-46	015-02896-104	ZR12M3	2	N/A	N/A	N/A
	-58	015-02896-105	ZR12M3	2	N/A	N/A	N/A
YCUL0030	-17	015-02897-101	ZR16M3	2	N/A	N/A	N/A
	-28	015-02897-101	ZR16M3	2	N/A	N/A	N/A
	-40	015-02897-102	ZR16M3	2	N/A	N/A	N/A
	-46	015-02897-104	ZR16M3	2	N/A	N/A	N/A
	-58	015-02897-105	ZR16M3	2	N/A	N/A	N/A
YCUL0036	-17	015-02894-101	ZR19M3	2	N/A	N/A	N/A
	-28	015-02894-101	ZR19M3	2	N/A	N/A	N/A
	-40	015-02894-102	ZR19M3	2	N/A	N/A	N/A
	-46	015-02894-104	ZR19M3	2	N/A	N/A	N/A
	-58	015-02894-105	ZR19M3	2	N/A	N/A	N/A
YCUL0040	-17	015-02897-101	ZR16M3	3	N/A	N/A	N/A
	-28	015-02897-101	ZR16M3	3	N/A	N/A	N/A
	-40	015-02897-102	ZR16M3	3	N/A	N/A	N/A
	-46	015-02897-104	ZR16M3	3	N/A	N/A	N/A
	-58	015-02897-105	ZR16M3	3	N/A	N/A	N/A
YCUL0046	-17	015-02896-101	ZR12M3	2	015-02896-101	ZR12M3	2
	-28	015-02896-101	ZR12M3	2	015-02896-101	ZR12M3	2
	-40	015-02896-102	ZR12M3	2	015-02896-102	ZR12M3	2
	-46	015-02896-104	ZR12M3	2	015-02896-104	ZR12M3	2
	-58	015-02896-105	ZR12M3	2	015-02896-105	ZR12M3	2
YCUL0050	-17	015-02897-101	ZR16M3	2	015-02896-101	ZR12M3	2
	-28	015-02897-101	ZR16M3	2	015-02896-101	ZR12M3	2
	-40	015-02897-102	ZR16M3	2	015-02896-102	ZR12M3	2
	-46	015-02897-104	ZR16M3	2	015-02896-104	ZR12M3	2
	-58	015-02897-105	ZR16M3	2	015-02896-105	ZR12M3	2

COMPRESSOR (CONT'D)

TABLE 4 (CONT'D) – COMPRESSOR PART NUMBERS - R-22
(SEE FIGS. 5 AND 5A, PAGE 10 AND 11)

R-22

MODEL	VOLTAGE CODE	SYSTEM #1 COMPRESSOR			SYSTEM #2 COMPRESSOR		
		PART #	MODEL #	QTY	PART #	MODEL #	QTY
YCUL0056	-17	015-02897-101	ZR16M3	2	015-02897-101	ZR16M3	2
	-28	015-02897-101	ZR16M3	2	015-02897-101	ZR16M3	2
	-40	015-02897-102	ZR16M3	2	015-02897-102	ZR16M3	2
	-46	015-02897-104	ZR16M3	2	015-02897-104	ZR16M3	2
	-58	015-02897-105	ZR16M3	2	015-02897-105	ZR16M3	2
YCUL0060	-17	015-02894-101	ZR19M3	2	015-02897-101	ZR16M3	2
	-28	015-02894-101	ZR19M3	2	015-02897-101	ZR16M3	2
	-40	015-02894-102	ZR19M3	2	015-02897-102	ZR16M3	2
	-46	015-02894-104	ZR19M3	2	015-02897-104	ZR16M3	2
	-58	015-02894-105	ZR19M3	2	015-02897-105	ZR16M3	2
YCUL0066	-17	015-02894-101	ZR19M3	2	015-02894-101	ZR19M3	2
	-28	015-02894-101	ZR19M3	2	015-02894-101	ZR19M3	2
	-40	015-02894-102	ZR19M3	2	015-02894-102	ZR19M3	2
	-46	015-02894-104	ZR19M3	2	015-02894-104	ZR19M3	2
	-58	015-02894-105	ZR19M3	2	015-02894-105	ZR19M3	2
YCUL0076	-17	015-02897-101	ZR16M3	3	015-02896-101	ZR12M3	3
	-28	015-02897-101	ZR16M3	3	015-02896-101	ZR12M3	3
	-40	015-02897-102	ZR16M3	3	015-02896-102	ZR12M3	3
	-46	015-02897-104	ZR16M3	3	015-02896-104	ZR12M3	3
	-58	015-02897-105	ZR16M3	3	015-02896-105	ZR12M3	3
YCUL0080	-17	015-02897-101	ZR16M3	3	015-02897-101	ZR16M3	3
	-28	015-02897-101	ZR16M3	3	015-02897-101	ZR16M3	3
	-40	015-02897-102	ZR16M3	3	015-02897-102	ZR16M3	3
	-46	015-02897-104	ZR16M3	3	015-02897-104	ZR16M3	3
	-58	015-02897-105	ZR16M3	3	015-02897-104	ZR16M3	3
YCUL0086	-17	015-02894-101	ZR19M3	3	015-02897-101	ZR16M3	3
	-28	015-02894-101	ZR19M3	3	015-02897-101	ZR16M3	3
	-40	015-02894-102	ZR19M3	3	015-02897-102	ZR16M3	3
	-46	015-02894-104	ZR19M3	3	015-02897-104	ZR16M3	3
	-58	015-02894-105	ZR19M3	3	015-02897-105	ZR16M3	3
YCUL0090	-17	015-02894-101	ZR19M3	3	015-02894-101	ZR19M3	3
	-28	015-02894-101	ZR19M3	3	015-02894-101	ZR19M3	3
	-40	015-02894-102	ZR19M3	3	015-02894-102	ZR19M3	3
	-46	015-02894-104	ZR19M3	3	015-02894-104	ZR19M3	3
	-58	015-02894-105	ZR19M3	3	015-02894-105	ZR19M3	3

Compressor

COMPRESSOR (CONT'D)

TABLE 4 – COMPRESSOR PART NUMBERS - R-407C
(SEE FIGS. 5 AND 5A, PAGE 10 AND 11)

R-407C

MODEL	VOLTAGE CODE	SYSTEM #1 COMPRESSOR			SYSTEM #2 COMPRESSOR		
		PART #	MODEL #	QTY	PART #	MODEL #	QTY
YCUL0016	-17	015-02895-301	ZR90K3E	2	N/A	N/A	N/A
	-28	015-02895-301	ZR90K3E	2	N/A	N/A	N/A
	-40	015-02895-302	ZR90K3E	2	N/A	N/A	N/A
	-46	015-02895-304	ZR90K3E	2	N/A	N/A	N/A
	-58	015-02895-305	ZR90K3E	2	N/A	N/A	N/A
YCUL0026	-17	015-02896-301	ZR12M3E	2	N/A	N/A	N/A
	-28	015-02896-301	ZR12M3E	2	N/A	N/A	N/A
	-40	015-02896-302	ZR12M3E	2	N/A	N/A	N/A
	-46	015-02896-304	ZR12M3E	2	N/A	N/A	N/A
	-58	015-02896-305	ZR12M3E	2	N/A	N/A	N/A
YCUL0030	-17	015-02897-301	ZR16M3E	2	N/A	N/A	N/A
	-28	015-02897-301	ZR16M3E	2	N/A	N/A	N/A
	-40	015-02897-302	ZR16M3E	2	N/A	N/A	N/A
	-46	015-02897-304	ZR16M3E	2	N/A	N/A	N/A
	-58	015-02897-305	ZR16M3E	2	N/A	N/A	N/A
YCUL0036	-17	015-02894-301	ZR19M3E	2	N/A	N/A	N/A
	-28	015-02894-301	ZR19M3E	2	N/A	N/A	N/A
	-40	015-02894-302	ZR19M3E	2	N/A	N/A	N/A
	-46	015-02894-304	ZR19M3E	2	N/A	N/A	N/A
	-58	015-02894-305	ZR19M3E	2	N/A	N/A	N/A
YCUL0040	-17	015-02897-301	ZR16M3E	3	N/A	N/A	N/A
	-28	015-02897-301	ZR16M3E	3	N/A	N/A	N/A
	-40	015-02897-302	ZR16M3E	3	N/A	N/A	N/A
	-46	015-02897-304	ZR16M3E	3	N/A	N/A	N/A
	-58	015-02897-305	ZR16M3E	3	N/A	N/A	N/A
YCUL0046	-17	015-02896-301	ZR12M3E	2	015-02896-301	ZR12M3E	2
	-28	015-02896-301	ZR12M3E	2	015-02896-301	ZR12M3E	2
	-40	015-02896-302	ZR12M3E	2	015-02896-302	ZR12M3E	2
	-46	015-02896-304	ZR12M3E	2	015-02896-304	ZR12M3E	2
	-58	015-02896-305	ZR12M3E	2	015-02896-305	ZR12M3E	2
YCUL0050	-17	015-02897-301	ZR16M3E	2	015-02896-301	ZR12M3E	2
	-28	015-02897-301	ZR16M3E	2	015-02896-301	ZR12M3E	2
	-40	015-02897-302	ZR16M3E	2	015-02896-302	ZR12M3E	2
	-46	015-02897-304	ZR16M3E	2	015-02896-304	ZR12M3E	2
	-58	015-02897-305	ZR16M3E	2	015-02896-305	ZR12M3E	2

COMPRESSOR (CONT'D)

TABLE 4 (CONT'D) – COMPRESSOR PART NUMBERS - R-407C
(SEE FIGS. 5 AND 5A, PAGE 10 AND 11)

R-407C

MODEL	VOLTAGE CODE	SYSTEM #1 COMPRESSOR			SYSTEM #2 COMPRESSOR		
		PART #	MODEL #	QTY	PART #	MODEL #	QTY
YCUL0056	-17	015-02897-301	ZR16M3E	2	015-02897-301	ZR16M3E	2
	-28	015-02897-301	ZR16M3E	2	015-02897-301	ZR16M3E	2
	-40	015-02897-302	ZR16M3E	2	015-02897-302	ZR16M3E	2
	-46	015-02897-304	ZR16M3E	2	015-02897-304	ZR16M3E	2
	-58	015-02897-305	ZR16M3E	2	015-02897-305	ZR16M3E	2
YCUL0060	-17	015-02894-301	ZR19M3E	2	015-02897-301	ZR16M3E	2
	-28	015-02894-301	ZR19M3E	2	015-02897-301	ZR16M3E	2
	-40	015-02894-302	ZR19M3E	2	015-02897-302	ZR16M3E	2
	-46	015-02894-304	ZR19M3E	2	015-02897-304	ZR16M3E	2
	-58	015-02894-305	ZR19M3E	2	015-02897-305	ZR16M3E	2
YCUL0066	-17	015-02894-301	ZR19M3E	2	015-02894-301	ZR19M3E	2
	-28	015-02894-301	ZR19M3E	2	015-02894-301	ZR19M3E	2
	-40	015-02894-302	ZR19M3E	2	015-02894-302	ZR19M3E	2
	-46	015-02894-304	ZR19M3E	2	015-02894-304	ZR19M3E	2
	-58	015-02894-305	ZR19M3E	2	015-02894-305	ZR19M3E	2
YCUL0076	-17	015-02897-301	ZR16M3E	3	015-02896-301	ZR12M3E	3
	-28	015-02897-301	ZR16M3E	3	015-02896-301	ZR12M3E	3
	-40	015-02897-302	ZR16M3E	3	015-02896-302	ZR12M3E	3
	-46	015-02897-304	ZR16M3E	3	015-02896-304	ZR12M3E	3
	-58	015-02897-305	ZR16M3E	3	015-02896-305	ZR12M3E	3
YCUL0080	-17	015-02897-301	ZR16M3E	3	015-02897-301	ZR16M3E	3
	-28	015-02897-301	ZR16M3E	3	015-02897-301	ZR16M3E	3
	-40	015-02897-302	ZR16M3E	3	015-02897-302	ZR16M3E	3
	-46	015-02897-304	ZR16M3E	3	015-02897-304	ZR16M3E	3
	-58	015-02897-305	ZR16M3E	3	015-02897-304	ZR16M3E	3
YCUL0086	-17	015-02894-301	ZR19M3E	3	015-02897-301	ZR16M3E	3
	-28	015-02894-301	ZR19M3E	3	015-02897-301	ZR16M3E	3
	-40	015-02894-302	ZR19M3E	3	015-02897-302	ZR16M3E	3
	-46	015-02894-304	ZR19M3E	3	015-02897-304	ZR16M3E	3
	-58	015-02894-305	ZR19M3E	3	015-02897-305	ZR16M3E	3
YCUL0090	-17	015-02894-301	ZR19M3E	3	015-02894-301	ZR19M3E	3
	-28	015-02894-301	ZR19M3E	3	015-02894-301	ZR19M3E	3
	-40	015-02894-302	ZR19M3E	3	015-02894-302	ZR19M3E	3
	-46	015-02894-304	ZR19M3E	3	015-02894-304	ZR19M3E	3
	-58	015-02894-305	ZR19M3E	3	015-02894-305	ZR19M3E	3

Compressor



FIG. 6 – CONTROL PANEL COMPONENTS (REF. TABLE 5, PAGE 17)

CONTROL PANEL COMPONENTS (CONT'D)

TABLE 5 – CONTROL PANEL COMPONENTS
(SEE FIG. 6, PAGE 16)


Item No.	Qty.	Description	Common Parts
2	1	Transformer (115/24V)	025-30889-000
4	2	Transformer (4T & 5T)	025-27911-000
5	1	Transformer (3T)	025-18452-000
6	1	Bridge Rectifier	031-02201-000
7	1	Remote Current Reset	031-00814-000
5A^s	1	Micro Board	031-02050-001
5B^s	1	EPROM	031-02049-001
10A	1	Fuse Holder	025-34484-000
10B^s	1	Fuse - 12amp	025-38360-000
13	1	Relay, EEV	031-02092-000

^s Recommended Spare Part

LUG KITS TABLE

Circuit Breakers		Wire Size	YORK Lug Kit Part Number
024-31852-000	S3H035TW	#14AWG-#2 AWG	025-34477-000
024-31837-000	S3H040TW		
024-31838-000	S3H050TW		
024-31839-000	S3H060TW		
024-31840-000	S3H070TW	#14AWG-#1/0 AWG	025-34478-000
024-31841-000	S3H080TW		
024-31842-000	S3H090TW		
024-31843-000	S3H100TW		
024-31844-000	S3H125TW	(1) 2-4/0 AWG	025-34479-000
024-31649-000	S3H150TW		
024-31820-000	S3H175TW	#14AWG-300KCMIL AWG	025-34480-000
024-31851-000	S3H200TW		
024-31819-000	S3H225TW		
025-34419-000	S4H250BW	#6AWG-350KCMIL AWG	025-34418-000
024-34424-000	S5H400BW	(1) 250-500KCMIL AWG	025-34481-000
Non-Fused Disconnect Switch		Wire Size	YORK Part Number
024-31888-000	S3H150DW	(1) 2-4/0 AWG	025-34479-000
024-31871-000	S3B225DW	#14AWG-300KCMIL AWG	025-34480-000
024-30963-000	S4H250DW	#6AWG-350KCMIL AWG	025-34418-000
024-30964-000	S5H400DW	(1) 250-500KCMIL AWG	025-34481-000


POWER PANEL COMPONENTS

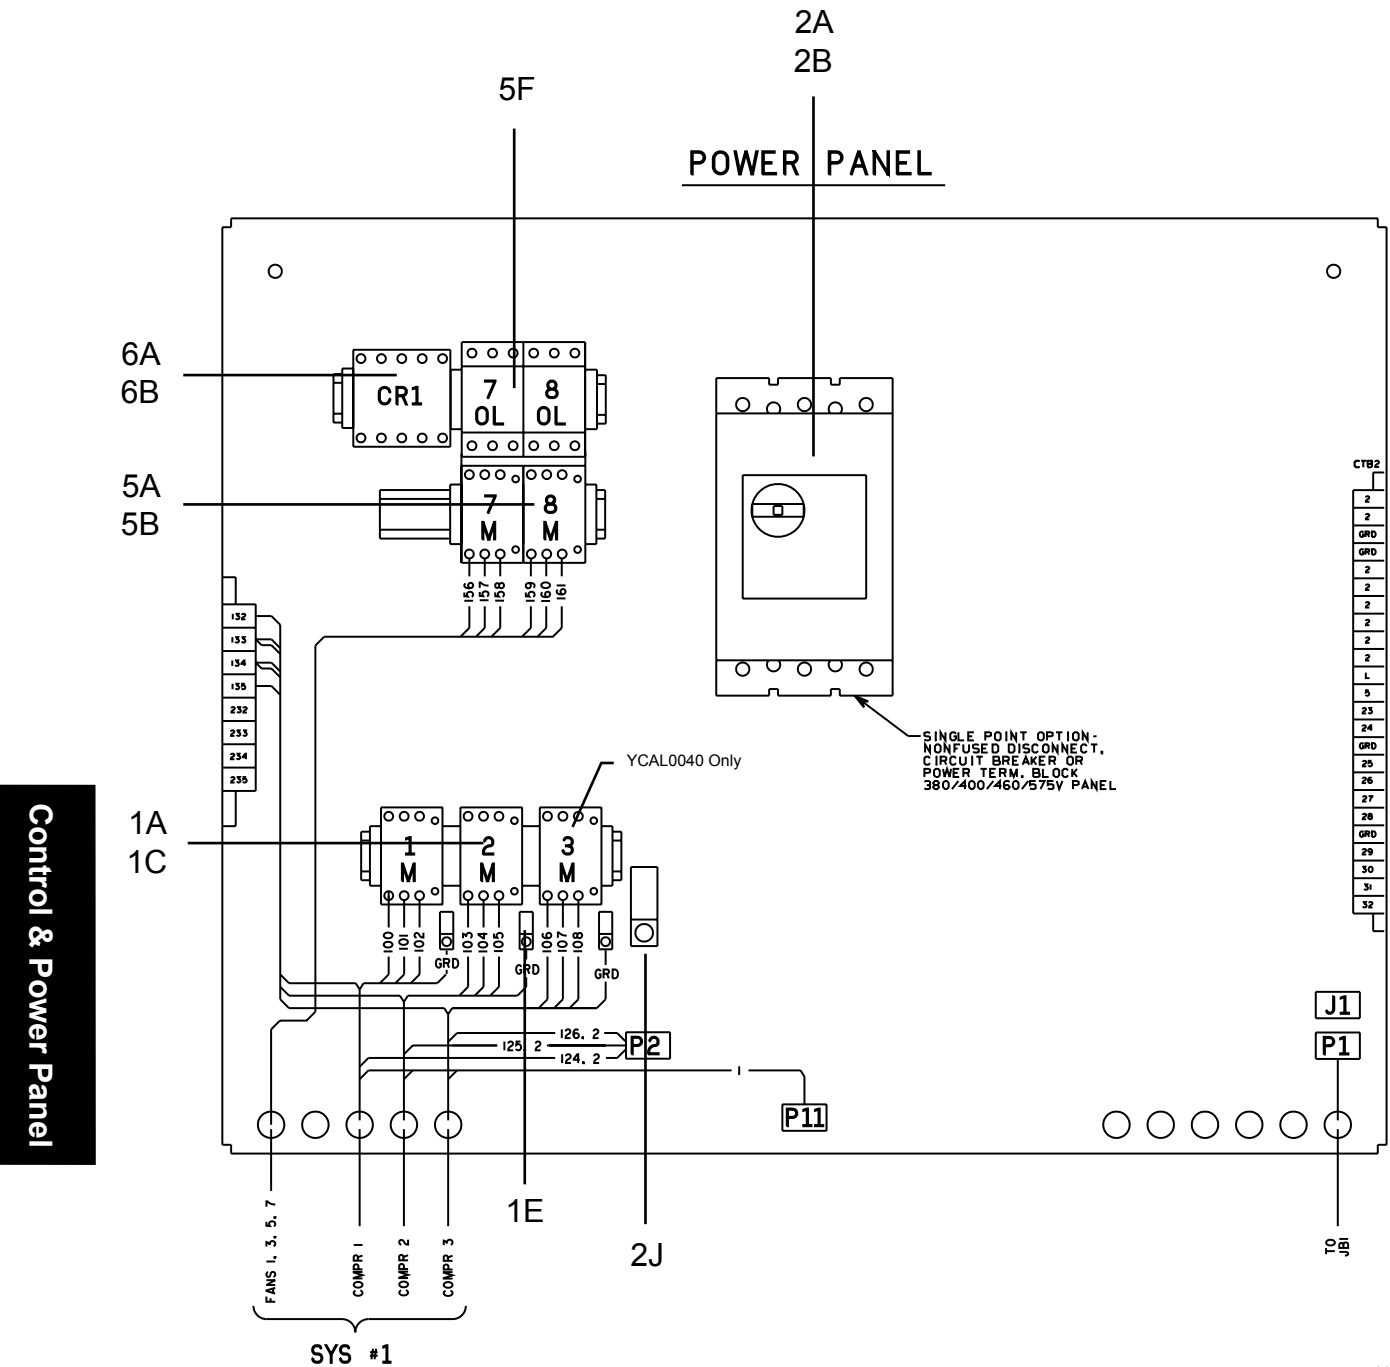

44512-3e

FIG. 7 – POWER PANEL COMPONENTS - YCUL0016 THRU YCUL0040 SHOWN
(REF. TABLE 6, PAGES 22-67)

POWER PANEL COMPONENTS

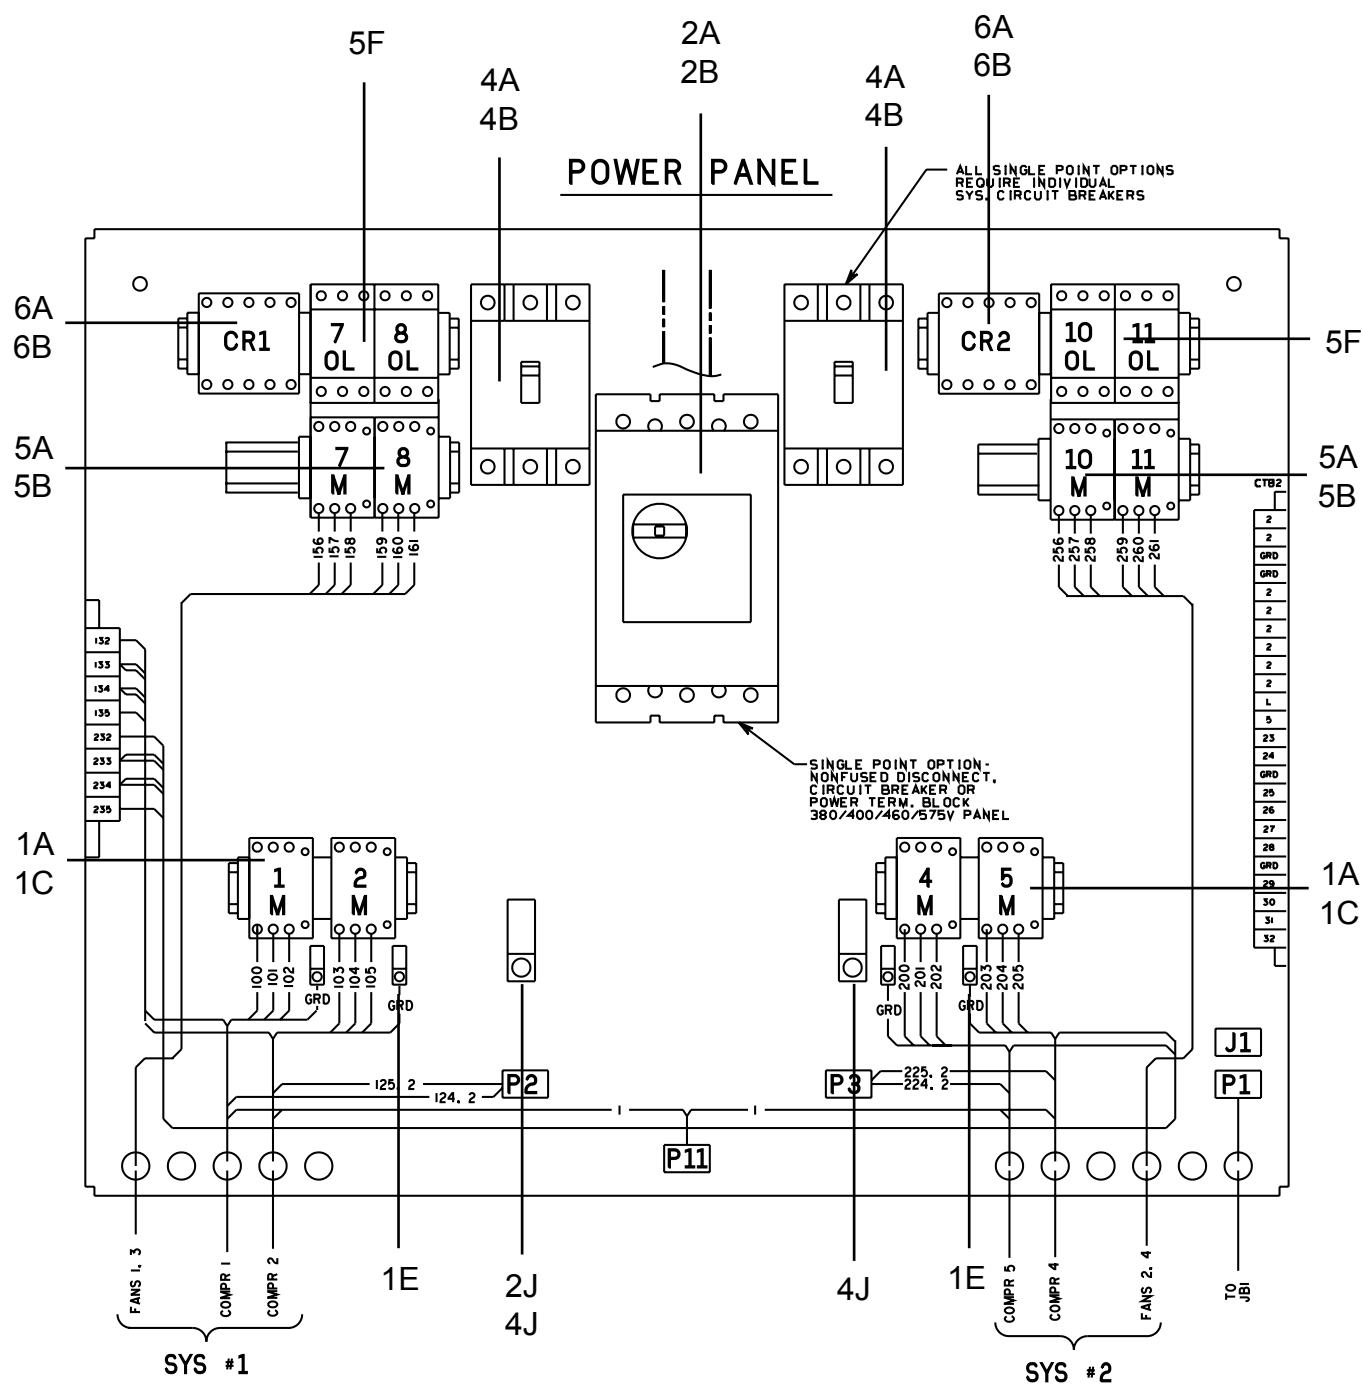
Control & Power Panel

44512-3f

FIG. 8 – POWER PANEL COMPONENTS - YCUL0046 THRU YCUL0066 SHOWN (REF. TABLE 6, PAGES 22-67)

POWER PANEL COMPONENTS



FIG. 9 – POWER PANEL COMPONENTS - YCUL0076 THRU YCUL0090 SHOWN (REF. TABLE 6, PAGES 22-67)

POWER PANEL COMPONENTS



FIG. 10 – PANEL NUMBER STICKER LOCATION (REF. TABLE 6, PAGES 22-67)

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0016-17, YCUL0016-28 & YCUL0016-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0016-17 & YCUL0016-28			YCUL0016-40		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker
1A	2	Compressor Contactor (Sys 1)	*371-04151-426	*371-04151-526	*371-04151-626	*371-04151-441	*371-04151-541	*371-04151-631
1C	2	Surge Suppressor	024-31813-000	024-31813-000	024-31813-000	024-31818-000	024-31818-000	024-31818-000
1E	2	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
2A	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A
	1	SP Circuit Breaker	N/A	N/A	024-31843-000	N/A	N/A	024-31838-000
2B	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000
	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000
2J	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000
	1	Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34455-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5BS	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34302-000	024-34302-000	024-34302-000
5FS	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0016-46 & YCUL0016-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0016-46			YCUL0016-58		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker
1A	2	Compressor Contactor (Sys 1)	*371-04151-441	*371-04151-541	*371-04151-641	*371-04151-451	*371-04151-551	*371-04151-651
1C	2	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000	024-31817-000
1E	2	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
2A	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A
	1	SP Circuit Breaker	N/A	N/A	024-31837-000	N/A	N/A	024-31852-000
2B	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000
	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000
2J	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000
	1	Ground Lug	025-34455-000	025-34088-000	025-34455-000	025-34455-000	025-34088-000	025-34455-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5BS	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5FS	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0026-17, YCUL0026-28 & YCUL0026-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0026-17 & YCUL0026-28				YCUL0026-40		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	
			*371-04151-422	*371-04151-522	*371-04151-627	*371-04151-441	*371-04151-541	*371-04151-642	
1A	2	Compressor Contactor (Sys 1)	024-31106-000	024-31106-000	024-31106-000	024-31818-000	024-31818-000	024-31818-000	
1C	2	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000	031-02202-000	
1E	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	
2A	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A	
	1	SP Circuit Breaker	N/A	N/A	024-31844-000	N/A	N/A	024-31839-000	
2B	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A	
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000	
	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000	
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000	
2J	1	Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34455-000	
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	
5BS	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34302-000	024-34302-000	024-34302-000	
5FS	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33169-000	024-33169-000	024-33169-000	
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0026-46 & YCUL0026-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0026-46			YCUL0026-58		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker
1A	2	Compressor Contactor (Sys 1)	*371-04151-441	*371-04151-541	*371-04151-642	*371-04151-451	*371-04151-551	*371-04151-652
1C	2	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000	024-31817-000
1E	2	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A
2A	1	SP Circuit Breaker	N/A	N/A	024-31839-000	N/A	N/A	024-31837-000
	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000
2B	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000
2J	1	Ground Lug	025-34455-000	025-34088-000	025-34455-000	025-34455-000	025-34088-000	025-34455-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5BS	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5FS	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0030-17, YCUL0030-28 & YCUL0030-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0030-17 & YCUL0030-28				YCUL0030-40		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	
			*371-04151-428	*371-04151-523	*371-04151-623	*371-04151-441	*371-04151-533	*371-04151-633	
1A	2	Compressor Contactor (Sys 1)	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000	024-31818-000	
1C	2	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000	031-02202-000	
1E	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	
2A	3	SP Terminal Block	025-38363-000	N/A	N/A	025-38358-000	N/A	N/A	
	1	SP Circuit Breaker	N/A	N/A	024-31649-000	N/A	N/A	024-31841-000	
2B	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A	
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000	
	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000	
2J	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000	
	1	Ground Lug	025-34088-000	025-34089-000	025-34089-000	025-34455-000	025-34088-000	025-34088-000	
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	
5BS	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34302-000	024-34302-000	024-34302-000	
5FS	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33169-000	024-33169-000	024-33169-000	
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0030-46 & YCUL0030-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0030-46			YCUL0030-58		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker
1A	2	Compressor Contactor (Sys 1)	*371-04151-441	*371-04151-541	*371-04151-643	*371-04151-451	*371-04151-551	*371-04151-653
1C	2	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000	024-31817-000
1E	2	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
	2		025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A
2A	1	SP Circuit Breaker	N/A	N/A	024-31840-000	N/A	N/A	024-31838-000
	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000
2B	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000
2J	1	Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34455-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5BS	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5FS	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0036-17, YCUL0036-28 & YCUL0036-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0036-17 & YCUL0036-28				YCUL0036-40		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	
			*371-04151-424	*371-04151-524	*371-04151-629	*371-04151-434	*371-04151-534	*371-04151-634	
1A	2	Compressor Contactor (Sys 1)	024-31640-000	024-31640-000	024-31640-000	024-31813-000	024-31813-000	024-31813-000	
1C	2	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000	031-02202-000	
1E	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	
2A	3	SP Terminal Block	025-38363-000	N/A	N/A	025-38358-000	N/A	N/A	
	1	SP Circuit Breaker	N/A	N/A	024-31820-000	N/A	N/A	024-31843-000	
	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A	
2B	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000	
	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000	
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000	
2J	1	Ground Lug	025-34088-000	025-34089-000	025-34089-000	025-34455-000	025-34088-000	025-34088-000	
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	
5BS	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34302-000	024-34302-000	024-34302-000	
5FS	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33169-000	024-33169-000	024-33169-000	
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0036-46 & YCUL0036-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0036-46			YCUL0036-58		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker
1A	2	Compressor Contactor (Sys 1)	*371-04151-441	*371-04151-533	*371-04151-633	*371-04151-451	*371-04151-551	*371-04151-654
1C	2	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000	024-31817-000
1E	2	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A
2A	1	SP Circuit Breaker	N/A	N/A	024-31841-000	N/A	N/A	024-31839-000
	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000
2B	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000
2J	1	Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34455-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5BS	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5FS	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0040-17, YCUL0040-28 & YCUL0040-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0040-17 & YCUL0040-28				YCUL0040-40		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	
			*371-04151-429	*371-04151-525	*371-04151-625	*371-04151-435	*371-04151-535	*371-04151-639	
1A	3	Compressor Contactor (Sys 1)	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000	024-31818-000	
1C	3	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000	031-02202-000	
1E	3	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	
2A	3	SP Terminal Block	025-38364-000	N/A	N/A	025-38358-000	N/A	N/A	
	1	SP Circuit Breaker	N/A	N/A	024-31851-000	N/A	N/A	024-31844-000	
2B	1	SP Non-Fused Disc. Switch	N/A	024-31871-000	N/A	N/A	024-31888-000	N/A	
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000	
	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000	
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000	
2J	1	Ground Lug	025-34089-000	025-34088-000	025-34089-000	025-34455-000	025-34088-000	025-34088-000	
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	
5BS	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34302-000	024-34302-000	024-34302-000	
5FS	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33169-000	024-33169-000	024-33169-000	
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0040-46 & YCUL0040-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	YCUL0040-46			YCUL0040-58		
			Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker
1A	3	Compressor Contactor (Sys 1)	*371-04151-445	*371-04151-545	*371-04151-649	*371-04151-455	*371-04151-555	*371-04151-655
1C	3	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000	024-31817-000
1E	3	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
	3	SP Terminal Block	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	025-38358-000	N/A	N/A	025-38358-000	N/A	N/A
	1	SP Circuit Breaker	N/A	N/A	024-31843-000	N/A	N/A	024-31840-000
	1	SP Non-Fused Disc. Switch	N/A	024-31888-000	N/A	N/A	024-31888-000	N/A
	1	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	024-31878-000	024-31878-000
2B	1	Handle	N/A	025-35697-000	025-35697-000	N/A	025-35697-000	025-35697-000
	1	Shaft	N/A	025-35696-000	025-35696-000	N/A	025-35696-000	025-35696-000
2J	1	Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5BS	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5FS	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0046-17 & YCUL0046-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	024-31106-000	024-31106-000	024-31106-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31106-000
	2	Compressor Contactor (Sys 2)	024-31106-000	024-31106-000	024-31106-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31106-000
1C	4	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31851-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34089-000	025-34089-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31649-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31649-000	024-31844-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

^s Recommended Spare Part

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0046-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	*371-04152-131	*371-04152-231	*371-04152-331	*371-04152-431	*371-04152-531	*371-04152-631	*371-04152-731	*371-04152-831
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1E	4	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
2A	3	SP Terminal Block	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2J	1	Handle	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	Shaft	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	3	Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 1)	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000
4B	1	MP Circuit Breaker (Sys 1)	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP NF Disc. Switch (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5A	2	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	2	Handle	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5B	2	Shaft	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	2	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
5B ^s	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5F ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5G	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
6A	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6B	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0046-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31843-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0046-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-151	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-251	Multiple Point Sep. Sys. Circuit Breakers *371-04152-351	Single Point Terminal Block *371-04152-451	Single Point Non-Fused Disc. Switch *371-04152-551	Single Point Circuit Breaker *371-04152-651	Single Point TB w/ Sep. Sys. CBs *371-04152-751	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-851
1A	2	Compressor Contactor (Sys 1)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
	2	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31841-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31837-000	N/A	N/A	N/A	024-31837-000	024-31837-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31837-000	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4J	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5A	2	Ground Lug	025-34455-000	025-34088-000	025-34455-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5B ^s	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5F ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5G	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
6A	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6B	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0050-17 & YCUL0050-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
			*371-04152-129	*371-04152-222	*371-04152-322	*371-04152-422	*371-04152-521	*371-04152-621	*371-04152-722	*371-04152-822
1A	2	Compressor Contactor (Sys 1)	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000
	2	Compressor Contactor (Sys 2)	024-31106-000	024-31106-000	024-31106-000	024-31107-000	024-31107-000	024-31107-000	024-31106-000	024-31106-000
1C	4	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31851-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	N/A	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	N/A	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34089-000	N/A	025-34089-000	N/A	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31649-000	N/A	N/A	N/A	024-31649-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31844-000	024-31844-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34088-000	025-34089-000	025-34088-000	N/A	N/A	N/A	025-34089-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0050-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0050-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	*371-04152-131	*371-04152-231	*371-04152-342	*371-04152-431	*371-04152-531	*371-04152-641	*371-04152-742	*371-04152-842
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31843-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0050-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	*371-04152-151	*371-04152-251	*371-04152-352	*371-04152-451	*371-04152-551	*371-04152-651	*371-04152-752	*371-04152-852
	2	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
1C	4	Surge Suppressor	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
1E	4	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
2A	3	SP Terminal Block	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2J	1	Handle	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	Shaft	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	3	Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 1)	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000
4B	1	MP Circuit Breaker (Sys 1)	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000	025-38358-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP NF Disc. Switch (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5A	2	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	2	Handle	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5B	2	Shaft	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	2	Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5B ^s	2	Surge Suppressor	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
5F ^s	2	Fan Contactor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5G	2	Fan Overload	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
6A	1	Terminal Block	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
6B	1	Relay	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
	1	Surge Suppressor	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0056-17 & YCUL0056-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	*371-04152-127	*371-04152-223	*371-04152-323	*371-04152-422	*371-04152-527	*371-04152-627	*371-04152-723	*371-04152-827
	2	Compressor Contactor (Sys 2)	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000
1C	4	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2B	1	Handle	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	Shaft	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2J	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31649-000	N/A	N/A	N/A	024-31649-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31649-000	N/A	N/A	N/A	024-31649-000	024-31649-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34088-000	025-34089-000	025-34089-000	N/A	N/A	N/A	025-34089-000	025-34089-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0056-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
5B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5C	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5D	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5E	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0056-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-131	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-231	Multiple Point Sep. Sys. Circuit Breakers *371-04152-343	Single Point Terminal Block *371-04152-431	Single Point Non-Fused Disc. Switch *371-04152-531	Single Point Circuit Breaker *371-04152-631	Single Point TB w/ Sep. Sys. CBs *371-04152-743	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-843
1A	2	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0056-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
	2	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31842-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31838-000	N/A	N/A	N/A	024-31838-000	024-31838-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31838-000	N/A	N/A	N/A	024-31838-000	024-31838-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
5B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5C	2	Ground Lug	025-34455-000	025-34088-000	025-34455-000	N/A	N/A	N/A	025-34088-000	025-34088-000
	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5D	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5E	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5F	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

* Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0060-17 & YCUL0060-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-128	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-224	Multiple Point Sep. Sys. Circuit Breakers *371-04152-328	Single Point Terminal Block *371-04152-424	Single Point Non-Fused Disc. Switch *371-04152-524	Single Point Circuit Breaker *371-04152-624	Single Point TB w/ Sep. Sys. CBs *371-04152-728	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-828
1A	2	Compressor Contactor (Sys 1)	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000
	2	Compressor Contactor (Sys 2)	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000
1C	4	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	025-34419-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30964-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31820-000	N/A	N/A	N/A	024-31820-000	024-31820-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31649-000	N/A	N/A	N/A	024-31649-000	024-31649-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34088-000	025-34089-000	025-34089-000	N/A	N/A	N/A	025-34089-000	025-34089-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0060-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-134	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-234	Multiple Point Sep. Sys. Circuit Breakers *371-04152-334	Single Point Terminal Block *371-04152-434	Single Point Non-Fused Disc. Switch *371-04152-534	Single Point Circuit Breaker *371-04152-634	Single Point TB w/ Sep. Sys. CBs *371-04152-734	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-834
1A	2	Compressor Contactor (Sys 1)	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	N/A	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	N/A	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31842-000	N/A	N/A	N/A	024-31842-000	024-31842-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0060-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-131	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-232	Multiple Point Sep. Sys. Circuit Breakers *371-04152-344	Single Point Terminal Block *371-04152-431	Single Point Non-Fused Disc. Switch *371-04152-531	Single Point Circuit Breaker *371-04152-631	Single Point TB w/ Sep. Sys. CBs *371-04152-744	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-844
1A	2	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34088-000	025-34089-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
4A	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0060-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-151	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-251	Multiple Point Sep. Sys. Circuit Breakers *371-04152-354	Single Point Terminal Block *371-04152-451	Single Point Non-Fused Disc. Switch *371-04152-551	Single Point Circuit Breaker *371-04152-654	Single Point TB w/ Sep. Sys. CBs *371-04152-754	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-854
1A	2	Compressor Contactor (Sys 1)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
	2	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31843-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31838-000	N/A	N/A	N/A	024-31838-000	024-31838-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34455-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0066-17 & YCUL0066-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	125	225	329	729	829	629	729	829
	2	Compressor Contactor (Sys 2)	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000
1C	4	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38370-000	N/A	N/A	025-38370-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	025-34424-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30964-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31820-000	N/A	N/A	N/A	024-31820-000	024-31820-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31820-000	N/A	N/A	N/A	024-31820-000	024-31820-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34088-000	025-34089-000	025-34089-000	N/A	N/A	N/A	025-34089-000	025-34089-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0066-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	*371-04152-135	*371-04152-235	*371-04152-335	*371-04152-435	*371-04152-535	*371-04152-635	*371-04152-735	*371-04152-835
	2	Compressor Contactor (Sys 2)	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000	024-31813-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	3	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31843-000	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
5A	2	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
5B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5G	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5F	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5G	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5G	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
6A	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6B	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0066-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	2	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	2	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0066-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04152-151	Multiple Point Sep. Sys. NF Disc. Switches *371-04152-251	Multiple Point Sep. Sys. Circuit Breakers *371-04152-355	Single Point Terminal Block *371-04152-451	Single Point Non-Fused Disc. Switch *371-04152-555	Single Point Circuit Breaker *371-04152-654	Single Point TB w/ Sep. Sys. CBs *371-04152-755	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04152-855
1A	2	Compressor Contactor (Sys 1)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
	2	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000	024-31817-000
1C	4	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	4	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31843-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34089-000	025-34088-000	025-34455-000	025-34089-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34455-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0076-17 & YCUL0076-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000
	3	Compressor Contactor (Sys 2)	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000
1C	6	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38370-000	N/A	N/A	025-38370-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	025-34424-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30964-000
2B	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38364-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31851-000	N/A	N/A	N/A	024-31851-000	024-31851-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31649-000	N/A	N/A	N/A	024-31649-000	024-31649-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31871-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34089-000	025-34085-000	025-34089-000	N/A	N/A	N/A	025-34089-000	025-34089-000
	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5A	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5B ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5F ^s	2	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
5G	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6A	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000
6B	1									

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0076-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-33442-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	N/A
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-33444-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-33445-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34085-000	025-34089-000	025-34088-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31842-000	N/A	N/A	N/A	024-31842-000	024-31842-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0076-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
			*371-04153-141	*371-04153-241	*371-04153-341	*371-04153-441	*371-04153-545	*371-04153-641	*371-04153-741	*371-04153-845
1A	3	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
2A	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34085-000	025-34089-000	025-34088-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31842-000	N/A	N/A	N/A	024-31842-000	024-31842-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0076-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	*371-04153-151	*371-04153-251	*371-04153-351	*371-04153-451	*371-04153-551	*371-04153-651	*371-04153-751	*371-04153-851
			024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
1C	3	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
			031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Surge Suppressor	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2B	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
2J	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	Handle	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	Shaft	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5C	1	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5D	1	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5E	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
			N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
5F	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
5G	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
5H	1	MP NF Disc. Switch (Sys 2)	N/A	024-31878-000	N/A	N/A	N/A	N/A	N/A	N/A
			N/A	024-31878-000	N/A	N/A	N/A	N/A	N/A	N/A
5I	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
			N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
5J	2	Handle	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
			N/A	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5K	2	Shaft	025-34455-000	025-34088-000	025-34455-000	N/A	N/A	N/A	025-34455-000	025-34455-000
			031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5L	2	Surge Suppressor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
			024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5M	2	Fan Contactor	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
			024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
5N	1	Fan Overload	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
			031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000
5O	1	Terminal Block	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
			031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000
5P	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
			031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000
5Q	1	Surge Suppressor	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
			031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0080-17 & YCUL0080-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
			*371-04153-125	*371-04153-221	*371-04153-325	*371-04153-725	*371-04153-825	*371-04153-621	*371-04153-725	*371-04153-825
1A	3	Compressor Contactor (Sys 1)	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000
	3	Compressor Contactor (Sys 2)	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000	024-31106-000
1C	6	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38370-000	N/A	N/A	025-38370-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	025-34424-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30964-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38364-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31851-000	N/A	N/A	N/A	024-31851-000	024-31851-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31649-000	N/A	N/A	N/A	024-31649-000	024-31649-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31871-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34089-000	025-34085-000	025-34089-000	N/A	N/A	N/A	025-34089-000	025-34089-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

^s Recommended Spare Part

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0080-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	*371-04153-141	*371-04153-241	*371-04153-331	*371-04153-431	*371-04153-531	*371-04153-631	*371-04153-731	*371-04153-831
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-33442-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	N/A
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-33444-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-33445-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34085-000	025-34089-000	025-34088-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
4B	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31842-000	N/A	N/A	N/A	024-31842-000	024-31842-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0080-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34085-000	025-34089-000	025-34088-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31842-000	N/A	N/A	N/A	024-31842-000	024-31842-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0080-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04153-151	Multiple Point Sep. Sys. NF Disc. Switches *371-04153-251	Multiple Point Sep. Sys. Circuit Breakers *371-04153-351	Single Point Terminal Block *371-04153-451	Single Point Non-Fused Disc. Switch *371-04153-551	Single Point Circuit Breaker *371-04153-651	Single Point TB w/ Sep. Sys. CBs *371-04153-751	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04153-851
1A	3	Compressor Contactor (Sys 1)	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
	3	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38358-000	N/A	N/A	025-38358-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34455-000	025-34089-000	025-34088-000	025-34455-000	025-34089-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31839-000	N/A	N/A	N/A	024-31839-000	024-31839-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0086-17 & YCUL0086-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04153-127	Multiple Point Sep. Sys. NF Disc. Switches *371-04153-223	Multiple Point Sep. Sys. Circuit Breakers *371-04153-327	Single Point Terminal Block *371-04153-727	Single Point Non-Fused Disc. Switch *371-04153-823	Single Point Circuit Breaker *371-04153-623	Single Point TB w/ Sep. Sys. CBs *371-04153-727	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04153-823
1A	3	Compressor Contactor (Sys 1)	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000
	3	Compressor Contactor (Sys 2)	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000	024-31107-000
1C	6	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	025-34424-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30964-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38364-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38364-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31819-000	N/A	N/A	N/A	024-31819-000	024-31819-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31851-000	N/A	N/A	N/A	024-31851-000	024-31851-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31871-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31871-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4J	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5A	2	Ground Lug	025-34089-000	025-34085-000	025-34085-000	N/A	N/A	N/A	025-34085-000	025-34085-000
	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0086-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04153-133	Multiple Point Sep. Sys. NF Disc. Switches *371-04153-233	Multiple Point Sep. Sys. Circuit Breakers *371-04153-333	Single Point Terminal Block *371-04153-433	Single Point Non-Fused Disc. Switch *371-04153-531	Single Point Circuit Breaker *371-04153-633	Single Point TB w/ Sep. Sys. CBs *371-04153-733	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04153-833
1A	3	Compressor Contactor (Sys 1)	024-31813-000	024-31813-000	024-31813-000	024-31107-000	024-31107-000	024-31107-000	024-31813-000	024-31813-000
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
2A	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31851-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-30963-000
2B	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
2J	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34089-000	025-34089-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31844-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31844-000	024-31844-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34089-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0086-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	*371-04153-141	*371-04153-241	*371-04153-331	*371-04153-431	*371-04153-531	*371-04153-631	*371-04153-731	*371-04153-831
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
1E	6	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000
2A	3	SP Terminal Block	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	1	SP Circuit Breaker	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	024-31820-000	N/A	N/A
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	024-33442-000
2J	1	Handle	N/A	N/A	N/A	N/A	N/A	024-31878-000	N/A	N/A
	1	Shaft	N/A	N/A	N/A	N/A	N/A	025-35697-000	N/A	025-33445-000
4A	1	Ground Lug	N/A	N/A	N/A	N/A	N/A	025-35696-000	N/A	025-33444-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	025-34088-000	025-34085-000	025-34089-000	025-34088-000	025-34085-000
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31842-000	N/A	N/A	N/A	024-31842-000	024-31842-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4J	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5A	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5B ^s	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5F ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5G	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
6A	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6B	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0086-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	*371-04153-151	*371-04153-252	*371-04153-353	*371-04153-453	*371-04153-551	*371-04153-651	*371-04153-753	*371-04153-853
	3	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
1C	6	Surge Suppressor	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
1E	6	Ground Lug	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
2A	3	SP Terminal Block	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	1	SP Circuit Breaker	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	N/A	024-31844-000	N/A	N/A
	1	Operator Mechanism	N/A	N/A	N/A	N/A	N/A	N/A	N/A	024-31888-000
2J	1	Handle	N/A	N/A	N/A	N/A	N/A	024-31878-000	N/A	024-31878-000
	1	Shaft	N/A	N/A	N/A	N/A	N/A	025-35697-000	N/A	025-35697-000
4A	3	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31840-000	N/A	N/A	N/A	024-31840-000	024-31840-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
5B	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5C	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5D	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5E	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5F	2	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
5G	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6A	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0090-17 & YCUL0090-28 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
			*371-04153-128	*371-04153-224	*371-04153-328	*371-04153-728	*371-04153-824	*371-04153-624	*371-04153-728	*371-04153-824
1A	3	Compressor Contactor (Sys 1)	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000
	3	Compressor Contactor (Sys 2)	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000	024-31640-000
1C	6	Surge Suppressor	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000	031-02203-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	025-34424-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30964-000	N/A	N/A	024-30964-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38364-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38364-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-13819-000	N/A	N/A	N/A	024-13819-000	024-13819-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31819-000	N/A	N/A	N/A	024-31819-000	024-31819-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31871-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31871-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
4J	2	Ground Lug	025-34089-000	025-34085-000	025-34089-000	N/A	N/A	N/A	025-34089-000	025-34089-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000	024-34300-000
5F ^s	2	Fan Overload	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000	024-33170-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0090-40 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04153-134	Multiple Point Sep. Sys. NF Disc. Switches *371-04153-234	Multiple Point Sep. Sys. Circuit Breakers *371-04153-334	Single Point Terminal Block *371-04153-433	Single Point Non-Fused Disc. Switch *371-04153-531	Single Point Circuit Breaker *371-04153-634	Single Point TB w/ Sep. Sys. CBs *371-04153-734	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04153-834
1A	3	Compressor Contactor (Sys 1)	024-31813-000	024-31813-000	024-31813-000	024-31107-000	024-31107-000	024-31107-000	024-31813-000	024-31813-000
	3	Compressor Contactor (Sys 2)	024-31813-000	024-31813-000	024-31813-000	024-31107-000	024-31107-000	024-31107-000	024-31813-000	024-31813-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02203-000	031-02203-000	031-02203-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	N/A	025-38364-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31819-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2B	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
2J	1	Ground Lug	N/A	N/A	N/A	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000
4A	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31844-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31844-000	N/A	N/A	N/A	024-31844-000	024-31844-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34089-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0090-46 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks	Multiple Point Sep. Sys. NF Disc. Switches	Multiple Point Sep. Sys. Circuit Breakers	Single Point Terminal Block	Single Point Non-Fused Disc. Switch	Single Point Circuit Breaker	Single Point TB w/ Sep. Sys. CBs	Single Point NF Disc. Sw. w/ Sep. Sys. CBs
1A	3	Compressor Contactor (Sys 1)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
	3	Compressor Contactor (Sys 2)	024-31818-000	024-31818-000	024-31818-000	024-31107-000	024-31107-000	024-31107-000	024-31818-000	024-31818-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
2A	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31820-000	N/A	N/A
2B	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-30963-000	N/A	N/A	024-30963-000
	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
2J	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
4A	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34085-000	025-34089-000	025-34088-000	025-34085-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4B	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
4J	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31843-000	N/A	N/A	N/A	024-31843-000	024-31843-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
4J	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
5A	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000	024-33169-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000

^s Recommended Spare Part

***Service Note:**
Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 6 – POWER PANEL COMPONENTS - YCUL0090-58 (SEE FIGS. 7-10, PAGES 18-21)

Item No.	Qty.	Description	Multiple Point Sep. Sys. Term. Blocks *371-04153-151	Multiple Point Sep. Sys. NF Disc. Switches *371-04153-252	Multiple Point Sep. Sys. Circuit Breakers *371-04153-354	Single Point Terminal Block *371-04153-453	Single Point Non-Fused Disc. Switch *371-04153-551	Single Point Circuit Breaker *371-04153-654	Single Point TB w/ Sep. Sys. CBs *371-04153-754	Single Point NF Disc. Sw. w/ Sep. Sys. CBs *371-04153-854
1A	3	Compressor Contactor (Sys 1)	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
	3	Compressor Contactor (Sys 2)	024-31817-000	024-31817-000	024-31817-000	024-31818-000	024-31818-000	024-31818-000	024-31817-000	024-31817-000
1C	6	Surge Suppressor	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000	031-02202-000
1E	6	Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000	025-34455-000
	3	SP Terminal Block	N/A	N/A	N/A	025-38363-000	N/A	N/A	025-38363-000	N/A
2A	1	SP Circuit Breaker	N/A	N/A	N/A	N/A	N/A	024-31649-000	N/A	N/A
	1	SP Non-Fused Disc. Switch	N/A	N/A	N/A	N/A	024-31888-000	N/A	N/A	024-31888-000
2B	1	Operator Mechanism	N/A	N/A	N/A	N/A	024-31878-000	024-31878-000	N/A	024-31878-000
	1	Handle	N/A	N/A	N/A	N/A	025-35697-000	025-35697-000	N/A	025-35697-000
2J	1	Shaft	N/A	N/A	N/A	N/A	025-35696-000	025-35696-000	N/A	025-35696-000
	1	Ground Lug	N/A	N/A	N/A	025-34088-000	025-34089-000	025-34089-000	025-34088-000	025-34089-000
	3	MP Terminal Block (Sys 1)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38358-000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	024-31841-000	N/A	N/A	N/A	024-31841-000	024-31841-000
	1	MP NF Disc. Switch (Sys 1)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP NF Disc. Switch (Sys 2)	N/A	024-31888-000	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	Operator Mechanism	N/A	024-31878-000	024-31878-000	N/A	N/A	N/A	024-31878-000	024-31878-000
	2	Handle	N/A	025-35697-000	025-35697-000	N/A	N/A	N/A	025-35697-000	025-35697-000
4J	2	Shaft	N/A	025-35696-000	025-35696-000	N/A	N/A	N/A	025-35696-000	025-35696-000
	2	Ground Lug	025-34455-000	025-34088-000	025-34088-000	N/A	N/A	N/A	025-34088-000	025-34088-000
5A	2	Surge Suppressor	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000	031-02106-000
5B ^s	2	Fan Contactor	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000	024-34302-000
5F ^s	2	Fan Overload	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000	024-33168-000
5G	1	Terminal Block	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000	024-33189-000
6A	1	Relay	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000	024-33177-000
6B	1	Surge Suppressor	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000	031-02107-000


^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 10, Page 21, then refer to the appropriate parts list for that number.

Control & Power Panel

SENSOR HARNESSSES

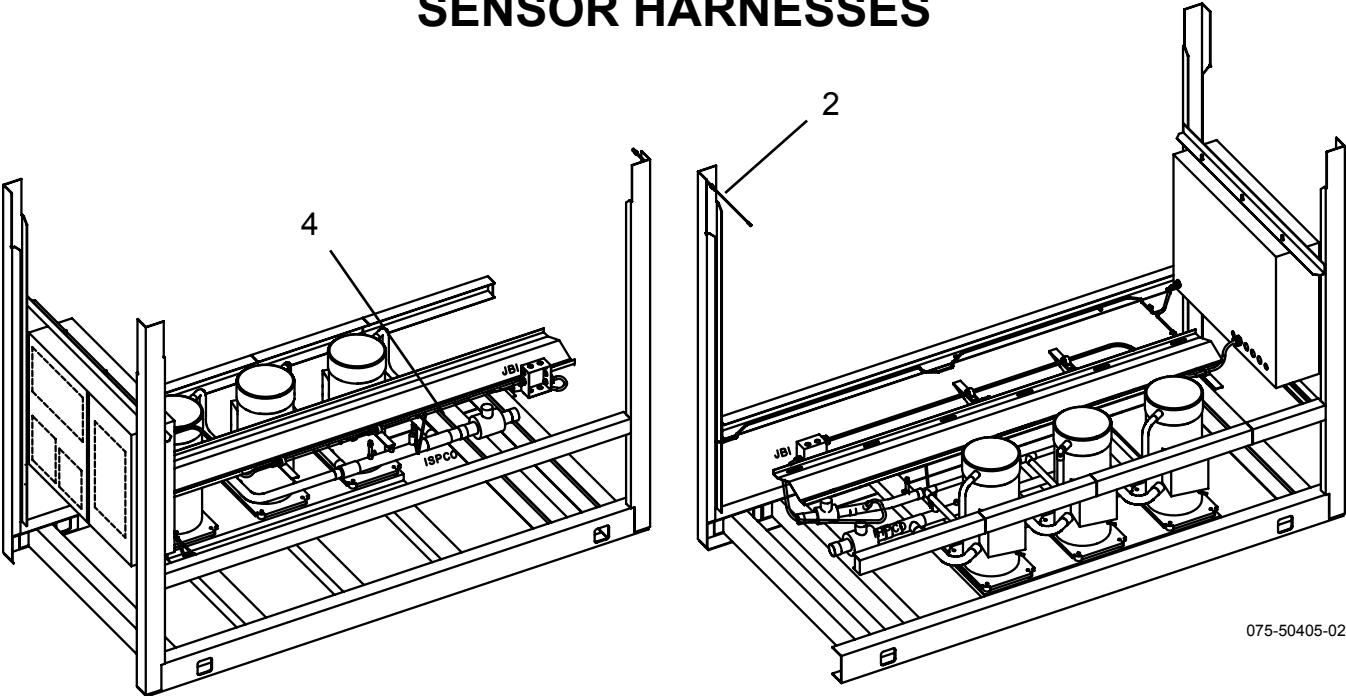

075-50405-02

FIG. 11 – HARNESS LAYOUT - YCUL0040 SHOWN (REF. TABLE 7)

TABLE 7 – SENSOR HARNESSSES - YCUL0016-YCUL0040 (SEE FIG. 11)

Board Location	Cable Length	Cable No.	Wire Color	Plug Pin No.	Function	Harness Assembly Part Number
MICRO P6	192"	2	Black	4	Outside Air Temperature	375-30434-406
			Red	7		
			Drain	1		
MICRO P4	140"	4	Red	5	System #1 Suction Pressure	375-30434-401
			White	10		
			Black	1		
			Drain	2		
	204"	Not Shown	Red	7	System #1 Discharge Pressure	375-30432-403
			White	12		
MICRO P5	Optional Kit	115	Black	8	System #1 Suction Temperature Sensor	371-37966-281
			Black	7		
			Drain	9		
			Drain	2		

Control & Power Panel


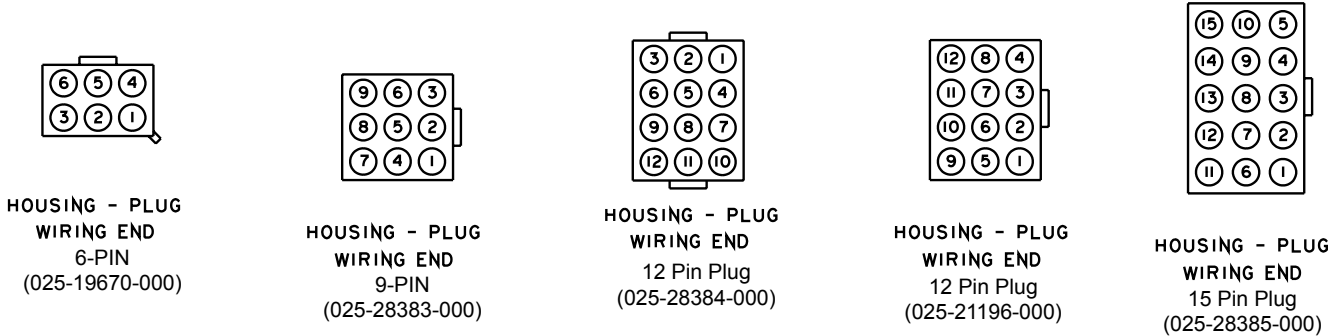


FIG. 12 – SENSOR HOUSING PART NUMBERS

45622-003b

SENSOR HARNESSES - CONT'D

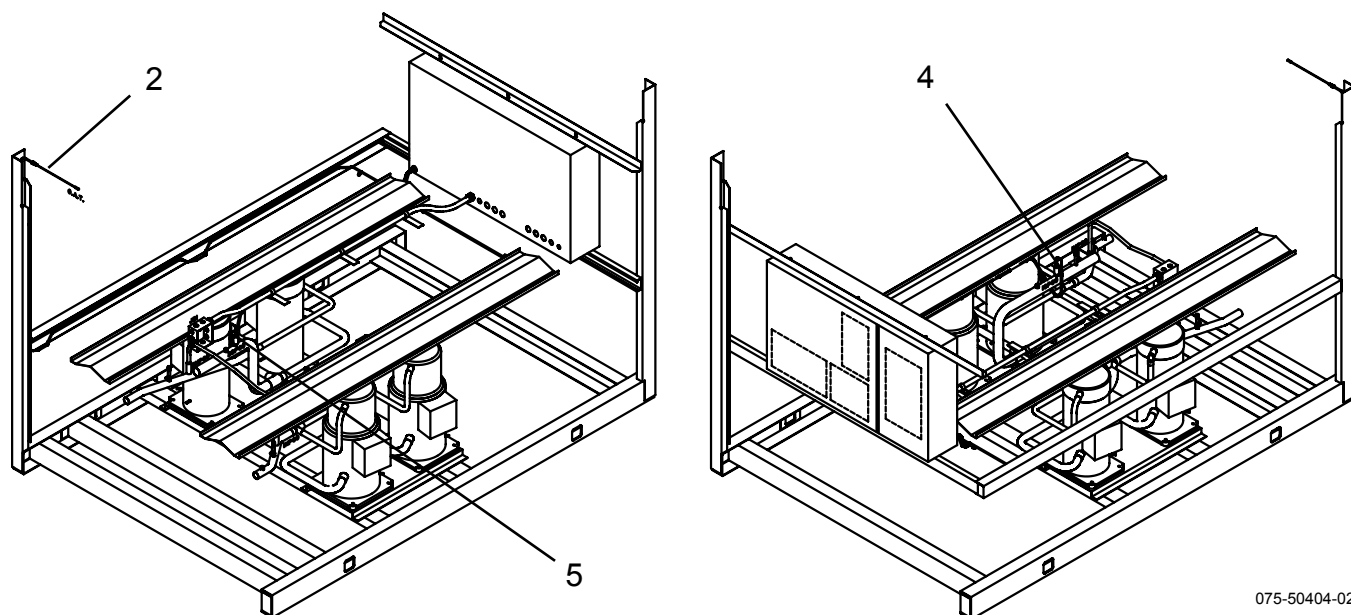


075-50404-02

FIG. 12 – HARNESS LAYOUT - YCUL0046-YCUL0066 SHOWN (REF. TABLE 8)

TABLE 8 – SENSOR HARNESSES - YCUL0046-YCUL0066 (SEE FIG. 12)

Board Location	Cable Length	Cable No.	Wire Color	Plug Pin No.	Function	Harness Assembly Part Number
MICRO P6	204"	2	Black	4	Outside Air Temperature	375-30433-406
			Red	7		
			Drain	1		
MICRO P4	150"	4	Red	5	System #1 Suction Pressure	375-30433-401
			White	10		
			Black	1		
			Drain	2		
	204"	Not Shown	Red	7	System #1 Discharge Pressure	375-30432-403
			White	12		
			Black	8		
			Drain	9		
MICRO P4	110"	5	Red	5	System #2 Suction Pressure	375-30433-402
			White	10		
			Black	1		
			Drain	2		
	204"	Not Shown	Red	7	System #2 Discharge Pressure	375-30432-404
			White	12		
			Black	8		
			Drain	9		
MICRO P5	Optional Kit	115	Red	12	System #1 Suction Temperature Sensor	371-37966-280
			Black	7		
			Drain	2		
	Optional Kit	116	Red	13	System #2 Suction Temperature Sensor	371-37966-280
			Black	8		
			Drain	3		

SENSOR HARNESSES - CONT'D

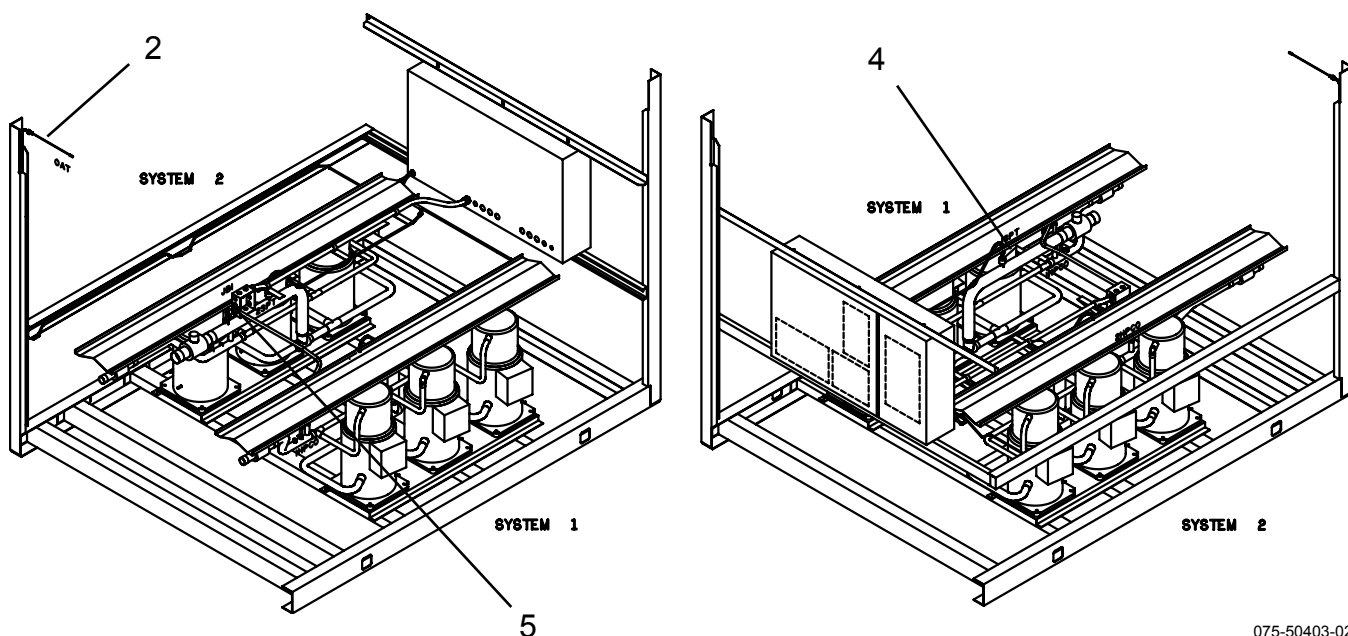

075-50403-02

FIG. 13 – HARNESS LAYOUT - YCUL0076-YCUL0090 SHOWN (REF. TABLE 9)

TABLE 9 – SENSOR HARNESSES - YCUL0076-YCUL0090 (SEE FIG. 13)

Board Location	Cable Length	Item Number	Wire Color	Plug Pin No.	Function	Harness Assembly Part Number
MICRO P6	204"	2	Black	4	Outside Air Temperature	375-30432-406
			Red	7		
			Drain	1		
MICRO P4	160"	4	Red	5	System #1 Suction Pressure	375-30432-401
			White	10		
			Black	1		
			Drain	2		
	204"	Not Shown	Red	7	System #1 Discharge Pressure	375-30432-403
			White	12		
			Black	8		
			Drain	9		
MICRO P4	120"	5	Red	5	System #2 Suction Pressure	375-30432-402
			White	10		
			Black	1		
			Drain	2		
	204"	Not Shown	Red	7	System #2 Discharge Pressure	375-30432-404
			White	12		
			Black	8		
			Drain	9		
MICRO P5	Optional Kit	115	Red	12	System #1 Suction Temperature Sensor	371-37966-280
			Black	7		
			Drain	2		
	Optional Kit	116	Red	13	System #2 Suction Temperature Sensor	371-37966-280
			Black	8		
			Drain	3		

TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS

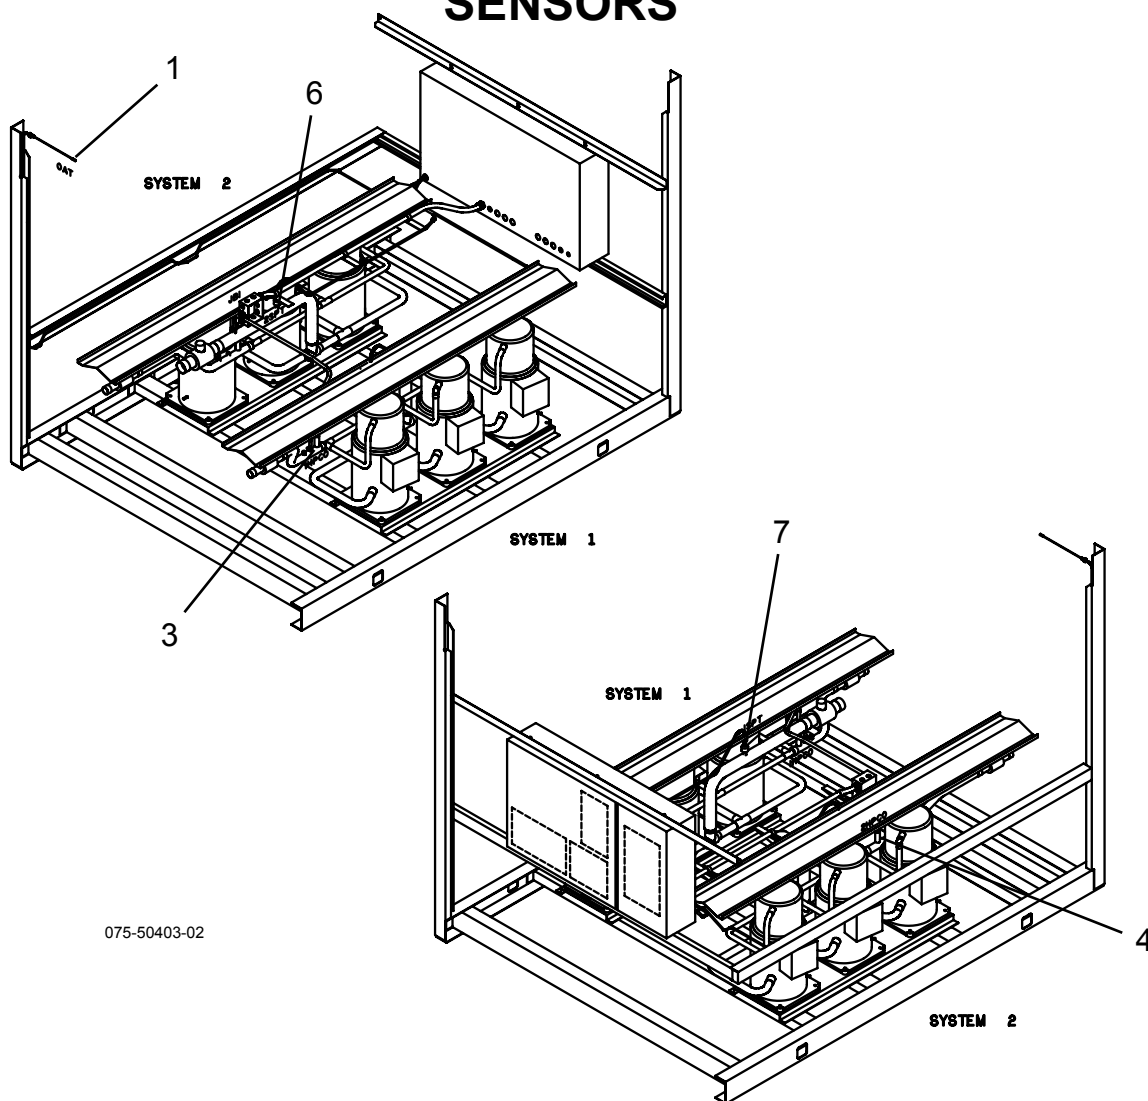


FIG. 14 – TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS (REF. TABLE 10)

TABLE 10 – TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS (SEE FIG. 14)

Item Number	Quantity	Description	Voltage Code	Part Number
1 ^s	1 per unit	Sensor, Outside Air Temperature	All	025-28663-001
2	1 per sys	Sensor, Suction Temp. (Not Shown)	All	025-28935-000
3 ^s	1 per sys	High Pressure Cutout Switch - YCUL0016-0040	All	375-00453-059
		High Pressure Cutout Switch - YCUL0046-0090	All	375-00453-057
4 ^s	1 per sys	High Pressure Cutout Switch - YCUL0046-0090	All	375-00453-058
5	-	Compound, Heat Conductive (Not Shown)	All	013-00898-000
6 ^s	1 per sys	Transducer, Suction Pressure (0-200psi)	All	025-29583-000
7 ^s	1 per sys	Transducer, Discharge Pressure (0-400psi)	All	025-29139-001
8 ^s	1 per unit	Sensor, Discharge Air Temp. (Not Shown)	All	025-28935-000

^s Recommended Spare Part

TRANSDUCER AND THERMISTOR
WIRE HARNESS CONNECTORS - FIELD
REPLACEMENT PART NUMBERS

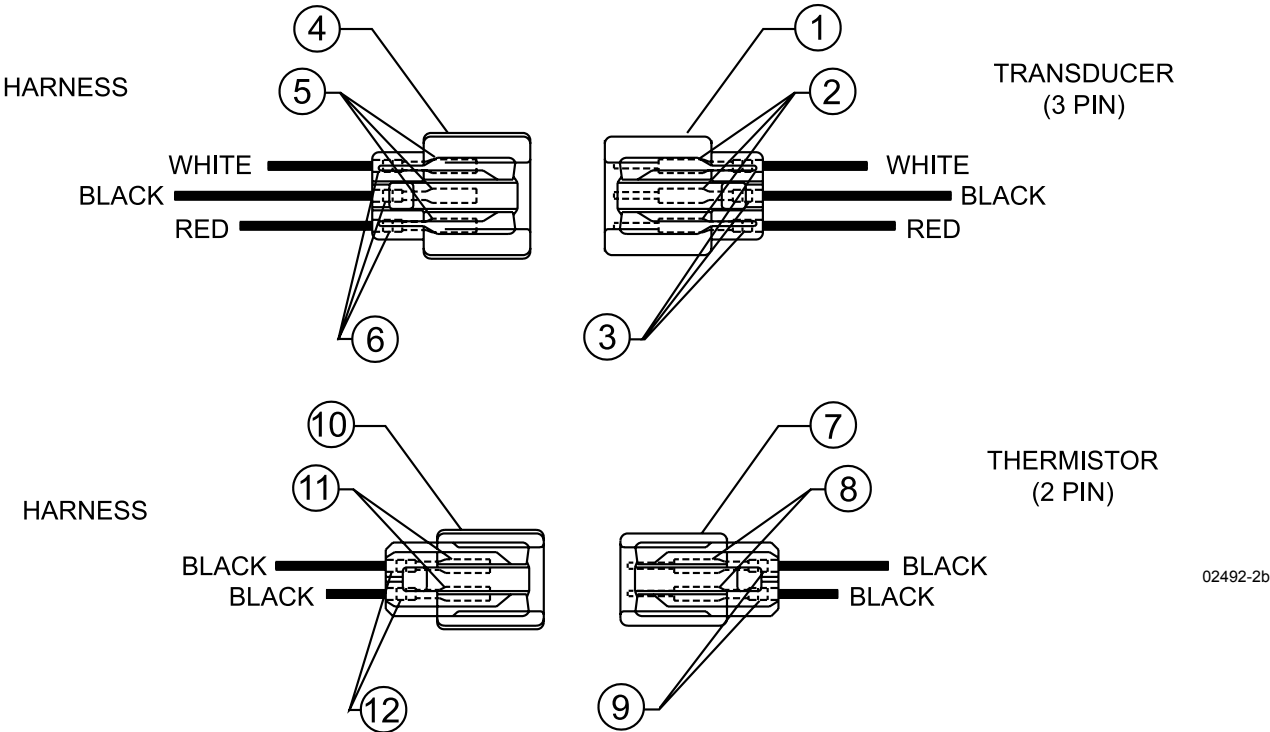


FIG. 15 – TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS - FIELD REPLACEMENT PART NUMBERS (REF. TABLE 11)

TABLE 11 – TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS - FIELD REPLACEMENT PART NUMBERS (SEE FIG. 15)

Item No.	Location	Description	Pins	Part Number
1	Transducer	Plug Connector	3 Pin End	025-28953-000
2		Contact Pins		025-28949-000
3		Rubber Collar		025-28950-000
4	Wire Harness	Plug Connector	3 Pin End	025-28954-000
5		Contact Pins		025-28952-000
6		Rubber Collar		025-28950-000
7	Transducer	Plug Connector	2 Pin End	025-28948-000
8		Contact Pins		025-28949-000
9		Rubber Collar		025-28950-000
10	Wire Harness	Plug Connector	2 Pin End	025-28951-000
11		Contact Pins		025-28952-000
12		Rubber Collar		025-28950-000

^s Recommended Spare Part

YCU L CHILLER OPTIONS – KITS

TABLE 12 – FIELD INSTALLED OPTIONS PART NUMBERS

MODEL NUMBER YCU L	VIBRATION ISOLATORS SPRING 1" DEFLEC. ALUMINUM* & BLACK FIN	VIBRATION ISOLATORS SPRING 2" (SEISMIC) ALUMINUM* & BLACK FIN	VIBRATION ISOLATOR PAD 1/2" DEFLEC. NEOPRENE	VIBRATION ISOLATORS SPRING 1" DEFLEC. COPPER*	VIBRATION ISOLATORS SPRING 2" (SEISMIC) COPPER*	VIBRATION ISOLATOR PAD 1/2" DEFLEC. NEOPRENE	HOT GAS BY-PASS SOLENOID VALVE W/ HARNESS	BAS/EMS TEMPERA- TURE RESET / OFFSET
MODEL #	029-23707	029-24147	029-23706	029-23707	029-24147	029-23706	375-00431	375-30914
0016	-317	-117	-159	-321	-118	-159	-076	-000
0026	-317	-117	-159	-321	-118	-159		
0030	-318	-118	-160	-321	-118	-159		
0036	-318	-118	-160	-321	-118	-166		
0040	-312	-100	-152	-322	-124	-152		
0046	-320	-119	-152	-320	-125	-152		
0050	-320	-119	-152	-320	-125	-152		
0056	-320	-119	-152	-320	-125	-152		
0060	-320	-119	-152	-309	-125	-146		
0066	-320	-119	-152	-309	-125	-146		
0076	-305	-120	-146	-296	-104	-146		
0080	-305	-120	-146	-296	-104	-146		
0086	-296	-104	-146	-296	-112	-146		
0090	-296	-104	-146	-296	-112	-146		

* Note: Condenser Coil Fin Material.

** Note: Hot Gas By-Pass Solenoid Valve Only: 025-34133-000

TABLE 12A – HOT GAS BY-PASS SOLENOID VALVE (025-34133-000) COIL REPLACEMENT

MODEL NUMBERS	VENDOR	DESCRIPTION	PART NUMBER
ALL	SPORLAN	COIL ONLY, SOLENOID VALVE	025-35151-000
	ALCO		025-35152-000
	DANFOSS		025-35169-000

YCUL CHILLER OPTIONS – KITS (CONT'D)

TABLE 12 (CONT'D) – FIELD INSTALLED OPTIONS PART NUMBERS

MODEL NUMBER YCUL	LOW AMBIENT KIT	HIGH AMBIENT KIT	DEHYDRATOR KIT	CHICAGO RELIEF VALVE	MOTOR CURRENT MODULE KIT	OPTIVIEW REMOTE CONTROL PANEL	SUCTION TEMP SENSOR KIT	DISCHARGE AIR SENSOR KIT							
MODEL #	375-51213	375-	475-33401	022-08863	371-04101	371-02750	475-	475-33729							
0016	-17 &-28 Voltage Codes -101	28556-000	-001	-000	-001	-101	33751-000	-000							
0026															
0030	-40,-46 &-58 Voltage Codes -102	28553-000													
0036															
0040	-17 &-28 Voltage Codes -103	31802-000	-002		-000		33753-000								
0046															
0050															
0056															
0060															
0066															
0076															
0080															
0086	-40,-46 &-58 Voltage Codes -104	28549-000	-003												
0090															

TABLE 12B – CONTROL TRANSFORMER KIT

MODEL NUMBERS	VOLTAGE	DESCRIPTION	PART NUMBER
YCUL0016-YCUL0090	-17	KIT, CONTROL TRANSFORMER	375-30909-008
	-28		375-30909-009
	-40		375-30909-010
	-46		375-30909-011
	-58		375-30909-012

ENCLOSURE KIT OPTIONS

TABLE 13 – ENCLOSURE KIT OPTIONS - TOP AND BOTTOM SECTIONS
(SEE FIGS. 16-19, PAGES 76-79)

MODEL NUMBER YCUL-	WIRE ENCLOSURE	LOUVERED ENCLOSURE	WIRE / LOUVERED ENCLOSURE	LOUVERED ENCLOSURE CONDENSER ONLY
0016 (Top)	475-31869-000	475-31867-000	475-31867-000	475-31867-000
0016 (Bottom)	475-31870-000	475-31868-000	475-31870-000	N/A
0026 (Top)	475-31869-000	475-31867-000	475-31867-000	475-31867-000
0026 (Bottom)	475-31870-000	475-31868-000	475-31870-000	N/A
0030 (Top)	475-31834-000	475-31832-000	475-31832-000	475-31832-000
0030 (Bottom)	475-31835-000	475-31833-000	475-31835-000	N/A
0036 (Top)	475-31834-000	475-31832-000	475-31832-000	475-31832-000
0036 (Bottom)	475-31835-000	475-31833-000	475-31835-000	N/A
0040 (Top)	475-31834-000	475-31832-000	475-31832-000	475-31832-000
0040 (Bottom)	475-31835-000	475-31833-000	475-31835-000	N/A
0046 (Top)	475-31297-000	475-30996-000	475-30996-000	475-30996-000
0046 (Bottom)	475-31298-000	475-31299-000	475-31298-000	N/A
0050 (Top)	475-31297-000	475-30996-000	475-30996-000	475-30996-000
0050 (Bottom)	475-31298-000	475-31299-000	475-31298-000	N/A
0056 (Top)	475-31297-000	475-30996-000	475-30996-000	475-30996-000
0056 (Bottom)	475-31298-000	475-31299-000	475-31298-000	N/A
0060 (Top)	475-31297-000	475-30996-000	475-30996-000	475-30996-000
0060 (Bottom)	475-31298-000	475-31299-000	475-31298-000	N/A
0066 (Top)	475-31297-000	475-30996-000	475-30996-000	475-30996-000
0066 (Bottom)	475-31298-000	475-31299-000	475-31298-000	N/A
0076 (Top)	475-31808-000	475-31806-000	475-31806-000	475-31806-000
0076 (Bottom)	475-31809-000	475-31807-000	475-31809-000	N/A
0080 (Top)	475-31808-000	475-31806-000	475-31806-000	475-31806-000
0080 (Bottom)	475-31809-000	475-31807-000	475-31809-000	N/A
0086 (Top)	475-31808-000	475-31806-000	475-31806-000	475-31806-000
0086 (Bottom)	475-31809-000	475-31807-000	475-31809-000	N/A
0090 (Top)	475-31808-000	475-31806-000	475-31806-000	475-31806-000
0090 (Bottom)	475-31809-000	475-31807-000	475-31809-000	N/A

ENCLOSURE KIT OPTIONS (CONT'D)

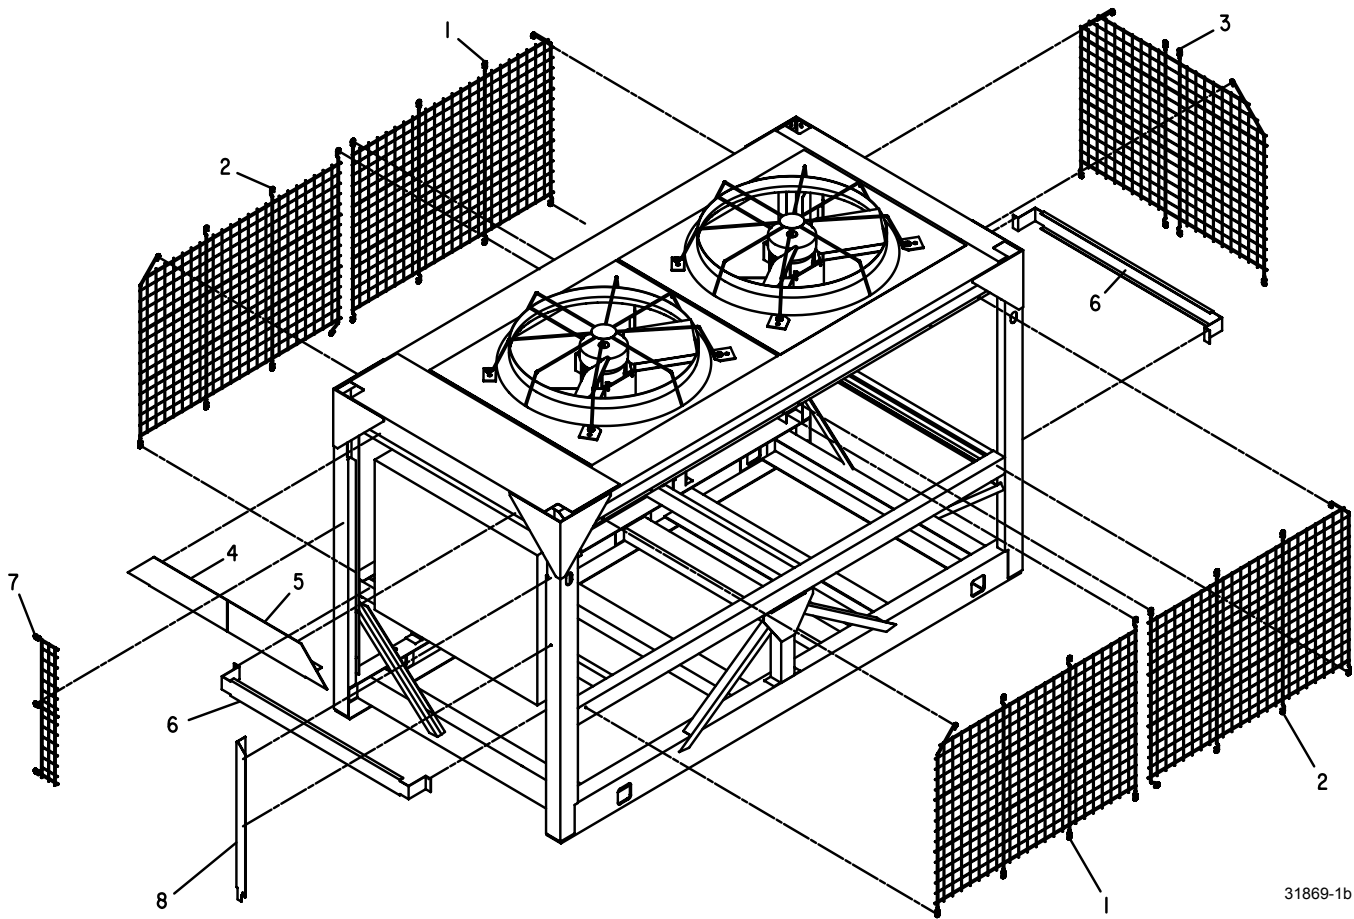


FIG. 16 – WIRE ENCLOSURE (TOP SECTIONS) - YCUL0016 AND YCUL0026 SHOWN

TABLE 14 – WIRE ENCLOSURE (Top Sections)

WIRE ENCLOSURE (TOP SECTIONS)		YCUL0016 & YCUL0026		YCUL0030, 0036 & YCUL0040		YCUL0046, 0050, 0056, 0060 & YCUL0066		YCUL0076, 0080 0086 & YCUL0130	
ITEM #	DESCRIPTION	475-31869-000	QTY	475-31834-000	QTY	475-31297-000	QTY	475-31808-000	QTY
1	Grille	026-36573-000	2	026-36562-000	2	026-36547-000	2	026-36556-000	2
2	Grille	026-31883-000	2	026-36563-000	2	026-36551-000	2	026-36557-000	2
3	Grille	026-31884-000	1	026-36564-000	1	026-36549-000	1	026-36558-000	1
4	Grille, Front	N/A	-	026-36595-000	1	N/A	-	026-36594-000	1
	Panel, Front	075-28557-000	1	N/A	-	075-31803-000	1	N/A	-
5	Panel, Front	075-28558-000	1	N/A	-	075-31286-000	1	N/A	-
6	Bracket	075-31844-000	2	075-31844-000	2	075-31284-000	1	075-31818-000	2
7	Grille	026-36578-000	1	026-36565-000	1	026-36555-000	2	026-36559-000	2
8	Panel	075-31881-000	1	075-31853-000	1	N/A	-	N/A	-

ENCLOSURE KIT OPTIONS (CONT'D)

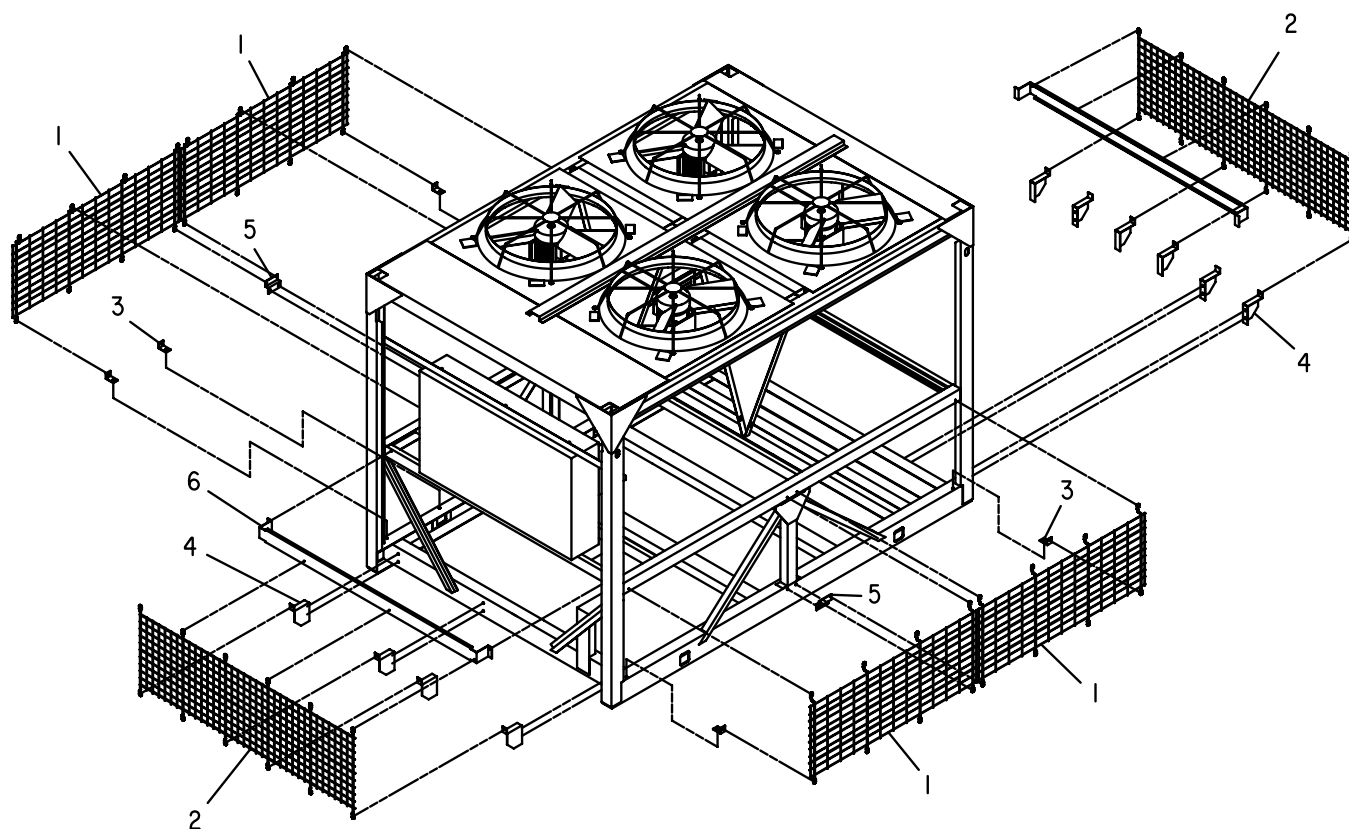


FIG. 17 – WIRE ENCLOSURE (BOTTOM SECTIONS) - YCUL0046, 0050, 0056, 0060 & YCUL0066 SHOWN

TABLE 15 – WIRE ENCLOSURE (Bottom Sections)

WIRE ENCLOSURE (BOTTOM SECTIONS)		YCUL0016 & YCUL0026		YCUL0030, 0036 & YCUL0040		YCUL0046, 0050, 0056, 0060 & YCUL0066		YCUL0076, 0080 0086 & YCUL0090	
ITEM #	DESCRIPTION	475-31870-000	QTY	475-31835-000	QTY	475-31298-000	QTY	475-31809-000	QTY
1	Grille	026-36576-000	3	026-36566-000	3	026-36548-000	4	026-36548-000	4
2	Grille	026-36577-000	2	026-36567-000	2	026-36550-000	2	026-36560-000	2
3	Clip	075-31285-000	12	075-31285-000	12	075-31285-000	12	075-31285-000	12
4	Bracket	075-31711-000	2	075-31711-000	2	075-31711-000	2	075-31711-000	2
5	Bracket	075-31294-000	8	075-31294-000	8	075-31294-000	10	075-31294-000	16
6	Bracket	N/A	-	N/A	-	075-31284-000	1	N/A	-
11	Grille	026-36779-000	1	026-36780-000	1	N/A	-	N/A	-

ENCLOSURE KIT OPTIONS (CONT'D)


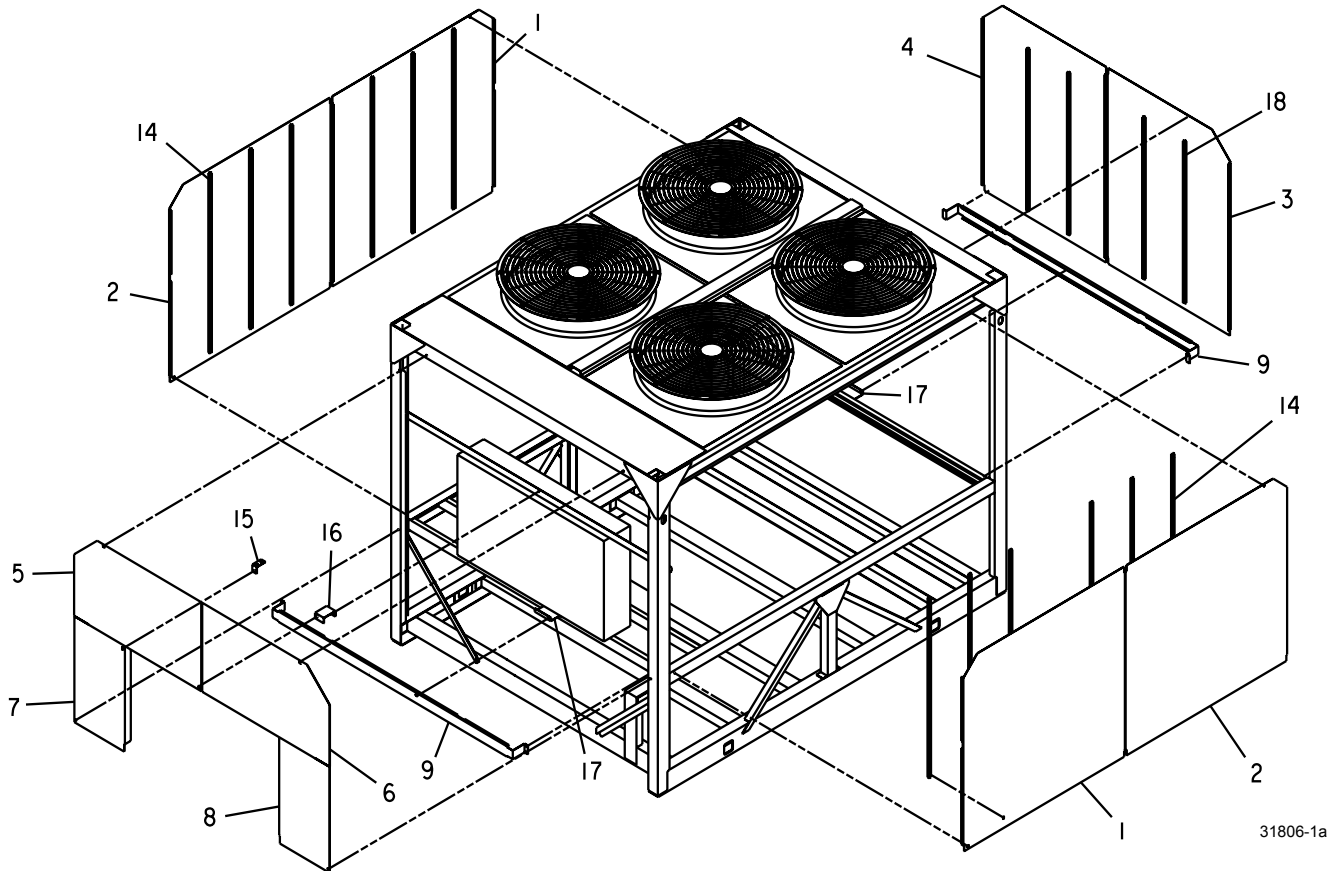


FIG. 18 – LOUVERED ENCLOSURE (TOP SECTIONS) - YUL0060 SHOWN

TABLE 16 – LOUVERED ENCLOSURE (Top Sections)

LOUVERED ENCLOSURE (TOP SECTIONS)		YCUL0016 & YCUL0026		YCUL0030, 0036 & YCUL0040		YCUL0046, 0050, 0056, 0060 & YCUL0066		YCUL0076, 0080 0086 & YCUL0090	
ITEM #	DESCRIPTION	475-31867-000	QTY	475-31832-000	QTY	475-30996-000	QTY	475-31806-000	QTY
1	Panel, Side	075-31875-000	1	075-31840-000	1	075-30682-000	2	075-31811-000	2
2	Panel, Side	075-31874-000	1	075-31839-000	1	075-30681-000	2	075-31810-000	2
3	Panel, Rear	075-31876-000	1	075-31842-000	1	075-31283-000	1	075-31816-000	1
4	Panel, Rear	075-31877-000	1	075-31843-000	1	075-31717-000	1	075-31817-000	1
5	Bracket	075-31844-000	2	075-31844-000	2	075-31284-000	2	075-31818-000	2
6	Panel, Side	075-31878-000	1	075-31854-000	1	N/A	-	N/A	-
7	Panel, Side	075-31879-000	1	075-31855-000	1	N/A	-	N/A	-
8	Panel	075-31880-000	1	075-31852-000	1	075-31295-000	1	075-31812-000	1
9	Panel	075-31881-000	1	075-31853-000	1	075-31296-000	1	075-31813-000	1
10	Panel, Front	075-28557-000	1	075-31845-000	1	075-31803-000	1	075-31814-000	1
11	Panel, Front	075-28558-000	1	075-31846-000	1	075-31286-000	1	075-31815-000	1
12	Support	075-37936-000	2	075-37936-000	2	075-37936-000	2	075-37936-000	2
13	Support	075-37945-000	1	075-37945-000	1	N/A	-	N/A	-
14	Clip	N/A	-	N/A	-	075-37938-000	2	075-37938-000	2
15	Bracket	N/A	-	075-37937-000	1	075-37937-000	1	075-37937-000	1
16	Channel	075-37947-000	10	075-37946-000	10	075-37943-000	12	075-37939-000	12
17	Channel	N/A	-	N/A	-	075-37944-000	4	075-37940-000	4

ENCLOSURE KIT OPTIONS (CONT'D)

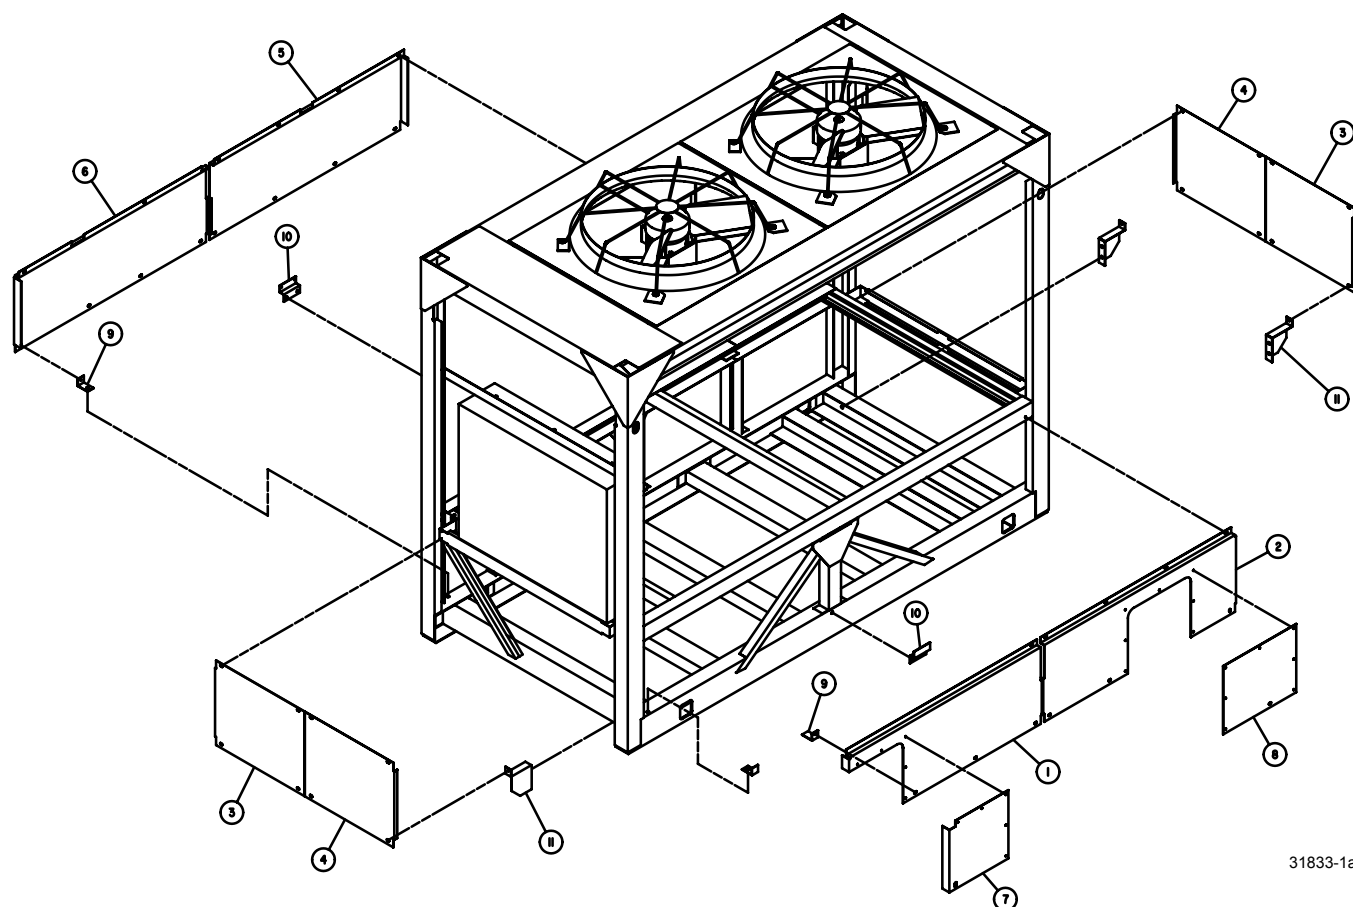

31833-1a


FIG. 19 – LOUVERED ENCLOSURE (BOTTOM SECTIONS) - YCUL0030, YCUL0036 AND YCUL0040 SHOWN

TABLE 17 – LOUVERED ENCLOSURE (Bottom Sections)

LOUVERED ENCLOSURE (BOTTOM SECTIONS)		YCUL0016 & YCUL0026		YCUL0030, 0036 & YCUL0040		YCUL0046, 0050, 0056, 0060 & YCUL0066		YCUL0076, 0080 0086 & YCUL0090	
ITEM #	DESCRIPTION	475-31868-000	QTY	475-31833-000	QTY	475-31299-000	QTY	475-31807-000	QTY
1	Panel, Side	075-31822-000	1	075-31856-000	1	075-31287-000	1	075-31821-000	1
2	Panel, Side	075-31883-000	1	075-31857-000	1	075-31290-000	1	075-31822-000	1
3	Panel, Front	075-31884-000	2	075-31860-000	2	075-31293-000	2	075-31820-000	2
4	Panel, Front	075-31885-000	2	075-31861-000	2	075-31718-000	2	075-31819-000	2
5	Panel, Side	075-31886-000	1	075-31859-000	1	075-31292-000	1	075-31292-000	1
6	Panel, Side	075-31887-000	1	075-31858-000	1	075-31291-000	1	075-31291-000	1
7	Panel	075-31723-000	1	075-31723-000	1	075-31719-000	1	075-31722-000	1
8	Panel	075-31725-000	1	075-31724-000	1	075-31720-000	1	075-31721-000	1
9	Clip	075-31285-000	12	075-31285-000	12	075-31285-000	12	075-31285-000	12
10	Bracket	075-31294-000	8	075-31294-000	8	075-31294-000	10	075-31294-000	10
11	Bracket	075-31711-000	2	075-31711-000	2	075-31711-000	2	075-31711-000	2

Chiller Options

REMOTE CONTROL CENTER

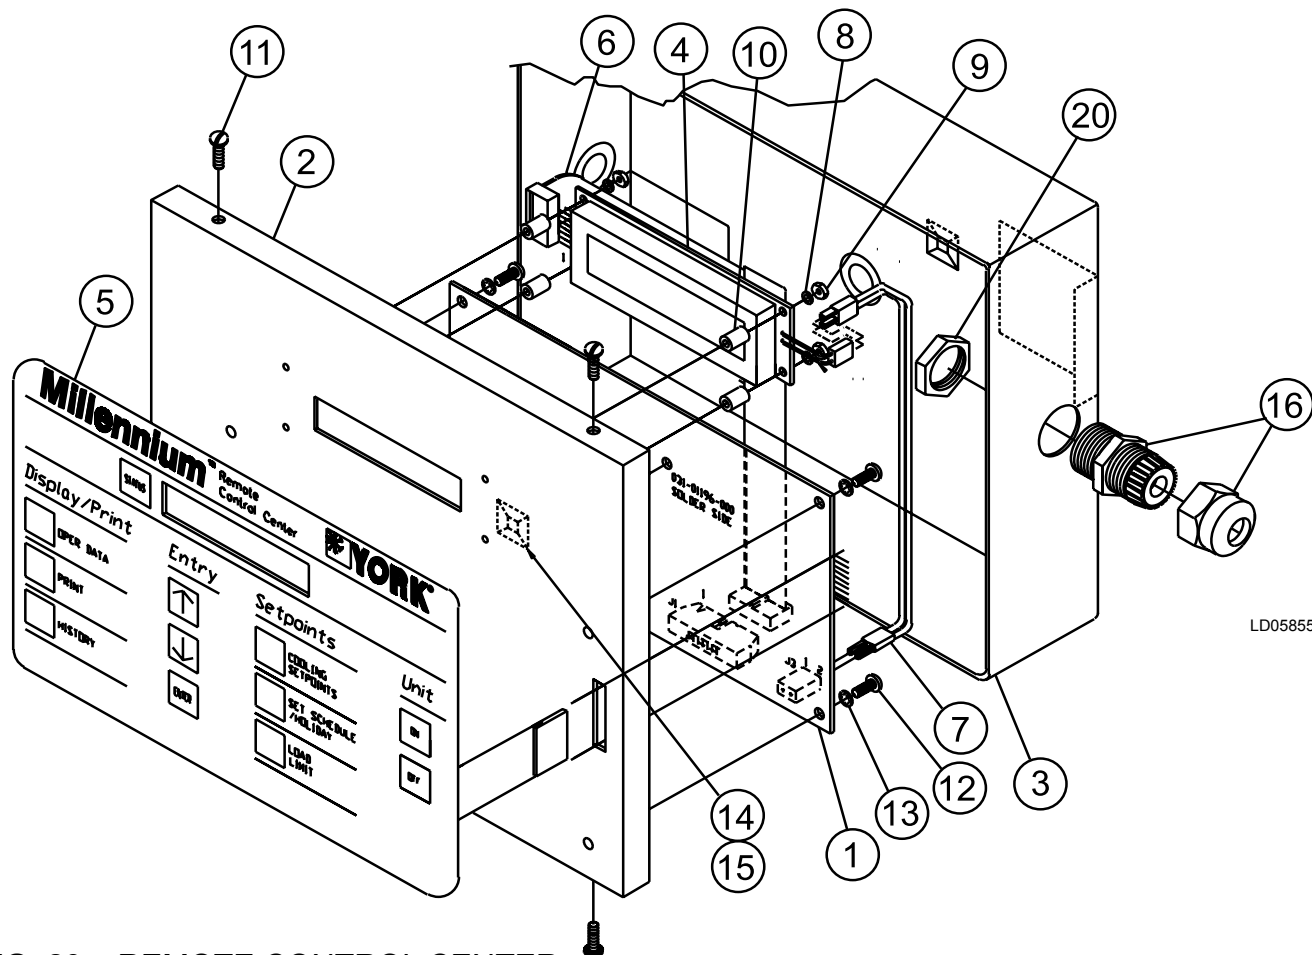


LD05855

FIG. 20 – REMOTE CONTROL CENTER

TABLE 18 – REMOTE CONTROL CENTER PARTS - 371-02485-104 (60HZ)

ITEM NUMBER	QTY	DESCRIPTION	PART NUMBER
1	1	CONTROL, MICROBOARD	031-01196-000
2	1	COVER, REMOTE CONTROL	371-02485-311
3	1	BASE, REMOTE CONTROL	071-02485-320
4	1	DISPLAY, LCD	031-01110-000
5	1	SWITCH, KEYPAD	024-30930-000
6	1	RIBBON CABLE	071-01289-211
7	1	WIRE CABLE	071-01289-212
10	4	SPACER, NYLON 1/4 OD X 7/16 LONG	021-17575-000
11	1	TRANSFORMER	025-29917-002
14	3	CABLE TIE	025-25155-000
15	1	EPROM	031-02016-003
16	1	CABLE FITTING	025-05701-000
17	2	INSULATOR, RECIPAK ROOFTOP	071-01730-000
18	2	MODULE, LAN TRANSIENT PROTECTION (LTP)	031-01586-000
19	1	INSTALLATION INSTRUCTIONS	071-01289-002
20	1	NUT, LOCKING, HEYCO - 3232	025-31732-000
21	1	OPERATOR'S MANUAL	150.62-NM1

REMOTE CURRENT/TEMPERATURE RESET PARTS BREAKDOWN

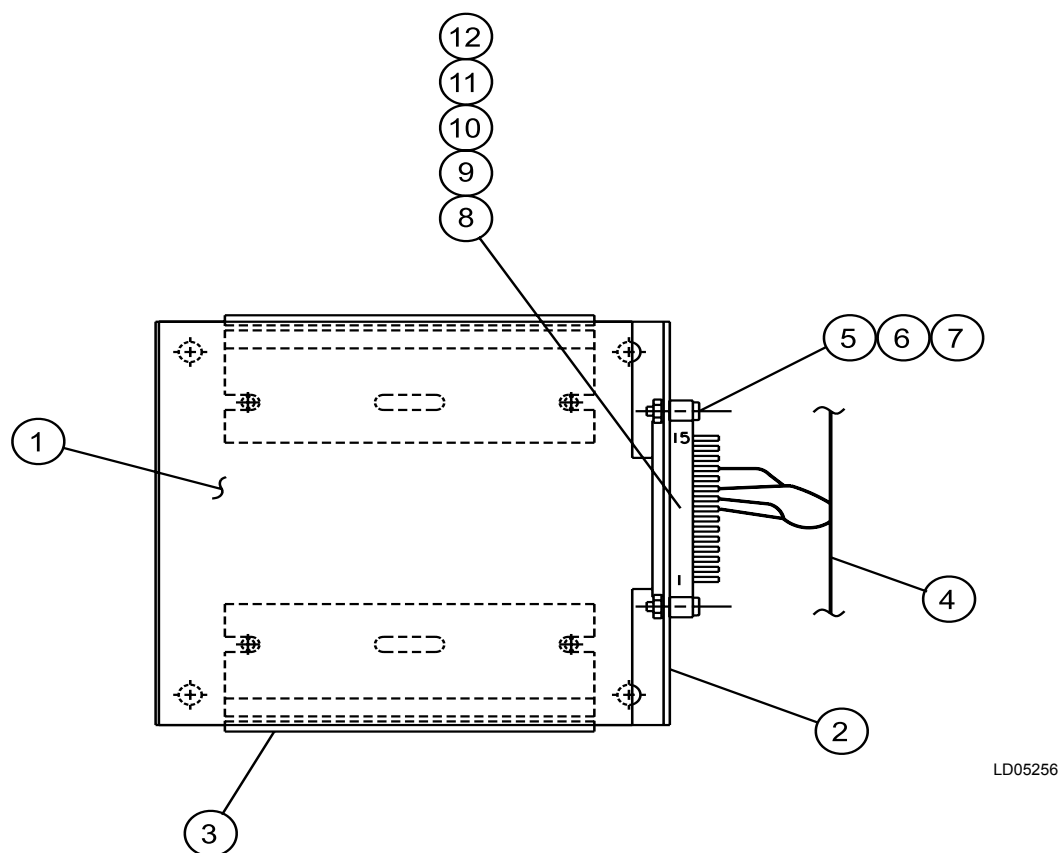

LD05256

FIG. 21 – REMOTE CURRENT/TEMPERATURE RESET COMPONENTS

TABLE 19 – REMOTE CURRENT OR TEMPERATURE RESET KIT NUMBER 375-90914-000

ITEM NUMBER	QTY	DESCRIPTION	PART NUMBER
1	1	CONTROL, REMOTE CURRENT/TEMPERATURE	031-00814-000
2	1	BRACKET, REMOTE CURRENT/TEMPERATURE RESET	371-01232-361
3	1	TRACK, SNAP	071-01232-363
4	1	WIRING, REMOTE CURRENT/ TEMPERATURE RESET	571-02492-231*
5	2	SCREW, MACHINE PAN HEAD #4	021-17594-000
6	2	NUT, HEX #4-40UNC-2B	021-10056-000
7	2	LOCKWASHER, HELICAL SPRING #4 REG.	021-17576-000

* Refer to **Table 19a**

TABLE 19a – REMOTE RESET WIRING

ITEM NUMBER	QTY	DESCRIPTION	PART NUMBER
8	2	CONTROL, SOC AWG WIRE SIZE 20	025-19674-000
9	2	TERMINAL PUSH ON STRAIGHT	025-06642-000
10	4	TUBING HEAT SHRINKABLE 1/8 ID	025-29632-000
11	1	HGS CONNECTOR ELECTRICAL PLUG	025-32564-000*
12	1	CONNECTOR EDGE, 15 POSITION, 0.125	025-29631-000

RECOMMENDED SPARE PARTS

York Model YCUL Style C Air Cooled Liquid Chillers
Suggested Spare Parts List for Critical Duty Applications

TABLE 20 – RECOMMENDED SPARE PARTS - YCUL0096-YCUL0140 CHILLERS

PAGE REF. & ITEM NUMBER	DESCRIPTION	MODEL NUMBER YCUL	PART NUMBER
Page 6, Item 1	Fan Motor (Standard)	-17	024-30900-002
		-28	024-30900-002
		-40	024-30900-004
		-46	024-30900-001
		-50	024-30900-001
		-58	024-30900-003
Page 6, Item 1	Fan Motor (Low Noise)	-17	024-30933-002
		-28	024-30933-002
		-40	024-30933-004
		-46	024-30933-001
		-50	024-30933-001
		-58	024-30933-003
Page 6, Item 2	Fan Blade (Standard)	All	026-37577-000
	Fan Blade (Low Noise)	All	026-37579-000
Page 8 and 9, Item 10	Core, Dehydrator	All	026-18328-000
Page 11, Item OIL	Oil, Compressor (Type 'F')	R-22	011-00434-000
	Oil, Compressor (Type 'V')	407-C	011-00948-000
Page 17, Item 5A	Microboard	All	031-02050-001
Page 17, Item 5B	EPROM	All	031-02049-001
Page 17, Item 10B	Fuse	All	025-38360-000
Page 22-67, Item 5B	Fan Contactor	See Table 6	024-34300-000
			024-34302-000
Page 22-67, Item 5F	Fan Overload	See Table 6	024-33170-000
			024-33169-000
			024-33168-000
Page 71, Item 1	Sensor, Outside Air Temperature	All	025-28663-001
Page 71, Items 3 & 4	Switch, High Pressure Cutout	All	375-00453-057
			375-00453-058
			375-00453-059
Page 71, Item 6	Transducer, Suction Pressure (0-200psi)	All	025-29583-000
Page 71, Item 7	Transducer, Discharge Pressure (0-400psi)	All	025-29139-001
Page 71, Item 8	Sensor, Discharge Air Temperature	All	025-28935-000

All parts should be purchased from your local YORK
Sales and Service Center.

NOTES



P.O. Box 1592, York, Pennsylvania USA 17405-1592
Copyright © by Johnson Controls 2013
Form 150.63-RP5 (713)
Issue Date: July 31, 2013
Supersedes: 150.63-RP5 (903)

800-861-1001
www.johnsoncontrols.com

Subject to change without notice. Printed in USA
ALL RIGHTS RESERVED