

# PACKAGED LIQUID CHILLERS WATER COOLED & REMOTE-RECIPROCATING HERMETIC

**RENEWAL PARTS** 

Supersedes: Nothing

795

FORM 150.55-RP3


# **WATER COOLED MODELS**

YCWZ33AB, YCWZ44AB, YCWZ47CC, YCWZ77CC, YCWZ88CC, YCWZ88HD, YCWZ89HD, YCWZ99HD

## REMOTE CONDENSER MODELS

YCRZ33AO, YCRZ44AO, YCRZ47CO, YCRZ77CO, YCRZ88CO, YCRZ88HO, YCRZ89HO, YCRZ99HO

**STYLE A** 50 & 60 HZ

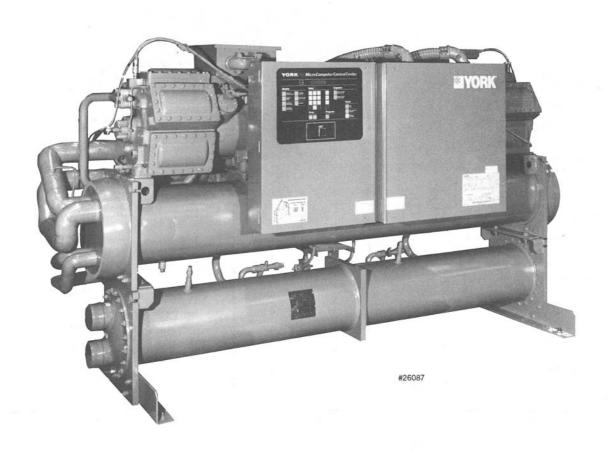

# **WARNING**

# HIGH VOLTAGE is used in the operation of this equipment DEATH OR SERIOUS INJURY may result if personnel fail to observe precautions.

Work on electronic equipment should not be undertaken unless the individual(s) has (have) been trained

in the proper maintenance of the equipment and is (are) familiar with its potential hazards.

Shut off power supply to equipment before beginning work and follow lockout procedures. When working inside equipment with power off, take special care to discharge every capacitor likely to hold dangerous potential.


Be careful not to contact high voltage connections when installing or operating this equipment.


### **LOW VOLTAGE**

**DO NOT** be misled by the term "low voltage". Voltages as low as 50 volts may cause death.


## **NOMENCLATURE**

The model number denotes the following characteristics of the unit:

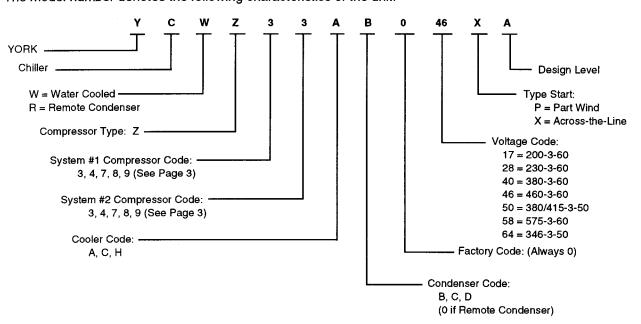


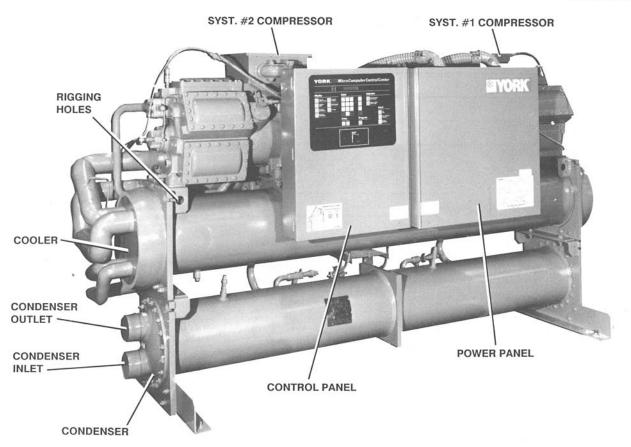

#26087

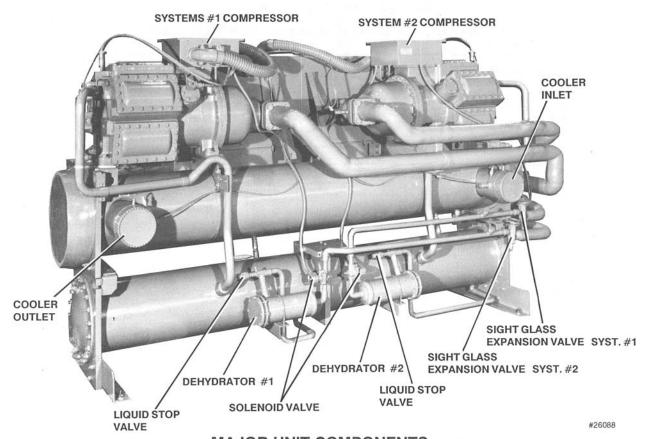

## **COMPRESSOR NOMENCLATURE**

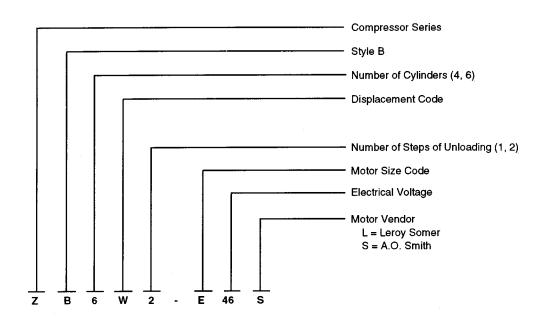

# COMPRESSOR MODEL NUMBERS (WATER COOLED AND REMOTE CONDENSER UNIT MODELS)

UNIT MOI	UNIT MODEL		YCWZ44AB YCRZ44AO	YCWZ47CC YCRZ47CO	YCWZ77CC YCRZ77CO
COMPRESSOR	SYSTEM No. 1	ZB4K1-B	ZB4M1-C	ZB4M1-C	ZB6S2-D
MODEL	SYSTEM NO. 2	ZB4K1-B	ZB4M1-C	ZB6S2-D	ZB6S2-D
UNIT MOD	DEL	YCWZ88CC YCRZ88CO	YCWZ88HD YCRZ88HO	YCWZ89HD YCRZ89HO	YCWZ99HD YCRZ99HO
COMPRESSOR	SYSTEM NO. 1	ZB6W2-E	ZB6W2-E	ZB6W2-E	ZB6AE2-E
MODEL	SYSTEM NO. 2	ZB6W2-E	ZB6W2-E	ZB6AE2-E	ZB6AE2-E

For replacement compressors and/ or parts, refer to Form 180.45-RP2. Remanufactured compressors are available from the Wheeling, Illinois manufacturing facility. Contact the local YORK Applied Systems Office.

# <sup>S</sup>COMPRESSOR MOTOR CONTACTORS

VOLTAGE	TYPE			UNIT N	MODEL <sub>.</sub>		
CODE	START	-	SYSTEM	YCWZ33AB YCRZ33AO	YCWZ44AB YCRZ44AO	YCWZ47CC YCRZ47CO	YCWZ77CC YCRZ77CO
-17	Α	1, 2	<u>-</u>	-	-	-	
-17	Р	1, 2	024-25551	024-25551	024-25550	024-25550	
-28	Α	1, 2		-	-	-	
-20	Р	1, 2	024-25551	024-25551	024-25550	024-25550	
-40	Α	1, 2	024-25551	024-25551	024-25549	024-25549	
-40	Р	1, 2	024-25551	024-25551	024-25549	024-25549	
-46	Α	1, 2	024-25551	024-25551	024-25551	024-25551	
-40	, P	1, 2	024-25551	024-25551	024-25551	024-25551	
-50	Α	1, 2	024-25551	024-25551	024-25551	024-25551	
-50	Р	1, 2	024-25551	024-25551	024-25551	024-25551	
-58	Α	1, 2	024-25551	024-25551	024-25551	024-25551	
-50	Р	1, 2	024-25551	024-25551	024-25551	024-25551	
-64	Α	1, 2	024-25551	024-25551	024-25550	024-25550	
-0-4	Р	1, 2	024-25551	024-25551	024-25550	024-25550	

VOLTAGE	TYPE	i L	UNIT MODEL					
CODE		SYSTEM	YCWZ88CC YCRZ88CO	YCWZ88HD YCRZ88HO	YCWZ89HD YCRZ89HO	YCWZ99HD YCRZ99HO		
-17	Α	1, 2	-	-	-	-		
-17	Р	1, 2	024-25549	024-25549	024-25549	024-25549		
-28	A	1, 2	-	-	-	-		
-20	P	1, 2	024-25549	024-25549	024-25549	024-25549		
-40	Α	1, 2	024-25549	024-25549	024-25549	024-25549		
-40	Р	1, 2	024-25549	024-25549	024-25549	024-25549		
-46	Α	1, 2	024-25550	024-25550	024-25549	024-25549		
-40	Р	1, 2	024-25550	024-25550	024-25549	024-25549		
-50	Α	1,2	024-25550	024-25550	024-25549	024-25549		
-50	P	1, 2	024-25550	024-25550	024-25549	024-25549		
-58	Α	1, 2	024-25550	024-25550	024-25550	024-25550		
-50	P	1, 2	024-25550	024-25550	024-25550	024-25550		
-64	Α	1, 2	024-25549	024-25549	024-25549	024-25549		
-04	Р	1, 2	024-25549	024-25549	024-25549	024-25549		

#### NOTES:

YORK INTERNATIONAL 5


s = Recommended Stock Spare Parts

P = Part Winding


Part Winding (Start) compressors require two (2) contactors per compressor (system).

A = Across-the-Line

Across-the-Line (Start) compressors require one (1) contactor per compressor (system). Contactors include suppressors.

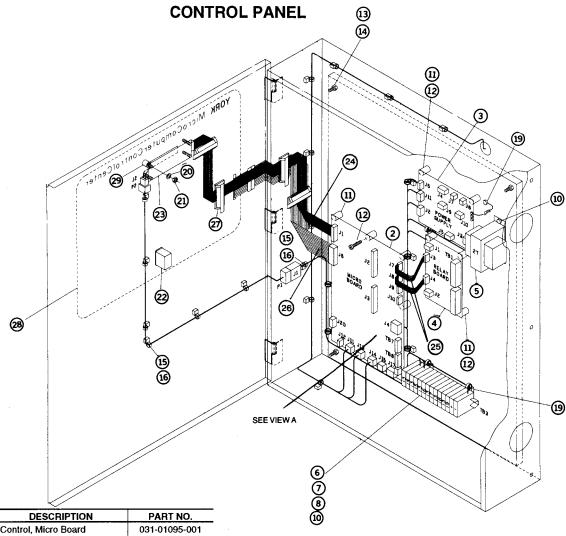


ITEM	QTY/UNIT	DESCRIPTION	PART NO.
<sup>\$</sup> 2	1	Control, Micro Board	031-01095-001
<sup>\$</sup> 3	1	Control, Power Supply	031-01094-000
<sup>s</sup> 4	1	Control, Relay Board	031-01093-000
5	1	Transformer, Control	025-27911-000
6	14	Block, Terminal	025-20945-000
7	1	End, Terminal Block	025-20946-000
8	1	Strip, Marker (14 Pole)	025-29159-000
10	5	Scr., Tap TH. #8 x 3/8 Lg	021-13783-000
11	16	Nut, Expansion	021-14661-000
12	16	Scr., Tap Pan Hd. #8 x 1-1/4	021-14667-000
13	4	Lock Washer, TH. Int. 3/8	021-01155-000
14	4	Nut, Hex 3/8 UNC-2B	021-00467-000
15	15	Lock Washer, TH. Int. #10	021-01137-000
16	15	Nut, Hex #10-24	021-08282-000
17	3	Hsg., Connr. Plug, Mini-Univ 1	025-28383-000
18	1	Harness, Hinged Panel 1	571-01226-212
19	12	Scr., Tap, Pan Hd. #10 x 1/2	021-13789-000
20	4	Lock Washer, Hel. Spg. #4	021-17576-000
21	4	Nut, Hex #4-40	021-10056-000
22	1	Switch, Unit ON/OFF	024-25517-000
23	1	Display, LCD	031-01110-000
24	1	Ribbon Cable	031-01109-211
25	2	Ribbon Cable	031-01109-212
26	4	Ribbon Cable	031-01109-213
27	3	Clamp, Ribbon Wire	025-25156-000
28	1	Switch, Keypad	024-25504-000
29	4	Spacer, Nylon 7/16 Lg.	021-17575-000
32-1	1	Harness, Sensor - Suct. #1 2	371-01263-231
32-2	1	Harness, Sensor - Oil #1 2	371-01263-233
32-3	1	Harness, Sensor - Suct. #2 2	371-01263-232
32-4	1	Harness, Sensor - Oil #2 2	371-01263-234
32-5	1	Harness, Sensor - LWT 2	371-01263-241
32-6	1	Harness, Sensor - EWT <sup>2</sup>	371-01263-242
33	1	Lable, Caution 1	035-03908-000
34	1	Strap, Cable <sup>1</sup>	025-18167-000
° 35	1	EPROM	031-01096-001
36	3	Suppressor for Options 3	031-00808-000

 

#### NOTES:

- s = Recommended Stock Spare Parts
- 1. Not Shown
- 2. Not Showm. Sensor Harness without Sensor.
- Not shown, shipped loose for field use to place across the coil of any relay or contactor connected to the Control Panel or its 115VAC Power Supply including the application of:
  - Alarm Circuit Relays
  - Pump Starter (Contactor)
  - Flow Switch Inputs
  - BAS Inputs

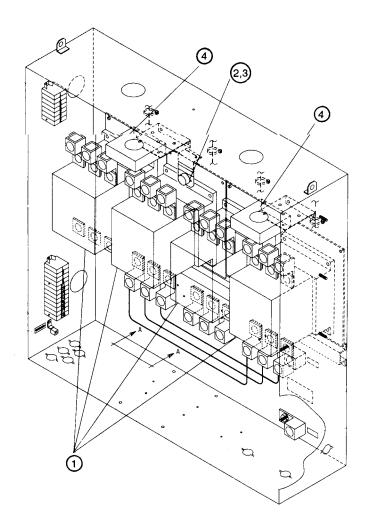


**POWER PANEL** 

(SHOWN IS FOR PART-WINDING STARTING)

# POWER PANEL CONTROL COMPONENTS

ITEM NO.	ርፓሃ የ <del>ር</del> ጹ UNIT	DESCRIPTION	いいて、 CODE	ዮጵዮፕ ነ⁄©. ALL MODELS
<sup>s</sup> 1	See p. 5	Contractor (w/Suppressor), Compressor	ALL	SEE PAGE 5
<sup>s</sup> . 2	1	FUSE Control (7 amp), 1FU	ALL	025-25515-000
3	1	Fuseholder (Use with Item 2)	ALL	025-17407-000
4	2	Transformer, Current	ALL	025-27408-000

<sup>&</sup>lt;sup>s</sup> Recommended Stock Spare Part

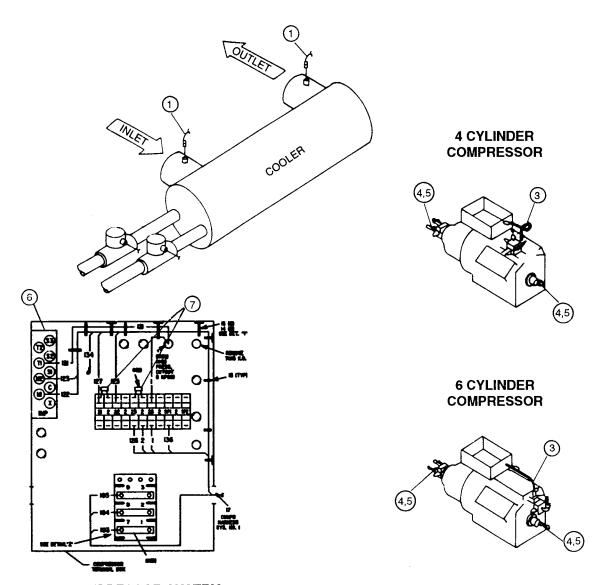

"Z" COMPRESSOR SYSTEM


TYPICAL COMPRESSOR MOTOR TERMINAL BOX

## **CONTROL COMPONENTS**

ITEM NO.	QTY PER UNIT	DESCRIPTION	VOLT.	PART NO. ALL MODELS
		SENSORS		
<sup>s</sup> 1	2	Water Temperature (LWT,RWT)	ALL	025-29964-000
2	1	Heat Conductive Compound (Use with Item 1)	ALL	013-00898-000
<sup>s</sup> 3	2	High Pressure Cutout	ALL	025-28399-000
<sup>\$</sup> 4	4	Transducer (Oil & Suction Pressure)	ALL	025-29139-002
5	4	Brass Adaptor (Use with Item 4)	ALL	023-16272-000
6	2	Module, Motor Protector	ALL	025-07522-000
<sup>\$</sup> 7	See Table Below	Suppressor, Compressor Unloading Solenoids and Liquid Line Solenoids	ALL	031-01117-000

UNIT MODEL	YCWZ33AB, YCRZ33AO	YCWZ44AB, YCRZ44AO	YCWZ47CC, YCRZ47CO	YCWZ77CC, YCRZ77CO
QUANTITY	4	4	5	6
UNIT MODEL	YCWZ88CC, YCRZ88CO	YCWZ88HD, YCRZ88HO	YCWZ89HD,YCRZ89HO	YCWZ99HD, YCRZ99HO

<sup>&</sup>lt;sup>s</sup> Recommended Stock Spare Part

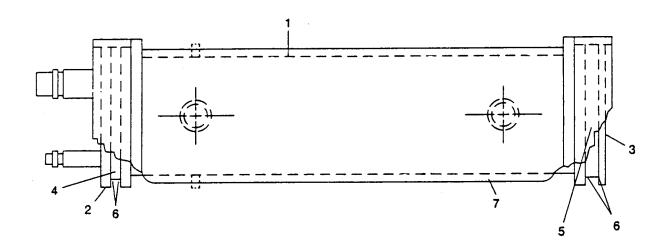

## **COOLER COMPONENTS**

ITEM	QTY			UNIT	MODEL	
NO.	PER UNIT	DESCRIPTION	YCWZ33AB YCRZ33AO	YCWZ44AB YCRZ44AO	YCWZ47CC YCRZ47CO	YCWZ77CC YCRZ77CO
1	1	Cooler, Less Insulation (Includes Items 2 thru 6)	375-17501	375-17501	375-17505	375-17505
2	1	Head, Connection End	375-17525	375-17525	375-17553	375-17553
3	1	Head, Back End	375-17523	375-17523	375-17554	375-17554
4	1	Pass Baffle, Connection End	075-17031	075-17031	075-17544	075-17544
5	1	Pass Baffle, Back End	375-18173	375-18173	375-18174	375-18174
s 6 <sup>1</sup>	4	Gasket, Pass Baffle & Head	075-17033	075-17033	075-17546	075-17546
7	3	Insulation, 3/4" x 49" x 65"	010-04198	010-04198	010-04198	010-04198

ITEM	QTY			UNIT N	MODEL	
NO.	PER UNIT	DESCRIPTION	YCWZ88CC YCRZ88CO	YCWZ88HD YCRZ88HO	YCWZ89HD YCRZ89HO	YCWZ99HD YCRZ99HO
1	1	Cooler, Less Insulation (Includes Items 2 thru 6)	375-17505	375-17511	375-17511	375-17511
2	1	Head, Connection End	375-17553	375-18009	375-18009	375-18009
3	1	Head, Back End	375-17554	375-18008	375-18008	375-18008
4	1	Pass Baffle, Connection End	075-17544	375-17085	375-17085	375-17085
5	1	Pass Baffle, Back End	375-18174	075-17084	075-17084	075-17084
s 6 1	4	Gasket, Pass Baffle & Head	075-17546	075-17082	075-17082	075-17082
7	3	Insulation, 3/4" x 49" x 65"	010-04198	010-04198	010-04198	010-04198

# NOTES:

Recommended Stock Spare Part

1. When replacing gasket, Item 6, use:

Sealer, Gasket, 013-02827
Primer, 013-01753

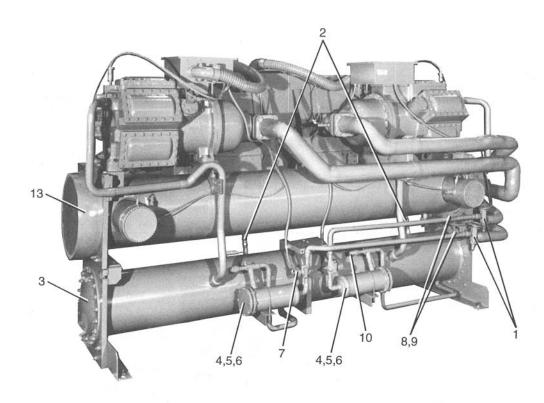


FIG. 1 – UNIT REFRIGERANT COMPONENTS (WATER COOLED MODEL SHOWN)

## **UNIT COMPONENTS**

## WATER COOLED MODELS

			TITLE TO COLLEGE	IIIODEEO		
ITEM NO.	QTY PER	DESCRIPTION			NIT DEL	
NO.	UNIT		YCWZ33AB	YCWZ44AB	YCWZ47CC	YCWZ77CC
s 1	2	Valve, Thermal Expansion	025-23211	025-23211	025-21955	025-21955
<sup>s</sup> 2	2	Valve, Relief	022-08870	022-08870	022-08870	022-08870
3	1	Condenser		SEE P.	AGE 14	
				UNIT	MODEL	
			YCWZ88CC	YCWZ88HD	YCWZ89HD	YCWZ99HD
s 1	2	Valve, Thermal Expansion	025-21955	025-21955	025-21955	025-21955
s 2	2	Valve, Relief	022-08870	022-08870	022-08870	022-08870
3	1	Condenser		SEE P.	AGE 14	

### REMOTE CONDENSER MODELS

ITEM NO.	QTY PER	DESCRIPTION		DEL <sub>.</sub>		
NO.	UNIT		YCRZ33AO	YCRZ44AO	YCRZ47CO	YCRZ77CO
s 1	2	Valve, Thermal Expansion	025-21954	025-21954	025-23211	025-23211
				UNIT	MODEL	
			YCRZ88CO	YCRZ88HO	YCRZ89HO	YCRZ99HO
s 1	2	Valve, Thermal Expansion	025-23211	025-23211	025-23211	025-23211

s Recommended Stock Spare Part

# UNIT COMPONENTS (Continued) (See Fig. 1)

## WATER COOLED AND REMOTE CONDENSERMODELS

ITEM	QTY	DESCRIPTION	UNIT MODEL				
NO.	UNIT	DESCRIPTION	YCWZ33AB YCRZ33AO	YCWZ44AB YCRZ44AO	YCWZ47CC YCRZ46CO	YCWZ77CC YCRZ77CO	
<sup>\$</sup> 4	2	Dehydrator, Body (Permanent Core)	026-20145	026-20145	-	-	
5	2	Dehydrator, Body (Replaceable Core)	-	-	026-30598	026-30598	
<sup>\$</sup> 6	4	Dehydrator, Core (Use with Item 5)	•	-	026-18328	026-18328	
7	2	Valve, Liquid Solenoid	025-17513	025-17513	025-17513	025-17513	
8	2	Moisture Indicator, Body	026-32397	026-32397	026-32397	026-32397	
9	2	Moisture Indicator, Cap Assembly	026-32800	026-32800	026-32800	026-32800	
10	2	Valve, Liquid Stop	025-10510	025-10510	025-10510	025-10510	
11	2	Compressor		SEE F	AGE 4		
12	16	Pad Isolator	075-00820	075-00820	075-00820	075-00820	
13	1	Cooler	SEE PAGE 9				

ITEM NO.	QTY PER UNIT	DESCRIPTION	UNIT MODEL					
			YCWZ88HD YCRZ88CO	YCWZ88HD YCRZ88HD	YCWZ89HD YCRZ88HO	YCWZ99HD YCRZ99HO		
5	2	Dehydrator, Body (Replaceable Core)	026-30598	026-30598	026-30598	026-30598		
<sup>s</sup> 6	4	Dehydrator, Core (Use with Item 5)	026-18328	026-18328	026-18328	026-18328		
7	2	Valve, Liquid Solenoid	025-17513	025-17513	025-17513	025-17513		
8	2	Moisture Indicator, Body	026-32397	026-32397	026-32397	026-32397		
9	2	Moisture Indicator, Cap Assembly	026-32800	026-32800	026-32800	026-32800		
10	2	Valve, Liquid Stop	025-10510	025-10510	025-10510	025-10510		
11	2	Compressor	SEE PAGE 4					
12	16	Pad Isolator	075-00820	075-00820	075-00820	075-00820		
13	1	Cooler		SEE P	AGE 9			

<sup>&</sup>lt;sup>s</sup> Recommended Stock Spare Part

# COMPONENTS FOR UNIT OPTIONS 1

ITEM NO.	QTY PER UNIT	DESCRIPTION	VOLT. CODE	ALL MODELS
POWER DIS	SCONNECT SWITC	eH (PDS)		
		Switch, Disconnect (Across-the-Line Start)	-17 -28 -40 -46 -50	SEE PAGE 13 FOR
A	1	Switch, Disconnect (Part-Winding Start)	-64 -17 -28 -40 -46 -50 -58 -64	MODELS
	OTV			
ITEM NO.	QTY PER UNIT	DESCRIPTION	VOLT. CODE	ALL MODELS
CHICAGO C	ODE			
В	2	Valve Relief (YCW Units Only)	ALL	022-08894-000
CONTROL 1	TRANSFORMER (1	T)		
С	1	Transformer	-17 -28 -40 -46 -50 -58	025-28664-001 025-28664-002 025-28664-003 025-28664-002 025-28664-003
D	2	Fuse, Transformer	-64 -17 -28 -40 -46 -50 -58 -64	N.A. 025-27972-000 025-27971-000 025-27970-000 025-27922-000 025-27970-000 025-17360-000 N.A.
DUMP CONT	TOOL KIT/DELAY	POARD KIT		
E	TROL KIT/RELAY E 1	Relay Control Board	ALL	031-01093-000
DISCHARGE	PRESSURE REA			
F	2*	Transducer, Discharge Pressure	ALL	025-29139-001
G	2*	Adaptor, Transducer (Use with Item F)	ALL	023-16272-000
LOADMINDE	ER (HOT GAS BYP	ASS) <sup>4</sup>		
		MODEL YCWZ		
H	2 2 .	Valve, Regulator, Hot Gas Suppressor MODEL YCRZ	ALL ALL	025-27647-000 031-01117-000
J K	2	Valve, Regulator, Hot Gas Suppressor	ALL ALL	025-27647-000 031-01117-000

NOTES (For Pages 12 - 13):

- One required per compressor
- Not Applicable

#### N.A. Not Available

1. Parts listed on pages 12 and 13 are for single replacement parts contained in the Option Kits. Part Numbers provided DO NOT reflect part numbers for complete Option Kits. See the Installation Operation Manual, Form 150.55-NM3 for complete Option Kit Part Numbers.

- All other parts for this option are the same as standard, including cooler, controls, and unit components.
- This option also requires Relay Board Kit, Item I, and Discharge 3. Pressure Readout Kit, Items J and K.
- Loadminder Option also requires Relay Board Kit, Item E. 4.
- Used with Remote Control Center (If Specified).

## COMPONENTS FOR UNIT OPTIONS 1

ITEM	UNIT MODEL									
ITEM	YCWZ33AB	YCWZ44AB	YCWZ47CC	YCWZ77CC	YCWZ88CC	YCWZ88HD	YCWZ89HD	YCWZ99HD		
NO.	YCRZ33AO	YCRZ44AO	YCRZ47CO	YCRZ77CO	YCRZ88CO	YCRZ88HO	YCRZ89HO	<del></del>	YCRZ99HO	
POWER D	DISCONNECT S	WITCH (PDS								
	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	
	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25564	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
Α	024-25564	024-25564	024-25564	024-25564	024-25563	024-25563	024-25563	024-25563	024-25563	
	024-25565	024-25565	024-25564	024-25564	024-25564	024-25564	024-25564	024-25564	024-25563	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25564	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	
	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	024-25565	


NO.	QTY PER UNIT	DESCRIPTION	VOLT. CODE	ALL MODELS
FLOW CON	ITROL SWITCH			
L	1	Switch, Flow	ALL	024-26116-000
REMOTE C	ONTROL CENTER			
М	1	Control, Micro Board	ALL	031-01196-000
WALL-MOU	JNTED TRANSFOR	RMER <sup>5</sup>		_
N	1	Primary Voltage 115/1/60	-	025-29917-001
1.4		Primary Voltage 230/1/50	-	025-29917-002
	l	T Timary Voltage Zee/ 1/ee		020 200 17 002
MULTIPLE	UNIT SEQUENCIN	-		020 20017 002
MULTIPLE O	UNIT SEQUENCIN	-	ALL	
	UNIT SEQUENCIN 1	G KIT	ALL ALL	025-28935-000
0	1	G KIT Sensor, Temperature		025-28935-000
O P	1	G KIT Sensor, Temperature		025-28935-000 025-29900-000 031-00814-000
O P BAS INTER	1 1	G KIT Sensor, Temperature Resistor, 180 Ohm Fixed	ALL	025-28935-000 025-29900-000
O P BAS INTER	1 1 1 FACE	G KIT Sensor, Temperature Resistor, 180 Ohm Fixed	ALL	025-28935-000 025-29900-000
O P BAS INTER Q MUFFLER, R	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	G KIT Sensor, Temperature Resistor, 180 Ohm Fixed  Control, Remote Reset	ALL	025-28935-000 025-29900-000 031-00814-000

#### NOTES (For Pages 12 - 13):

- \* One required per compressor
- Not Applicable

#### N.A. Not Available

- Parts listed on pages 12 and 13 are for single replacement parts contained in the Option Kits. Part Numbers provided **DO NOT** reflect part numbers for complete Option Kits. See the Installation Operation Manual, Form 150.55-NM3 for complete Option Kit Part Numbers.
- 2. All other parts for this option are the same as standard, including cooler, controls, and unit components.
- This option also requires Relay Board Kit, Item I, and Discharge Pressure Readout Kit, Items J and K.
- 4. Loadminder Option also requires Relay Board Kit, Item E.
- 5. Used with Remote Control Center (If Specified).

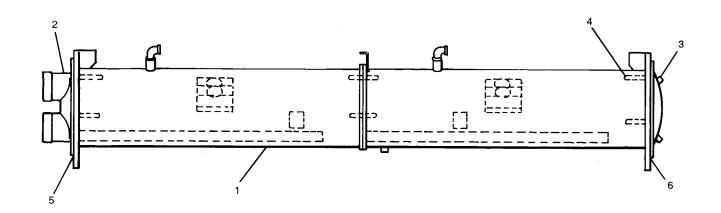

## **CONDENSER COMPONENTS**

ITEM NO.	QTY		UNIT MODEL				
	PER UNIT	DESCRIPTION	YCWZ33AB	YCWZ44AB	YCWZ47CC	YCWZ77CC	
1	1	Condenser (Includes Items 2 thru 7)	375-01016-000	375-01016-000	375-01017-000	375-01017-000	
2	1	Head, Front End	375-00390-001	375-00390-001	375-00390-001	375-00390-001	
3	1	Head, Back End	375-00391-001	375-00391-001	375-00391-001	375-00391-001	
4	-	Tube Condenser No. Tubes per Condenser	007-07864-000 73	007-07864-000 73	007-07864-000 95	007-07864-000 95	
s 5 <sup>1</sup>	1	Gasket, Head, Front	075-00394-001	075-00394-001	075-00394-001	075-00394-001	
s 6 1	1	Gasket, Head, Back	075-00394-001	075-00394-001	075-00394-001	075-00394-001	

ITEM	QTY PER UNIT	DESCRIPTION	UNIT MODEL				
NO.			YCWZ88CC	YCWZ88HD	YCWZ89HD	YCWZ99HD	
1	1	Condenser (Includes Items 2 thru 7)	375-01017-000	375-01018-000	375-01018-000	375-01018-000	
2	1	Head, Front End	375-00390-001	366-90688-000	366-90688-000	366-90688-000	
3	1	Head, Back End	375-00391-001	366-92136-000	366-92136-000	366-92136-000	
4	-	Tube Condenser End No. Tubes per Condenser	007-07864-000 95	007-07864-000 134	007-07864-000 134	007-07864-000 134	
<sup>s</sup> 5 <sup>1</sup>	1	Gasket, Head, Front	075-00394-001	067-77469-000	067-77469-000	067-77469-000	
s 6 <sup>1</sup>	1	Gasket, Head, Back	075-00394-001	067-77469-000	067-77469-000	067-77469-000	

# NOTES:

<sup>\*</sup> Recommended Stock Spare Part

1. When replacing gaskets, Items 5 & 6, use:

\* Sealer, Gasket, 013-02827

s Primer, 013-01753

15





Proud Sponsor of the 1996 U.S. Olympic Team

36USC380