

60 HZ MODELS

YDAJ87KU6, YDAJ88MU6, YDAJ99MW6


50 HZ MODELS

YDAJ87HU7, YDAJ97KU7, YDAJ98MU7
YDAJ99MU7, YDAJ99MW9

STYLE A

UNIT NOMENCLATURE

The model number denotes the following characteristics of the unit:

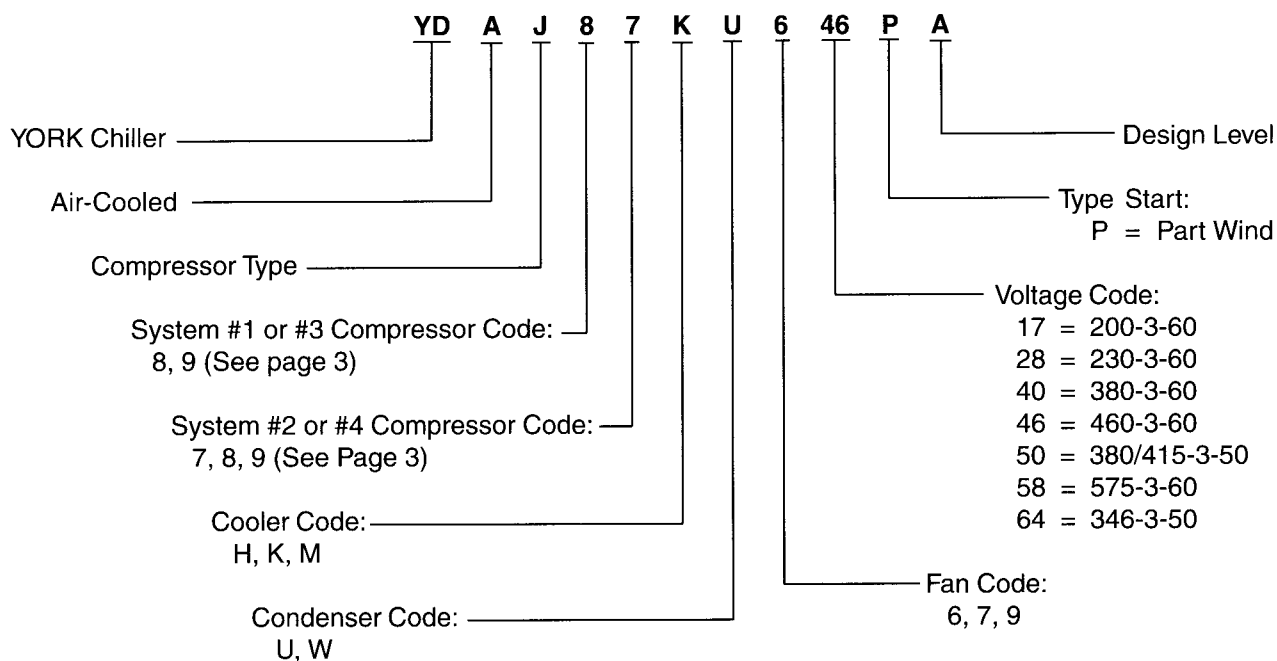

WARNING

HIGH VOLTAGE
is used in the operation of this equipment
DEATH OR SERIOUS INJURY
may result if personnel fail to observe precautions.

Work on electronic equipment should not be undertaken unless the individual(s) has (have) been trained in the proper maintenance of the equipment and is (are) familiar with its potential hazards.


Shut off power supply to equipment before work and follow lockout procedures. When working inside equipment with power off, take special care to discharge every capacitor likely to hold dangerous potential.

Be careful to not contact high voltage connections when installing or operating this equipment.

LOW VOLTAGE

DO NOT be misled by the term "low voltage". Voltages as low as 50 volts may cause death.

COMPRESSOR NOMENCLATURE

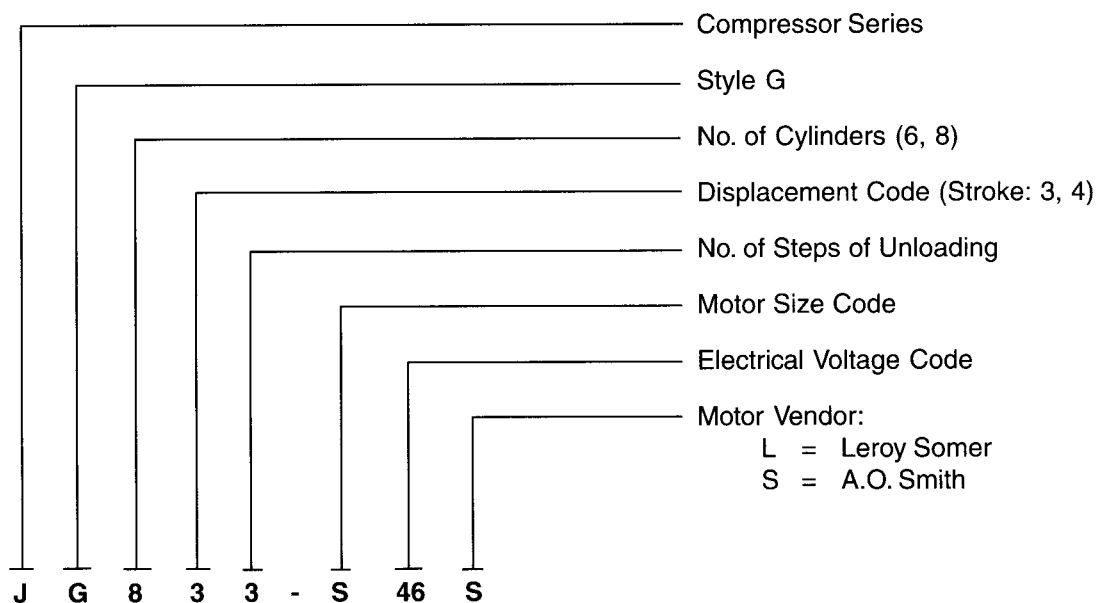

COMPRESSOR MODEL NUMBERS

60 HZ	UNIT MODEL	YDAJ87KU6	YDAJ88MU6	YDAJ99MW6
COMPRESSOR MODEL	SYSTEM NO. 1	JG832-S	JG832-S	JG842-V
	SYSTEM NO. 2	JG642-S	JG832-S	JG842-V
	SYSTEM NO. 3	JG833-S	JG833-S	JG843-V
	SYSTEM NO. 4	JG642-S	JG833-S	JG843-V

50 HZ	UNIT MODEL	YDAJ87HU7	YDAJ97KU7	YDAJ98MU7	YDAJ99MU7	YDAJ99MW9
COMPRESSOR MODEL	SYSTEM NO. 1	JG832-S	JG842-T	JG842-T	JG842-T	JG842-T
	SYSTEM NO. 2	JG642-S	JG642-S	JG832-S	JG842-T	JG842-T
	SYSTEM NO. 3	JG833-S	JG843-T	JG843-T	JG843-T	JG843-T
	SYSTEM NO. 4	JG642-S	JG642-S	JG833-S	JG843-T	JG843-T

For replacement compressors and/or parts, refer to Form 180.23-RP4.

Remanufactured compressors are available from the Wheeling, Illinois manufacturing facility.

Contact the local YORK International Office.

*COMPRESSOR MOTOR CONTACTORS

VOLT CODE/ TYPE START	SYSTEM	60 HZ UNIT MODELS		
		YDAJ87KU6	YDAJ88MU6	YDAJ99MW6
-17P	1, 3	024-25512-000	024-25512-000	NOT AVAILABLE
	2, 4	024-25512-000	024-25512-000	
-28P	1, 3	024-25512-000	024-25512-000	024-25512-000
	2, 4	024-25512-000	024-25512-000	024-25512-000
-40P	1, 3	024-25542-000	024-25542-000	024-25512-000
	2, 4	024-25542-000	024-25542-000	024-25512-000
-46P	1, 3	024-25542-000	024-25542-000	024-25512-000
	2, 4	024-25542-000	024-25542-000	024-25512-000
-58P	1, 3	024-25542-000	024-25542-000	024-25512-000
	2, 4	024-25542-000	024-25542-000	024-25512-000

VOLT CODE/ TYPE START	SYSTEM	50 HZ UNIT MODELS				
		YDAJ87HU7	YDAJ97KU7	YDAJ98MU7	YDAJ99MU7	YDAJ99MW9
-50P	1, 3	024-25542-000	024-25542-000	024-25542-000	024-25542-000	024-25542-000
	2, 4	024-25542-000	024-25542-000	024-25542-000	024-25542-000	024-25542-000
-64P	1, 3	024-25542-000	024-25512-000	024-25512-000	024-25512-000	024-25512-000
	2, 4	024-25542-000	024-25512-000	024-25512-000	024-25512-000	024-25512-000

NOTES: ^s = Recommended Stock Spare Parts


^P = Part Winding

 Part Winding (Start) compressors require two (2) contactors per compressor (system).

 Contactors include suppressors.

(NOTE — SYSTEMS 1 & 2 ARE IN MASTER SECTION; SYSTEMS 3 & 4 ARE IN SLAVE SECTION)

MASTER CONTROL PANEL


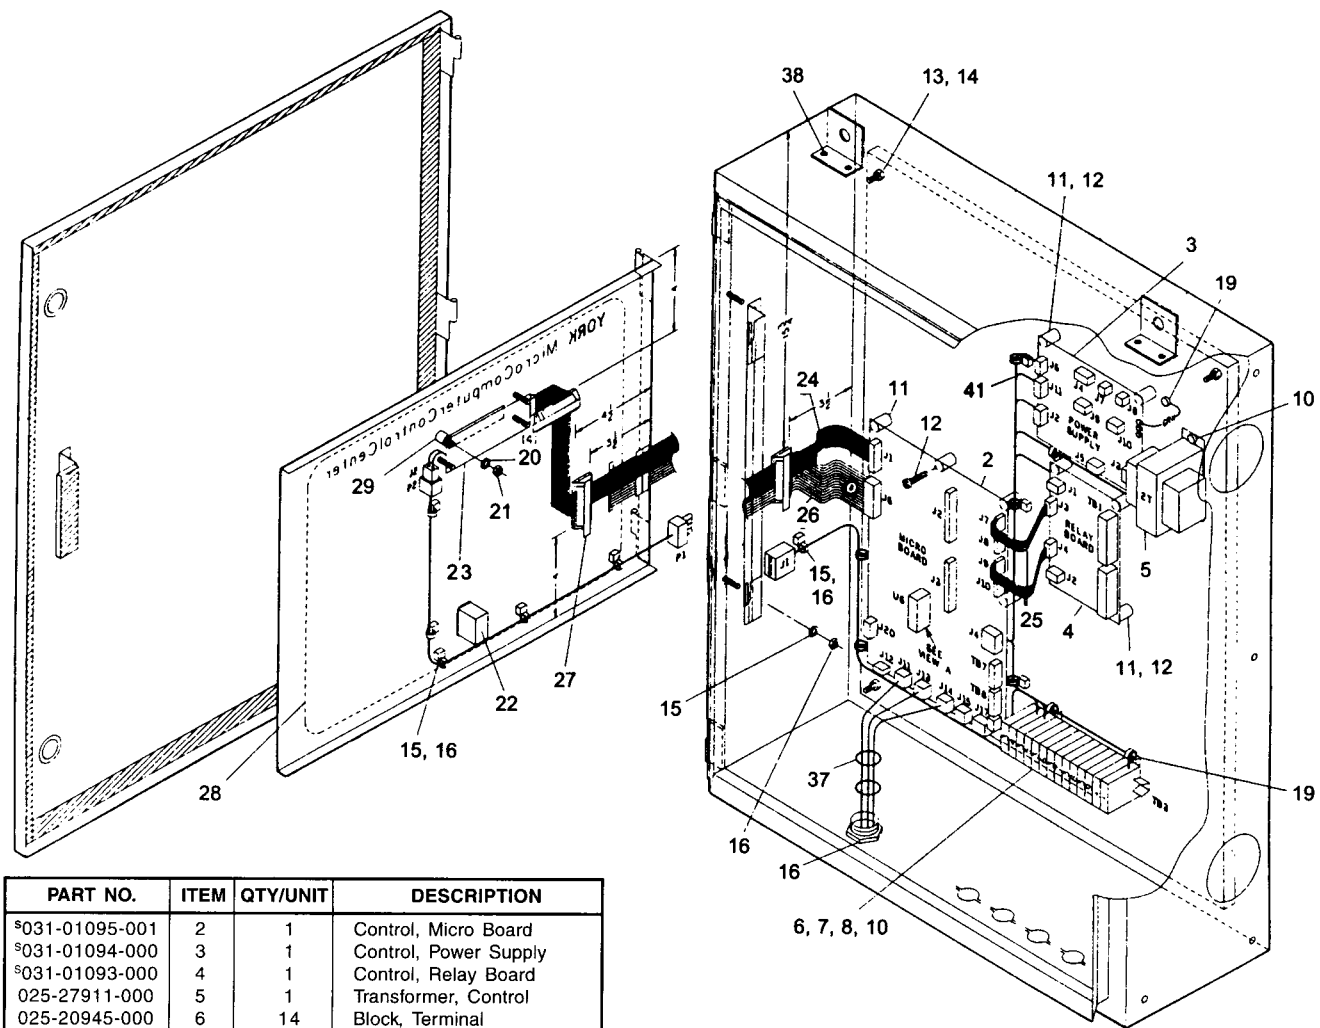


PART NO.	ITEM	QTY/UNIT	DESCRIPTION
^s 031-01095-001	2	1	Control, Micro Board
^s 031-01094-000	3	1	Control, Power Supply
^s 031-01093-000	4	1	Control, Relay Board
025-27911-000	5	1	Transformer, Control
025-20945-000	6	14	Block, Terminal
025-20946-000	7	1	End, Terminal Block
025-29159-000	8	1	Strip, Marker (14 Pole)
029-20878-000	9	2	Catch, Magnetic
021-13783-000	10	5	Scr., Tap TH. #8 x 3/8 Lg
021-14661-000	11	16	Nut, Expansion
021-14667-000	12	16	Scr., Tap Pan Hd. #8 x 1-1/4
021-01155-000	13	4	Lock Washer, TH. Int. 3/8
021-00467-000	14	4	Nut, Hex 3/8-16 UNC-2B
021-01137-000	15	10	Lock Washer, TH. Int. #10
021-08282-000	16	10	Nut, Hex #10-24
025-28383-000	17	3	Hsg., Connr. Plug, Mini-Univ.
025-09389-000	18	1	Connr., Cable, Str. 3/4
021-13789-000	19	14	Scr., Tap, Pan Hd. #10 x 1/2
021-17576-000	20	4	Lock Washer, Hel. Spg. #4
021-10056-000	21	4	Nut, Hex #4-40
024-22517-000	22	1	Switch, Unit ON/OFF
031-01110-000	23	1	Display
031-01109-211	24	1	Ribbon Cable
031-01109-212	25	2	Ribbon Cable
031-01109-213	26	1	Ribbon Cable
025-25156-000	27	3	Clamp, Ribbon Wire
024-25504-000	28	1	Switch, Keypad
021-17575-000	29	4	Spacer, Nylon 7/16 Lg.
371-01226-231	30	1	Harness, Sensor - Suct. #1
371-01226-233	31	1	Harness, Sensor - Oil #1
371-01226-232	32	1	Harness, Sensor - Suct. #2
031-01226-234	33	1	Harness, Sensor - Oil #2
371-01226-241	34	1	Harness, Sensor - LWT
371-01226-242	35	1	Harness, Sensor - EWT
371-01226-243	36	1	Harness, Sensor - OAT
025-18167-000	37	3	Strap, Cable
021-17269-000	38	4	Nut, KEPS 1/4-20
035-03908-000	39	1	Label, Caution
^s 031-01652-019 ²	40	1	EPROM
571-01226-212	41	1	Harness, Hinged Panel
031-00808-000 ¹	42	3	Suppressor for Options
031-01586-000 ²	43	1	LAN Transient Protector

- ^s Recommended Stock Spare Part
- ¹ Shipped Loose for Field use to place across the coil of any relay or contactor connected to the Control Panel or its 115VAC Power Supply, including the application of:
- Alarm Circuit Relays
 - Pump Starter (Contactor or Pilot Relay)
 - Flow Switch Inputs
 - BAS Inputs
- ² Shipped Loose in Splice Kit for Field Installation


Not Shown.
Sensor Harness
Without Sensor.

Not Shown.

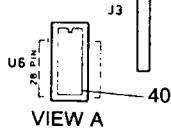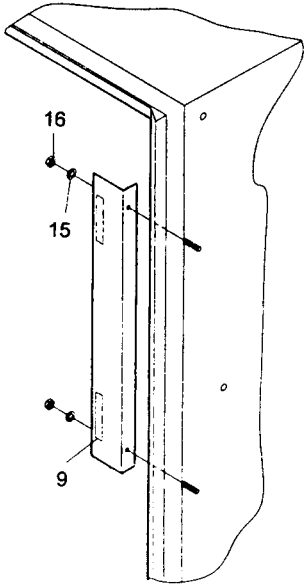


#LD00144

SLAVE CONTROL PANEL

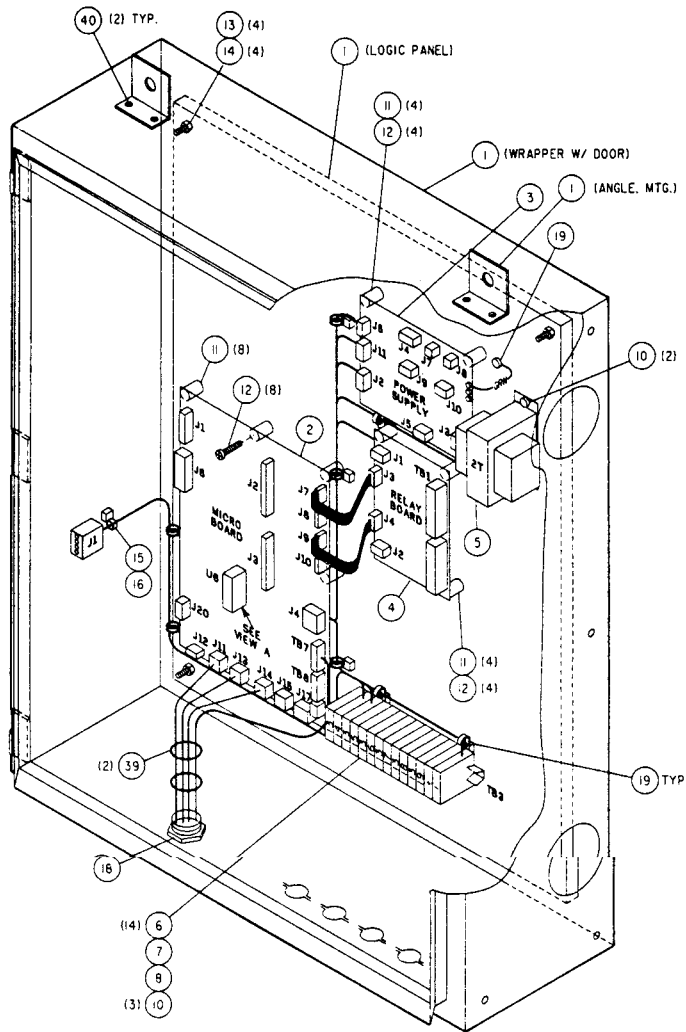

#LD00152

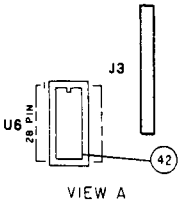


PART NO.	ITEM	QTY/UNIT	DESCRIPTION
031-01260-301	1	1	Kit, Enclosure
^s 031-01095-001	2	1	Control, Micro Board
^s 031-01094-000	3	1	Control, Power Supply
^s 031-01093-000	4	1	Control, Relay Board
025-27911-000	5	1	Transformer, Control
025-20945-000	6	14	Block, Terminal
025-20946-000	7	1	End, Terminal Block
025-29159-000	8	1	Strip, Marker (14 Pole)
021-13783-000	10	5	Scr., Tap TH. #8 x 3/8 Lg
021-14661-000	11	16	Nut, Expansion
021-14667-000	12	16	Scr., Tap Pan Hd. #8 x 1-1/4
021-01155-000	13	4	Lock Washer, TH Int. 3/8
021-00467-000	14	4	Nut, Hex 3/8-16 UNC-2B
021-01137-000	15	1	Lock Washer, TH. Int. #10
021-08282-000	16	1	Nut, Hex #10-24
025-28383-000	17	3	Hsg., Connr. Plug Mini-Univ.
025-09389-000	18	1	Connr., Cable, Str. 3/4
021-13789-000	19	14	Scr., Tap, Pan Hd. #10 x 1/2
031-01109-212	25	2	Ribbon Cable
371-01260-231	32	1	Harness, Sensor - Suct. #1
371-01260-233	33	1	Harness, Sensor - Oil #1
371-01260-232	34	1	Harness, Sensor - Suct. #2
031-01260-234	35	1	Harness, Sensor - Oil #2
371-01260-241	36	1	Harness, Sensor - LWT
371-01260-242	37	1	Harness, Sensor - EWT
371-01260-243	38	1	Harness, Sensor - OAT
025-18167-000	39	2	Strap, Cable
021-17269-000	40	4	Nut, KEPS 1/4-20
035-03908-000	41	1	Label, Caution
^s 031-01652-020	42	1	EPROM
031-01586-000	43	1	LAN Transient Protector
025-29900-000	44	1	Resistor, 180 Ohm Fixed

Not Shown
Sensor Harness
Without Sensor


Not Shown

^s Recommended Stock Spare Part

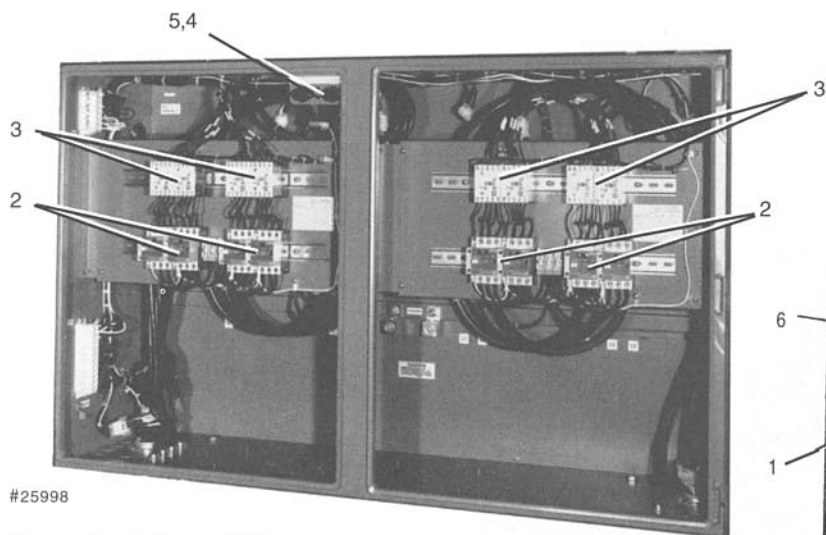

Power Panel Shown With
Fan Contactor Panel Installed

MASTER OR SLAVE POWER PANEL
(The two Power Panels are Identical)

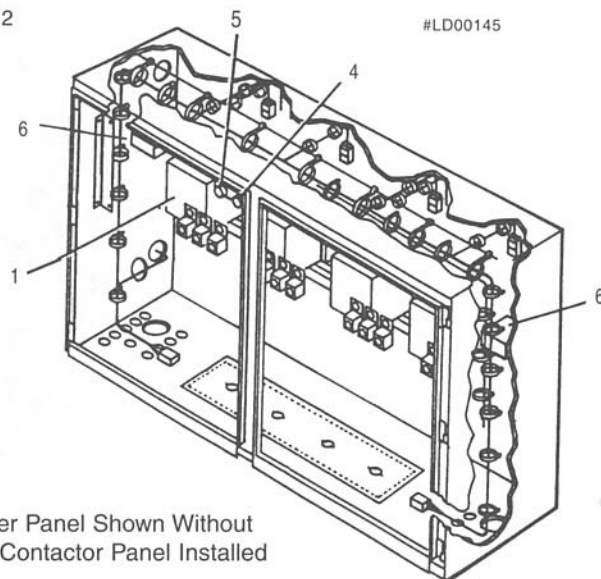

Power Panel Shown Without
Fan Contactor Panel Installed

POWER PANEL CONTROL COMPONENTS

ITEM NUMBER	QUANTITY ¹ PER UNIT	DESCRIPTION		VOLTAGE CODE	PART NUMBER ALL MODELS
[§] 1	See Pg. 3	CONTACTORS	Contact (w/Suppressor), Compressor	ALL	See Page 3
[§] 2	16		Contact (w/Suppressor), Fan	ALL	See Table Below
[§] 3	16	OVERLOADS	Overload, Fan	ALL	See Table Below
[§] 4	2	FUSES	Electronic Power Supply Circuit (5 amp), 2FU	ALL	025-27922-000
[§] 5	2		Control Circuit (20 amp), 1FU	ALL	025-28967-000
[§] 6	4	TRANSFORMERS	Transformer, Current	ALL	025-27408-000


[§]FAN MOTOR CONTACTORS AND OVERLOADS

VOLTAGE CODE	CONTACTOR/ OVERLOAD	60 HZ UNIT MODELS				
		YDAJ87KU6		YDAJ88MU6	YDAJ99MW6	
-17	CONTACTOR	024-25526-000		024-25526-000	NOT AVAILABLE	
	OVERLOAD	024-25518-000		024-25518-000		
-28	CONTACTOR	024-25526-000		024-25526-000	024-25526-000	
	OVERLOAD	024-25518-000		024-25518-000	024-25518-000	
-40	CONTACTOR	024-25521-000		024-25521-000	024-25521-000	
	OVERLOAD	024-25520-000		024-25520-000	024-25520-000	
-46	CONTACTOR	024-25521-000		024-25521-000	024-25521-000	
	OVERLOAD	024-25520-000		024-25520-000	024-25520-000	
-58	CONTACTOR	024-25521-000		024-25521-000	024-25521-000	
	OVERLOAD	024-25520-000		024-25520-000	024-25520-000	
VOLTAGE CODE	CONTACTOR/ OVERLOAD	50 HZ UNIT MODELS				
		YDAJ87HU7	YDAJ97KU7	YDAJ98MU7	YDAJ99MU7	YDAJ999MW9
-50	CONTACTOR	024-25521-000	024-25521-000	024-25521-000	024-25521-000	024-25526-000
	OVERLOAD	024-25520-000	024-25520-000	024-25520-000	024-25520-000	024-25518-000
-64	CONTACTOR	024-25521-000	024-25521-000	024-25521-000	024-25521-000	024-25526-000
	OVERLOAD	024-25520-000	024-25520-000	024-25520-000	024-25520-000	024-25518-000


NOTES: [§] = Recommended Stock Spare Parts
Contactors include suppressors.

¹Quantities shown are Total Quantities, including those in both Master and the Slave Power Panels


(SYSTEM COMPONENTS SHOWN BELOW ARE TYPICAL OF THOSE IN EITHER MASTER OR SLAVE SECTIONS)

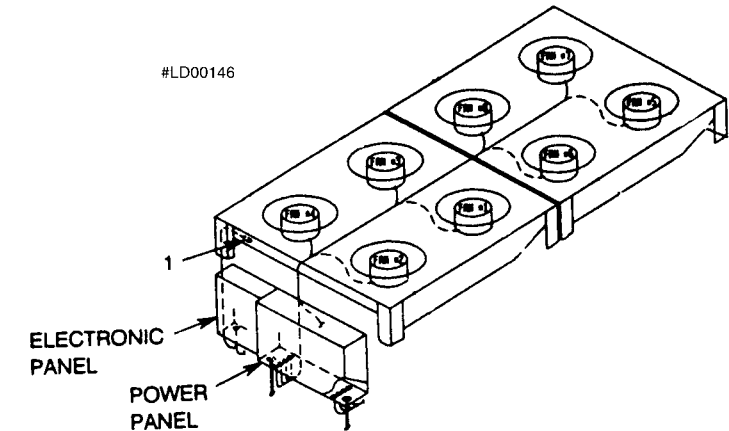


CONDENSER FAN SECTION

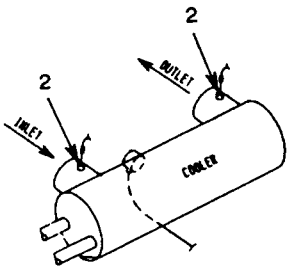

COOLER

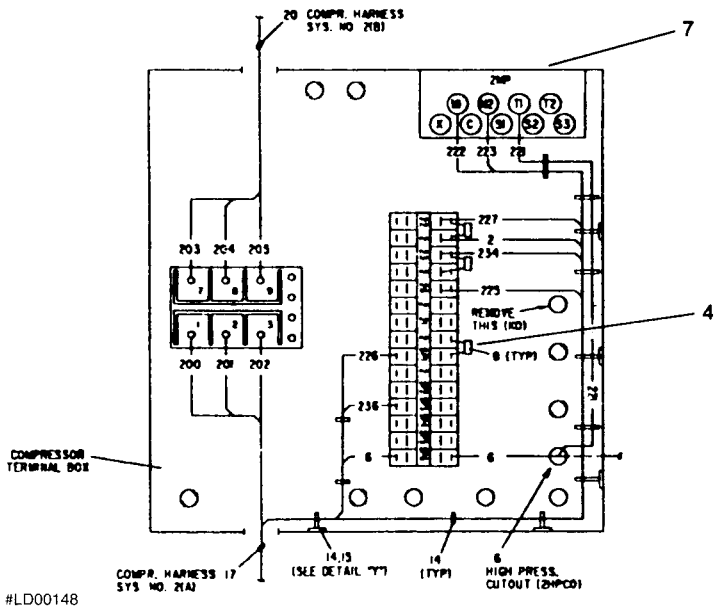

COMPRESSOR TERMINAL BOX (TYPICAL)

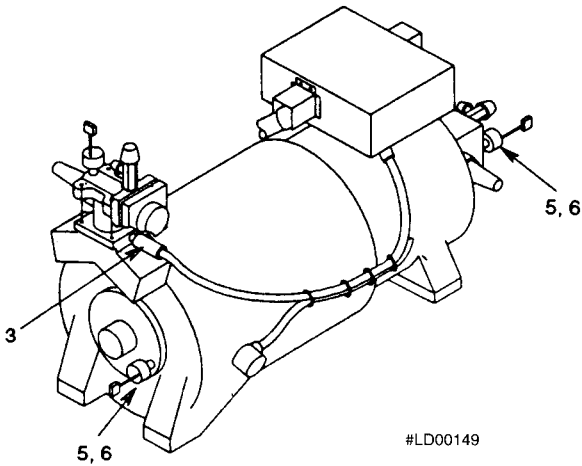

COMPRESSOR (TYPICAL)

SYSTEM CONTROL COMPONENTS

ITEM NO.	QUANTITY ¹ PER UNIT	DESCRIPTION	VOLTAGE CODE	PART NUMBER ALL MODELS
^s 1	2	Sensor, Outside Air (OAT)	ALL	025-28663-001
^s 2	4	Sensor, Water Temperature (LWT, RWT)	ALL	025-29964-000
^s 3	4	High Pressure Cutout	ALL	025-28985-002
^s 4	12	Suppressor, Compressor Unloading Solenoids and Liquid Line Solenoids	ALL	031-01117-000
^s 5	8	Transducer (Oil & Suction Pressure)	ALL	025-29583-000
6	8	Brass Adaptor (Use with Item 5)	ALL	023-16272-000
7	4	Module, Motor Protector	ALL	025-27522-000
8	1	Heat Conductive Compound (Use with Items 2 and 9)	ALL	013-00898-000
9	1	Sensor, Mixed Water Temperature (See Note 2)	ALL	025-28935-000


¹Recommended Stock Spare Parts

NOTES: 1. Quantities listed are total quantities for the Unit (4 Modules), including those for both the Master Section (2 Modules) and the Slave Section (2 Modules).

2. Not Shown. Furnished in Splice Kit.

MODEL	SYSTEM	COILS
YEAJ87HU7	ALL	3 ROW
YEAJ87KU6	ALL	3 ROW
YEAJ97KU7	ALL	3 ROW
YEAJ88MU6	ALL	3 ROW
YEAJ98MU7	ALL	3 ROW
YEAJ99MU7	ALL	3 ROW
YEAJ99MW6	ALL	4 ROW
YEAJ99MW9	ALL	4 ROW

NOTE:
SYSTEM COMPONENTS SHOWN ARE TYPICAL
OF THOSE IN EITHER MASTER OR SLAVE
SECTIONS.

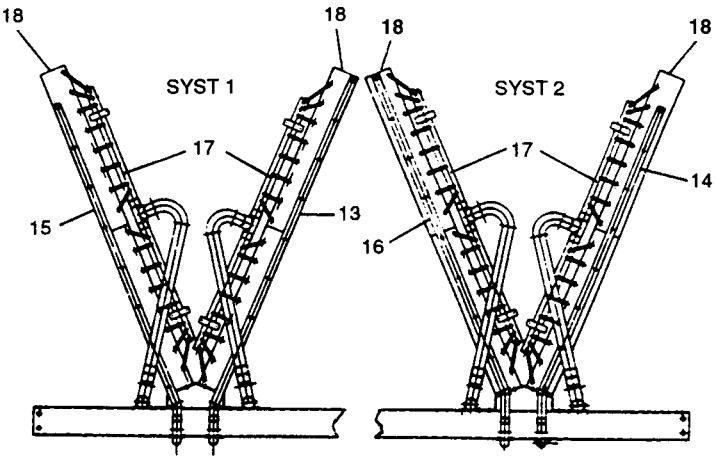

#LD00150

3-ROW COIL

4-ROW COIL

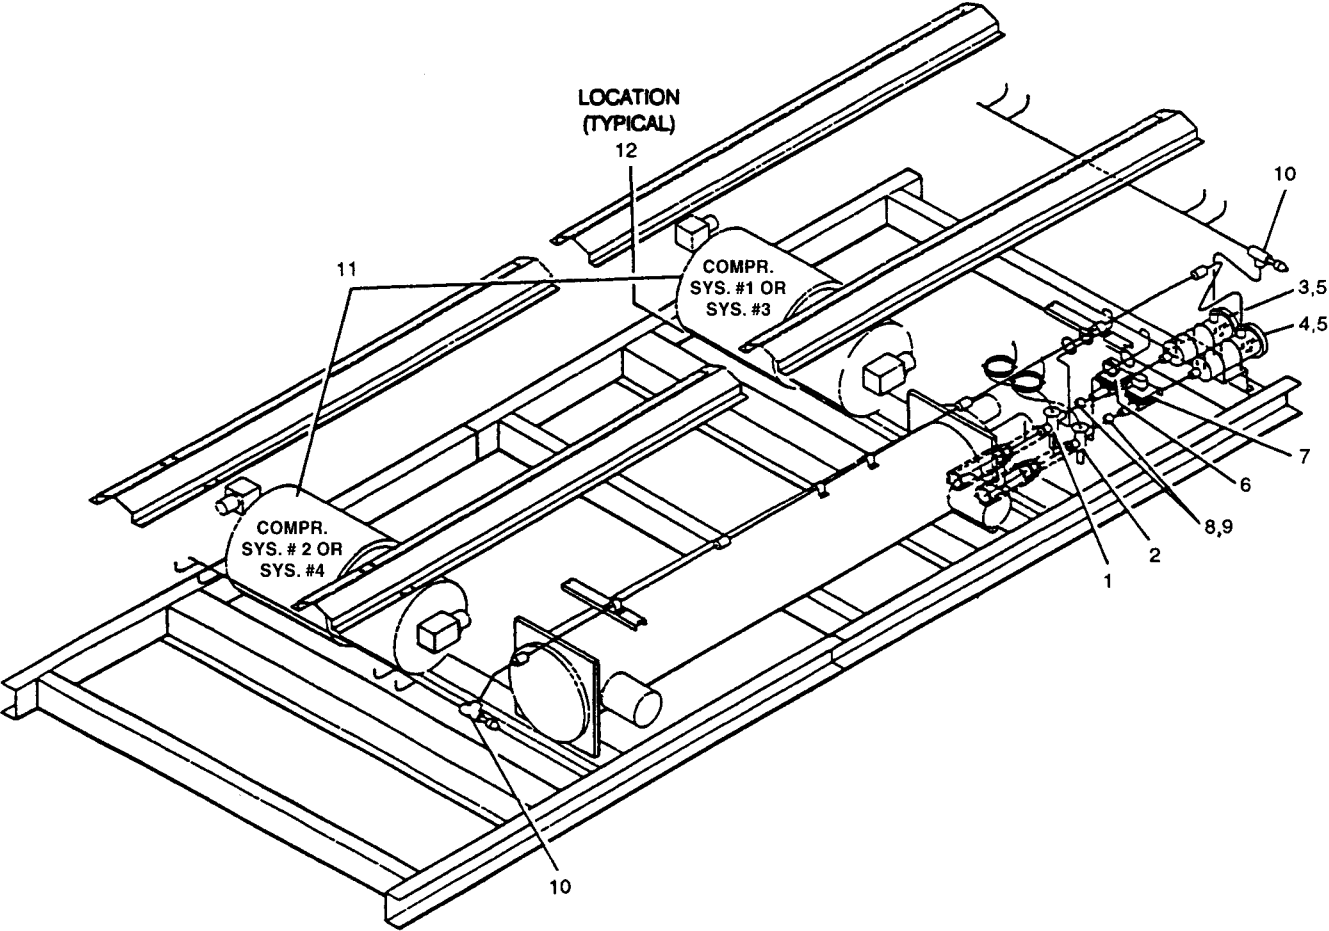


FIG. 1 – REFRIGERANT SYSTEM

REFRIGERANT SYSTEM COMPONENTS (See Figure 1)

ITEM NO.	QUAN ¹ PER UNIT	SYS. NO.	DESCRIPTION	UNIT MODEL					
				60 HZ		YDAJ87KU6	YDAJ88MU6		YDAJ99MW6
				50 HZ	YDAJ87HU7	YDAJ97KU7	YDAJ98MU7	YDAJ99MU7	YDAJ99MW9
§1	2	1,3	Valve, Thermal Expansion		025-25944-000	025-25944-000	025-25944-000	025-25944-000	025-28976-000
§2	2	2,4			025-25944-000	025-25944-000	025-25944-000	025-25944-000	025-28976-000
3	2	1,3	Dehydrator, Body (Replaceable Core)		026-21055-000	026-16960-000	026-16960-000	026-16960-000	026-16960-000
4	2	2,4			026-21055-000	026-21055-000	026-16960-000	026-16960-000	026-16960-000
§5	Varies —	ALL —	Dehydrator Core (Use with Items 3,4) Quantity		026-18328-000 8	026-18328-000 10	026-18328-000 12	026-18328-000 12	026-18328-000 12
6	2	1,3	Valve, Liquid Solenoid		025-28376-000	025-28375-000	025-28375-000	025-28375-000	025-28375-000
7	2	2,4			025-28376-000	025-28376-000	025-28375-000	025-28375-000	025-28375-000
8	4	ALL	Moisture Indicator, Body		026-32398-000	026-32398-000	026-32398-000	026-32398-000	026-32399-000
9	4	ALL	Moisture Indicator, Cap Assembly		026-32800-000	026-32800-000	026-32800-000	026-32800-000	026-32800-000
10	4	ALL	Valve, Liquid Stop		022-08740-000	022-08740-000	022-08740-000	022-08740-000	022-08740-000
11	4	ALL	Compressor		See Page 3				
12	16	ALL	Pad, Isolator		066-92335-000	066-92335-000	066-92335-000	066-92335-000	066-92335-000

ALUMINUM FIN COILS — STANDARD

13	4	1,3	Header, Liquid (R.H.)		375-01909-000	375-01909-000	375-01909-000	375-01909-000	375-01911-000
14	4	2,4			375-01909-000	375-01909-000	375-01909-000	375-01909-000	375-01911-000
15	4	1,3	Header, Liquid (L.H.)		375-01910-000	375-01910-000	375-01910-000	375-01910-000	375-01912-000
16	4	2,4			375-01910-000	375-01910-000	375-01910-000	375-01910-000	375-01912-000
17	16	ALL	Header, Discharge		375-01929-000	375-01929-000	375-01929-000	375-01929-000	375-01929-000
18	32	ALL	Coil, Condenser		026-31588-000	026-31588-000	026-31588-000	026-31588-000	026-31589-000

PHENOLIC-COATED COILS — OPTION

13	4	1,3	Header, Liquid (R.H.)		375-02558-000	375-02558-000	375-02558-000	375-02558-000	375-02561-000
14	4	2,4			375-02558-000	375-02558-000	375-02558-000	375-02558-000	375-02561-000
15	4	1,3	Header, Liquid (L.H.)		375-02559-000	375-02559-000	375-02559-000	375-02559-000	375-02562-000
16	4	2,4			375-02559-000	375-02559-000	375-02559-000	375-02559-000	375-02562-000
17	16	ALL	Header, Discharge		375-02560-000	375-02560-000	375-02560-000	375-02560-000	375-02560-000
18	32	ALL	Coil, Condenser		326-31642-000	326-31642-000	326-31642-000	326-31642-000	326-31641-000

COPPER FIN COILS — OPTION


13	4	1,3	Header, Liquid (R.H.)		375-01909-000	375-01909-000	375-01909-000	375-01909-000	375-01911-000
14	4	2,4			375-01909-000	375-01909-000	375-01909-000	375-01909-000	375-01911-000
15	4	1,3	Header, Liquid (L.H.)		375-01910-000	375-01910-000	375-01910-000	375-01910-000	375-01912-000
16	4	2,4			375-01910-000	375-01910-000	375-01910-000	375-01910-000	375-01912-000
17	16	ALL	Header, Discharge		375-01929-000	375-01929-000	375-01929-000	375-01929-000	375-01929-000
18	32	ALL	Coil, Condenser		026-31646-000	026-31646-000	026-31646-000	026-31646-000	026-31647-000

BLACK FIN COILS — OPTION

13	4	1,3	Header, Liquid (R.H.)		375-01909-000	375-01909-000	375-01909-000	375-01909-000	375-01911-000
14	4	2,4			375-01909-000	375-01909-000	375-01909-000	375-01909-000	375-01911-000
15	4	1,3	Header, Liquid (L.H.)		375-01910-000	375-01910-000	375-01910-000	375-01910-000	375-01912-000
16	4	2,4			375-01910-000	375-01910-000	375-01910-000	375-01910-000	375-01912-000
17	16	ALL	Header, Discharge		375-01929-000	375-01929-000	375-01929-000	375-01929-000	375-01929-000
18	32	ALL	Coil, Condenser		026-33898-000	026-33898-000	026-33898-000	026-33898-000	026-33879-000

§Recommended Stock Spare Part

NOTE: 1. Quantities listed are total quantities for the Unit (4 Modules), including those for both the Master Section (2 Modules) and the Slave Section (2 Modules).

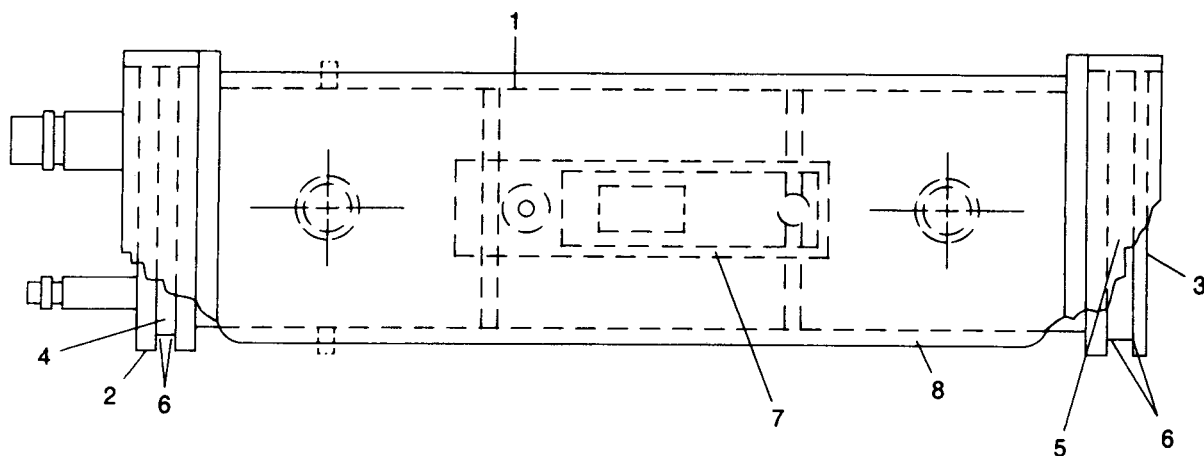

COOLER COMPONENTS

ITEM NO.	QUAN. PER UNIT	QUAN. PER COOLER	DESCRIPTION	UNIT MODEL					
				60 HZ		YDAJ87KU6	YDAJ88MU6		YDAJ99MW6
				50 HZ	YDAJ87HU7	YDAJ97KU7	YDAJ98MU7	YDAJ99MU7	YDAJ99MW9
1	2	—	Cooler, Less Insulation & Heater (Includes Items 2 thru 6)		375-17511-000	375-17513-000	375-17515-000	375-17515-000	375-17515-000
2	—	1	Head, Connection End		375-18009-000	375-18011-000	375-17058-000	375-17058-000	375-17058-000
3	—	1	Head, Back End		375-18008-000	375-18013-000	375-17057-000	375-17057-000	375-17057-000
4	—	1	Pass Baffle, Connection End		375-17085-000	375-18024-000	375-17059-000	375-17059-000	375-17059-000
5	—	1	Pass Baffle, Back End		075-17084-000	075-18022-000	075-17049-000	075-17049-000	075-17049-000
^s 6 +	—	4	Gasket, Pass Baffle and Head		075-17082-000	075-18023-000	075-17050-000	075-17050-000	075-17050-000
^s 7	—	1	Heater		025-22690-000	—	—	—	—
	—	1			025-22691-000	—	—	—	—
	—	2			—	025-22691-000	025-22691-000	025-22691-000	025-22691-000
8	—	3	Insulation, 3/4" x 49" x 65"		010-04198-000	010-04198-000	010-04198-000	010-04198-000	010-04198-000


+ When replacing gasket, Item 6, use:

^sSealer, Gasket, 013-02827


^sPrimer, 013-01753

^s Recommended Stock Spare Part

#LD00153

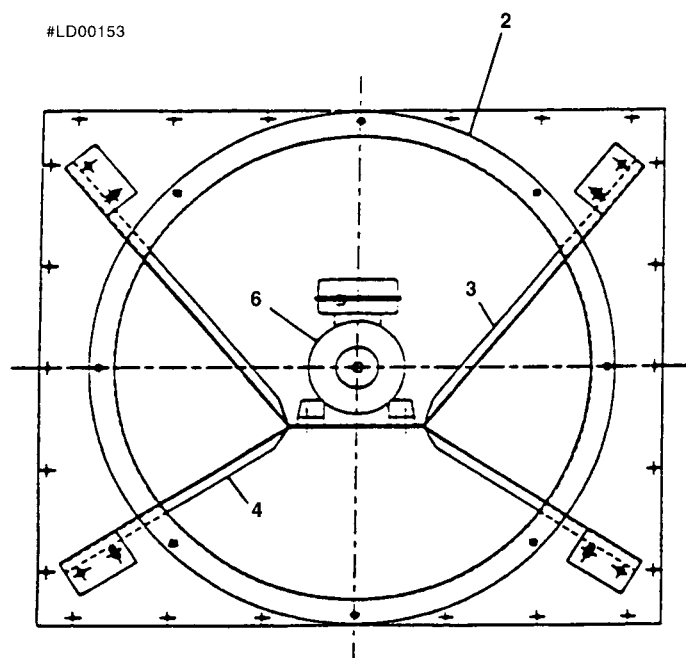

TOP VIEW
(LESS IMPELLER & GUARD)

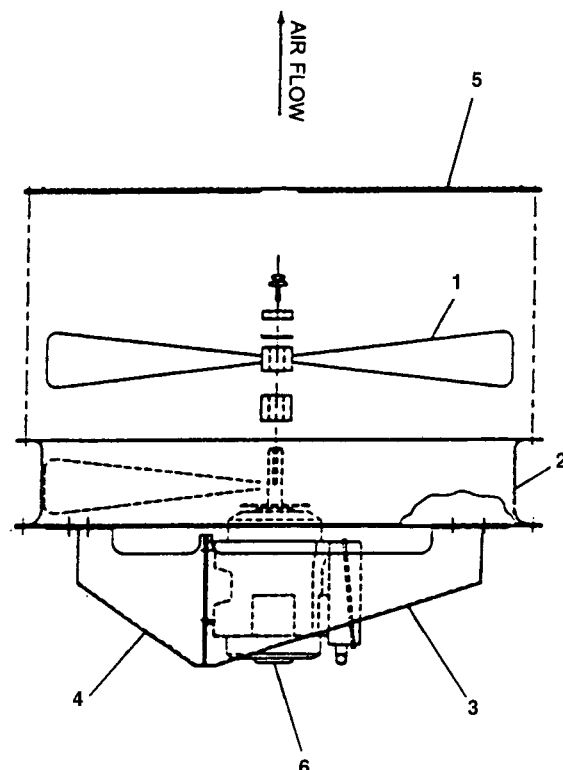

FAN COMPONENTS

ITEM NO.	DESCRIPTION	60 HZ UNIT MODELS				
			YDAJ87KU6	YDAJ88MU6		YDAJ99MW6
*1	Blade		026-33615-000	026-33615-000		026-33615-000
2	Orifice		326-34407-000	326-34407-000		326-34407-000
3	Support, Motor		075-01901-000	075-01901-000		075-01901-000
4	Support, Motor		075-01902-000	075-01902-000		075-01902-000
5	Guard		026-32807-000	026-32807-000		026-32807-000
*6	Motor:					
	VOLTAGE CODE	-17	024-25179-002	024-25179-002		NOT AVAILABLE
		-28	024-25179-002	024-25179-002		024-25179-002
		-40	024-25179-001	024-25179-001		024-25179-001
		-46	024-25179-001	024-25179-001		024-25179-001
		-48	024-25250-000	024-25250-000		024-25250-000
ITEM NO.	DESCRIPTION	50 HZ UNIT MODELS				
		YDAJ87HU7	YDAJ97KU7	YDAJ98MU7	YDAJ99MU7	YDAJ99MW9
*1	Blade	026-33611-000	026-33611-000	026-33611-000	026-33611-000	026-33672-000
2	Orifice	326-34407-000	326-34407-000	326-34407-000	326-34407-000	326-34407-000
3	Support, Motor	075-01901-000	075-01901-000	075-01901-000	075-01901-000	075-01899-000
4	Support, Motor	075-01902-000	075-01902-000	075-01902-000	075-01902-000	075-01898-000
5	Guard	026-32807-000	026-32807-000	026-32807-000	026-32807-000	026-32807-000
*6	Motor:					
	VOLTAGE CODE	-50	024-25179-001	024-25179-001	024-25179-001	024-24604-001
		-64	024-25179-001	024-25179-001	024-25179-001	024-24604-001

*Recommended Stock Spare Part

REPLACEMENT COMPONENTS FOR UNIT OPTIONS

ITEM NO.	QUAN ^S PER UNIT	DESCRIPTION	VOLT CODE	ALL MODELS	60 HZ		YDAJ87KU6	YDAJ88MU6		YDAJ99MW6
					50 HZ	YDAJ87HU7	YDAJ87KU7	YDAJ98MU7	YDAJ99MU7	YDAJ99MW9
A	—	ADDITIONAL STEPS OF UNLOADING Suppressor (Note 2)	ALL	Quantity ¹ 031-01117-000		2	2	4	4	4
B	4	CHICAGO CODE Valve, Relief	ALL			022-08863	022-08863	022-08863	022-08863	022-08862
C	2	POWER DISCONNECT SWITCH (PDS) Switch, Disconnect	-17 -28 -40 -46 -50 -58 -64			— — — — 024-25563 — 024-25563	024-25241 024-25241 024-25563 024-25563 024-25563 024-25564 024-25563	N.A. 024-25241 024-25563 024-25563 024-25563 024-25564 024-25563	— — — — 024-25563 — 024-25563	N.A. N.A. 024-25562 024-25563 024-25563 024-25563 024-25563
D	8	LOW AMBIENT KIT (Note 3) Fan Contactor with Suppressor	ALL	024-25545-000	* One Required Per Compressor Key: — = Not Available N.A. = Not Available NOTES: - Quantities listed are total quantities for the Unit (4 Modules), including those for both the Master Section (2 Modules) and the Slave Section (2 Modules). - Unit Model Columns list Quantity¹ required in <i>addition</i> to standard quantities. (See Page 7 for Standard.) This Option also requires two (2) Relay Board Kits, Item G. - This Option also requires two (2) Relay Board Kits, Item G, and one (1) Discharge Pressure Readout Kit, Items H and I. - Loadminder Option also requires two (2) Relay Board Kits, Item G. - Used with Remote Control Center (If Specified).					
E	2	CONTROL TRANSFORMER (1T) Transformer	-17 -28 -40 -46 -50 -58 -64	025-29627-001 025-29627-002 025-29627-003 025-29627-002 025-29627-003 025-29627-004 N.A.						
F	4	Fuse, Transformer	-17 -28 -40 -46 -50 -58 -64	025-27509-015 025-28967-000 025-28967-000 025-27971-000 025-28967-000 025-30962-000 N.A.						
G	1	PUMP CONTROL/RELAY BOARD KIT Relay Control Board	ALL	031-01093-000	NOTE: Parts listed on this page are for Single Replacement Parts contained in the Option Kits. Part Numbers provided DO NOT reflect part numbers for complete Option Kits. See the Installation Operation manual, Form 150.75-NM2 for Complete Option Kit Part Numbers.					
H	4*	DISCHARGE PRESSURE READOUT KIT Transducer, Discharge Pressure	ALL	025-29139-001						
I	4*	Adaptor, Transducer (Use with Item H)	ALL	023-16272-000						
J	4	LOADMINDER (HOT GAS BYPASS) (Note 4) Valve, Regulator, Hot Gas	ALL	025-27647-000						
K	4	Suppressor	ALL	031-01117-000						
L	2	FLOW CONTROL SWITCH Switch, Flow	ALL	024-26116-000						
M	1	REMOTE CONTROL CENTER Control, Micro Board	ALL	031-01196-000						
N	1	WALL-MOUNTED TRANSFORMER Transformer (See Note 5): Primary Voltage : 115V (60 HZ) : 230V (50 HZ)	— —	025-29917-001 025-29917-002						
O	1	MULTIPLE UNIT SEQUENCING KIT Sensor, Temperature	ALL	025-28935-000						
P	1	Resistor, 180 Ohm Fixed	ALL	025-29900-000						
Q	1	BAS INTERFACE Control, Remote Reset	ALL	031-00814-000						



Proud Sponsor
of the 1996
U.S. Olympic Team

36USC380