


 BY JOHNSON CONTROLS	AIR-COOLED LIQUID CHILLERS HERMETIC SCROLL 60 HZ	
RENEWAL PARTS	Supercedes: 150.66-RP1 (713)	Form 150.66-RP1 (913)

**MODELS YCUL0096, 0100, 0106, 0120, 0130 AND YCUL0140
STYLE "C"**

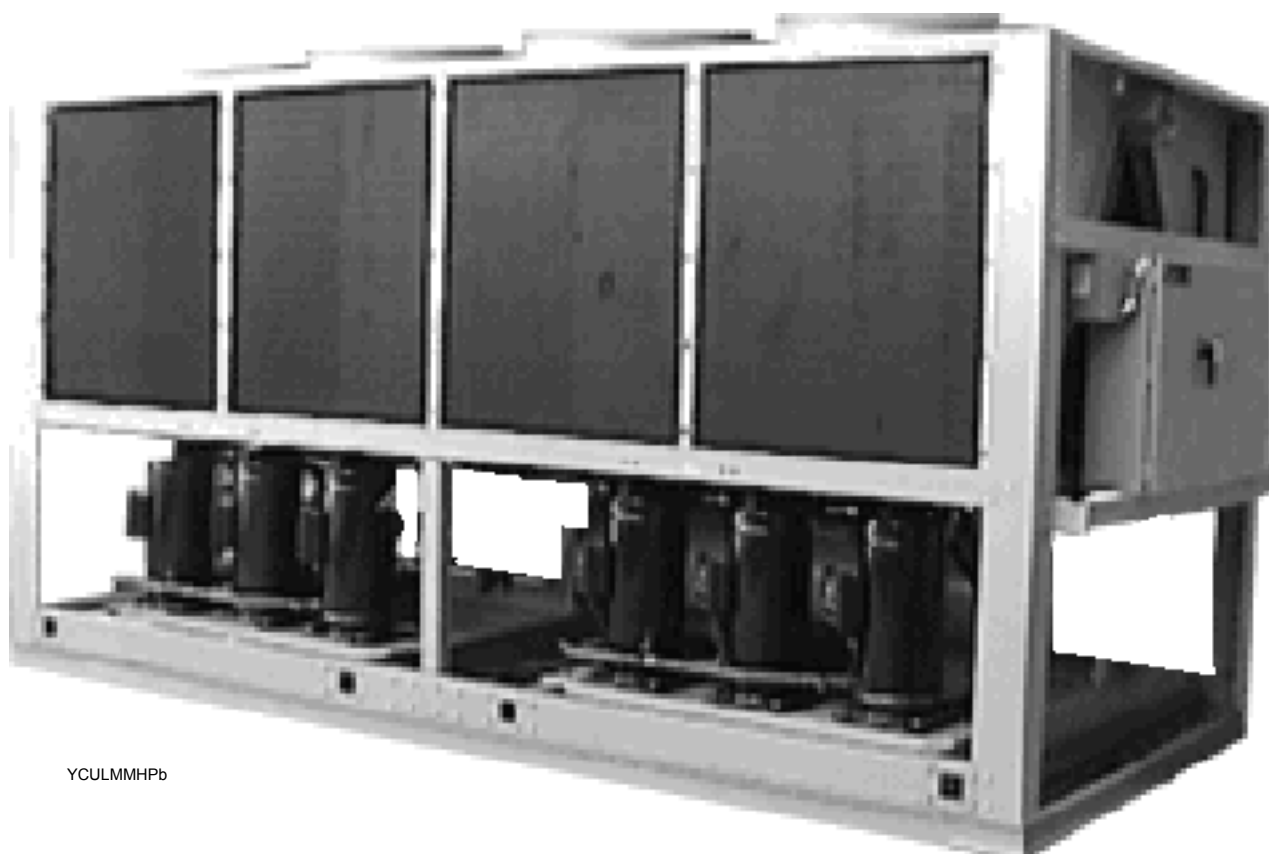

YCULMMHPb

**90 - 140 TON
270 - 457KW
60 HZ**



200-3-60
230-3-60
315-3-60
460-3-60
575-3-60
MODELS ONLY

Issue Date:
September 25, 2013



TABLE OF CONTENTS

	<u>PAGE</u>
UNIT NOMENCLATURE NAMEPLATE ENGINEERING DATA	3
CONDENSER COILS	
CONDENSER COIL COMPONENTS	4
FAN	
FAN COMPONENTS.....	6
PIPING	
REFRIGERANT PIPING COMPONENTS.....	7
COMPRESSOR	
COMPRESSOR	10
CONTROL AND POWER PANELS	
CONTROL PANEL COMPONENTS.....	14
SENSOR HARNESSSES.....	18
TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS.....	20
WIRE HARNESS CONNECTORS-FIELD REPLACEMENT PART NUMBERS	21
POWER PANEL COMPONENTS.....	22
CHILLER OPTIONS	
YCUL CHILLER OPTIONS - KITS	114
ENCLOSURE KIT OPTIONS	115
REMOTE CONTROL CENTER	120
REMOTE CURRENT/TEMPERATURE RESET PARTS BREAKDOWN	121
RECOMMENDED SPARE PARTS.....	122

WARNING

HIGH VOLTAGE

Is used in the operation of this equipment.

DEATH OR SERIOUS INJURY

may result if personnel fail to observe safety precautions.

Work on electronic equipment should not be undertaken unless the individual(s) have been trained in the proper maintenance of equipment and is (are) familiar with its potential hazards.

Shut off power supply to the equipment before beginning work and follow lockout procedures. When working inside equipment with power off, take care to discharge every capacitor likely to hold dangerous potential.

Be careful not to contact high voltage connections when installing or operating this equipment.

LOW VOLTAGE

DO NOT be misled by the term "low voltage." Voltages as low as 50 volts may cause death.

UNIT NOMENCLATURE NAMEPLATE ENGINEERING DATA

BASIC PART NUMBER

YCUL0096EC46XCA

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
BASE PRODUCT TYPE				NOMINAL CAPACITY				UNIT DESIGNATOR	REFRIGERANT	VOLTAGE/STARTER			DESIGN/DEVELOPMENT LEVEL	
Y	C	U	L	#	#	#	#	E	C	1	7	:	B	:
								High Efficiency	R-22	2	8	:	C	:Design Series C
									R-407C	4	0	:	A	:Engineering
										4	6	:		Change
										5	8	:		or PIN Level
												X		:Across the Line

PART NUMBER – LETTER CODES

16 17 18 19	20 21 22 23 24 25 26 27 28	29 30 31 32 33 34 35 36 37
POWER FIELD	CONTROLS FIELD	COMPRESSOR / PIPING FIELD
X : Standard Power Option	X : No Ambient Kit	# : Low Temp. Brine (LBR/T)
M : MP NF Disconnect Switch	H : High Ambient Kit (factory)	T : Thermal Storage
D : MP w/ Ind. Sys. Brkr.	G : High Ambient Kit (field)	S : Chicago Relief Code
S : SP TB w/ Ind. Sys. Brkr.	T : BAS/EMS Temp. Reset / Offset	C : Service Isolation Valve
B : SP NF Disconnect Switch	S : Spanish LCD & Keypad Display	S : Both Chicago & Isolat.
B : No Transformer Required	F : French LCD & Keypad Display	E : Elec. Exp. Valve
X : Transformer 115/24V (factory)	G : German LCD & Keypad Display	1 : Hot Gas By-Pass
Q : Special Transformer Required	I : Italian LCD & Keypad Display	(# circuits)
X : No Power Factor Capacitor	L : N. American Safety Code	X : Heater (Standard)
C : Power Factor Capacitor	(cU.L./cETL)	
Q : Special Power Factor Capacitor	: No Listing (typically 50 HZ non-CE, non-U.L.)	
	: Suction Temp Sensor	
	: Motor Current Module	
	: OptiView Remote Panel	
	S : Sequence Control & Automatic Lead Transfer	

MP = Multiple Point
SP = Single Point
NF = Non-Fused
TB = Terminal Block
Ser. = Service
Ind. Sys. Brkr. & L. Ext. Handles = Individual System Breaker & Lockable External Handle

38 39 40 41 42 43 44	45 46 47	48 49 50 51 52 53 54
EVAP. FIELD	CONDENSER FIELD	CABINET FIELD
X	X : Aluminum	X : Wire Condenser Headers Only (factory)
	C : Copper	1 : Wire (Full Unit) Enc. Panels (factory)
	B : Black Fin	3 : Wire/Louvered Enc. Panels (factory)
	P : Phenolic	5 : Louvered (Cond. Only) Enc. Panels (factory)
	X : TEAO Fan Motors	7 : Louvered (Full Unit) Enc. Panels (factory)
		B : Acoustic Sound Blanket
		L : Low Sound Fans
		1 : 1" Deflection
		S : Seismic
		N : Neoprene Pads

55 EXTENDED FIELD WARRANTY

X : 1st Year Parts Only
 B : 1st Year Parts & Labor
 C : 2nd Year Parts Only
 D : 2nd Year Parts & Labor
 E : 5 Year Compressor Parts Only
 F : 5 Year Compressor Parts & Labor Only
 G : 5 Year Units Parts Only
 H : 5 Year Unit Parts & Labor

56 REFRIGERANT WARRANTY

X : No Refrigerant Warranty
 1 : 1 Year Refrigerant
 2 : 2 Year Refrigerant
 5 : 5 Year Refrigerant

61 PLANT OF MANUFACTURE

R : Monterrey

NOTES:


1. Q : DENOTES SPECIAL / S.Q.
2. # : DENOTES STANDARD
3. X : w/in OPTIONS FIELD, DENOTES NO OPTION SELECTED
4. Agency Files (i.e. U.L. / ETL; CE; ARI; ETC.) will contain info. based on the first 14 characters only.
5. Plant of manufacture to include PIN 56 upon entering the chiller order.

CONDENSER COIL COMPONENTS

Condenser

This is the Left Hand Vertical and Right Hand Slanted Coil view from the rear of the unit opposite the control/power panel. See page 5 for condenser coil part numbers.

POWER
PANEL
END OF
CHILLER

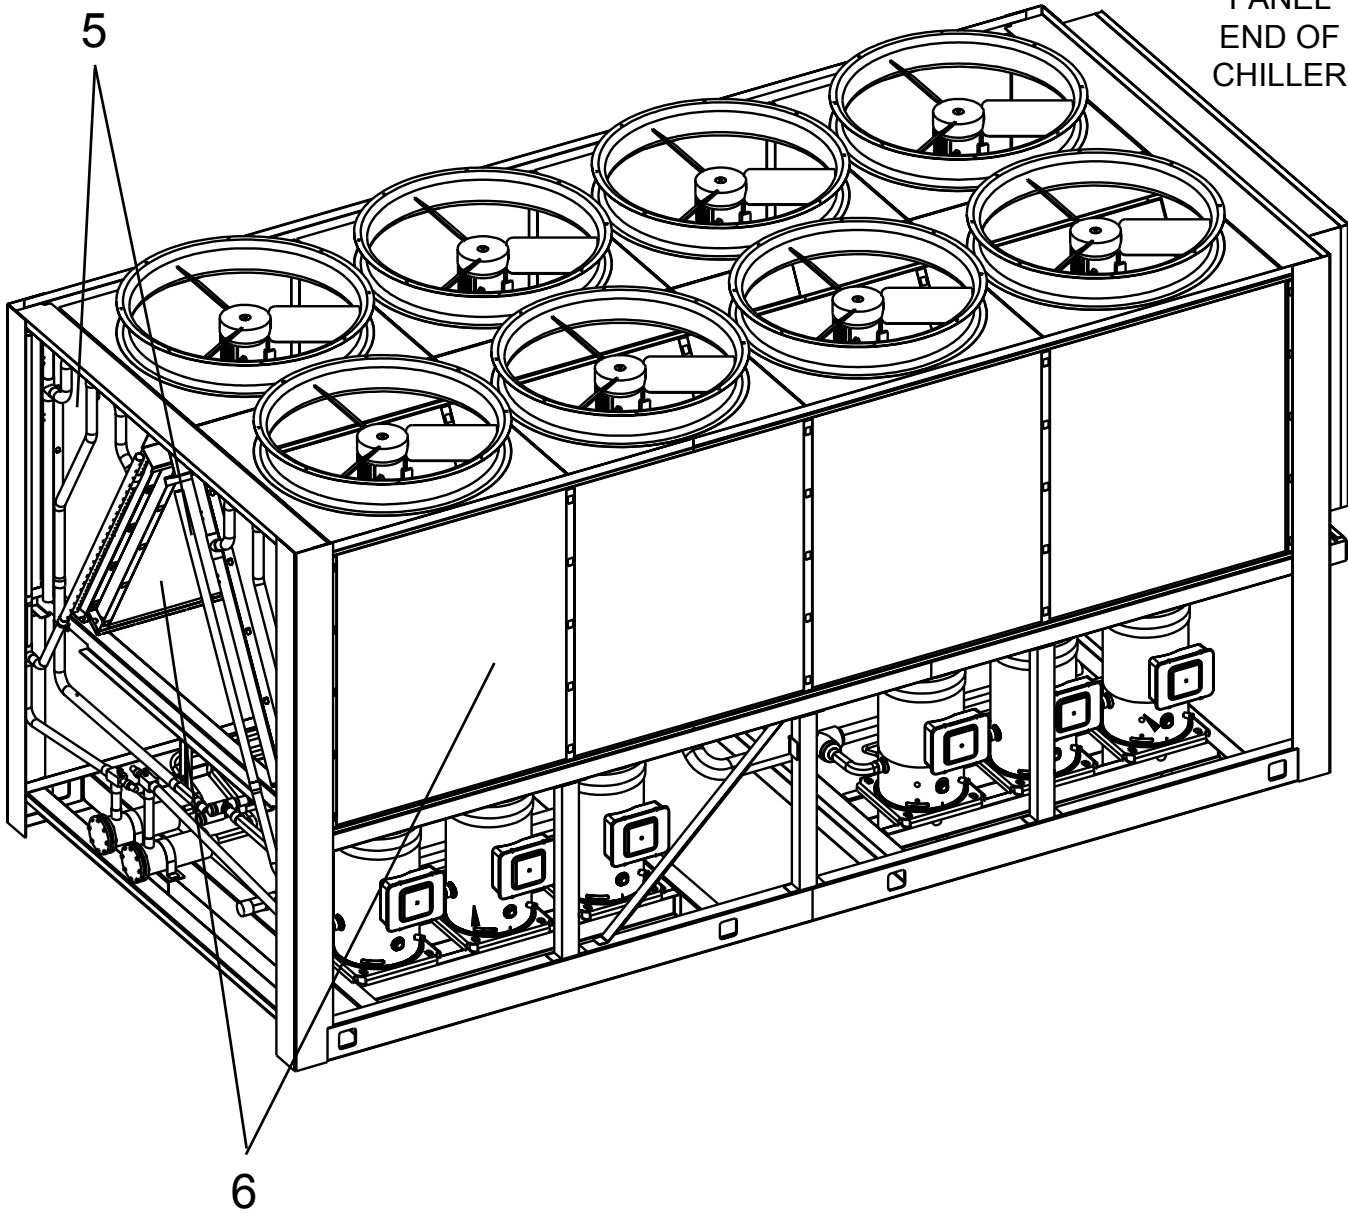

6

This is the Right Hand Vertical and Left Hand Slanted Condenser Coil view from the rear of the unit opposite the control/power panel. See page 5 for condenser coil part numbers.

44506-0bb

FIG. 1 – CONDENSER COIL COMPONENTS - YCUL0120, YCUL0130 & YCUL0140 SHOWN (REF. TABLE 1, PAGE 5)

CONDENSER COIL COMPONENTS (CONT'D)

TABLE 1 – CONDENSER COIL COMPONENTS (SEE FIG. 1, PAGE 4)

ITEM NUMBER	DESCRIPTION	QTY	YCUL0096	YCUL0100	YCUL0106
ALUMINUM FIN COILS					
5	Coil*	2	375-44501-001	375-44501-001	375-45619-002
6		2	375-44501-002	375-44501-002	375-45619-001
BLACK FIN COILS					
5	Coil*	2	375-45623-001	375-45623-001	375-45624-002
6		2	375-45623-002	375-45623-002	375-45624-001
PHENOLIC COILS					
5	Coil*	2	375-45626-001	375-45626-001	375-45627-002
6		2	375-45626-002	375-45626-002	375-45627-001
COPPER COILS					
5	Coil*	2	375-45629-001	375-45629-001	375-45630-002
6		2	375-45629-002	375-45629-002	375-45630-001

***Note:** Coils include coil and headers.

TABLE 1 (CONT'D) – CONDENSER COIL COMPONENTS (SEE FIG. 1, PAGE 4)


ITEM NUMBER	DESCRIPTION	QTY	YCUL0120	YCUL0130	YCUL0140
ALUMINUM FIN COILS					
5	Coil*	2	375-44509-002	375-44509-002	375-44509-002
6		2	375-44509-001	375-44509-001	375-44509-001
BLACK FIN COILS					
5	Coil*	2	375-45625-002	375-45625-002	375-45625-002
6		2	375-45625-001	375-45625-001	375-45625-001
PHENOLIC COILS					
5	Coil*	2	375-45628-002	375-45628-002	375-45628-002
6		2	375-45628-001	375-45628-001	375-45628-001
COPPER COILS					
5	Coil*	2	375-45631-002	375-45631-002	375-45631-002
6		2	375-45631-001	375-45631-001	375-45631-001

***Note:** Coils include coil and headers.

FAN COMPONENTS

Service Note:

Fan Hub to Shaft Joint should be sealed with protective coating - use RUST VETO 344 - a solvent type, rust preventative coating.

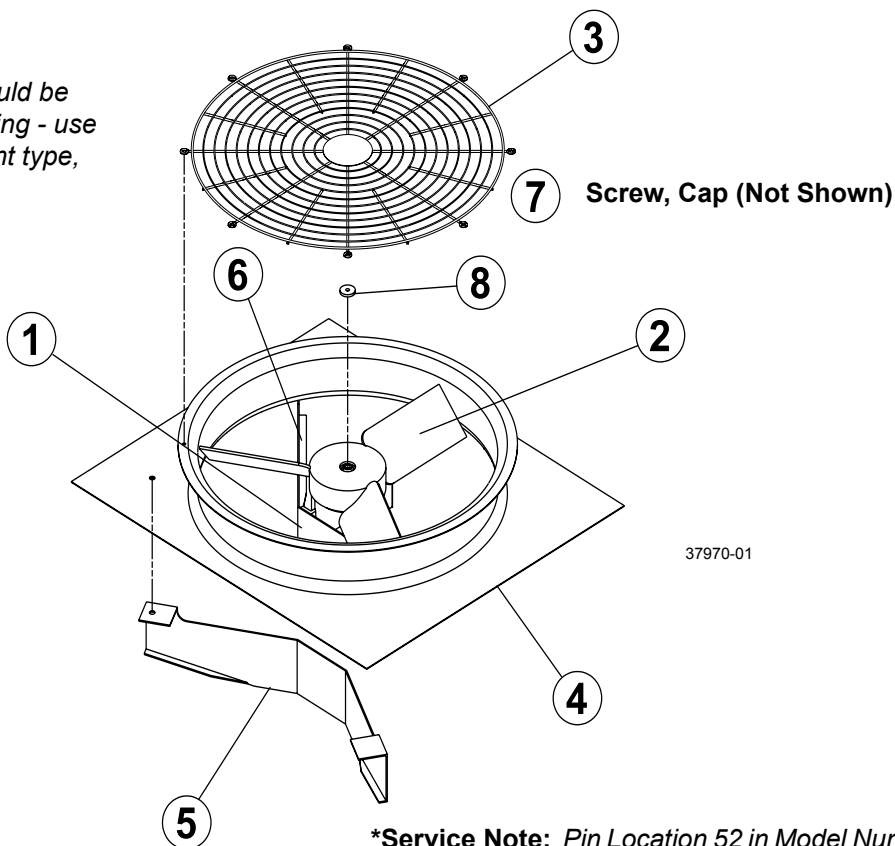

FIG. 2 – FAN COMPONENTS
TABLE 2 – FAN COMPONENTS

ITEM NUMBER	DESCRIPTION	VOLTAGE CODE	FAN TYPE*	
			STANDARD 7/8", 1160 RPM	LOW NOISE 7/8", 850 RPM
1 ^s	Motor, Fan 2 HP (YCUL0096-YCUL0140)	-17	024-30900-002	024-30933-002
		-28	024-30900-002	024-30933-002
		-40	024-30900-004	024-30933-004
		-46	024-30900-001	024-30933-001
		-50	024-30900-001	024-30933-001
		-58	024-30900-003	024-30933-003
2 ^s	Blade	All	026-37577-000	026-37579-000
3	Guard	All	026-35605-000	
4	Orifice	All	026-36760-000	
5	Support, Inner	All	075-29060-000	
6	Support, Outer	All	075-29061-000	
7	Screw, Cap (M8x125)	All	021-18494-000	
8	Spacer		075-29007-000	

^s = Recommended Spare Parts

REFRIGERANT PIPING COMPONENTS

CHILLER MODEL YCUL – MMHP

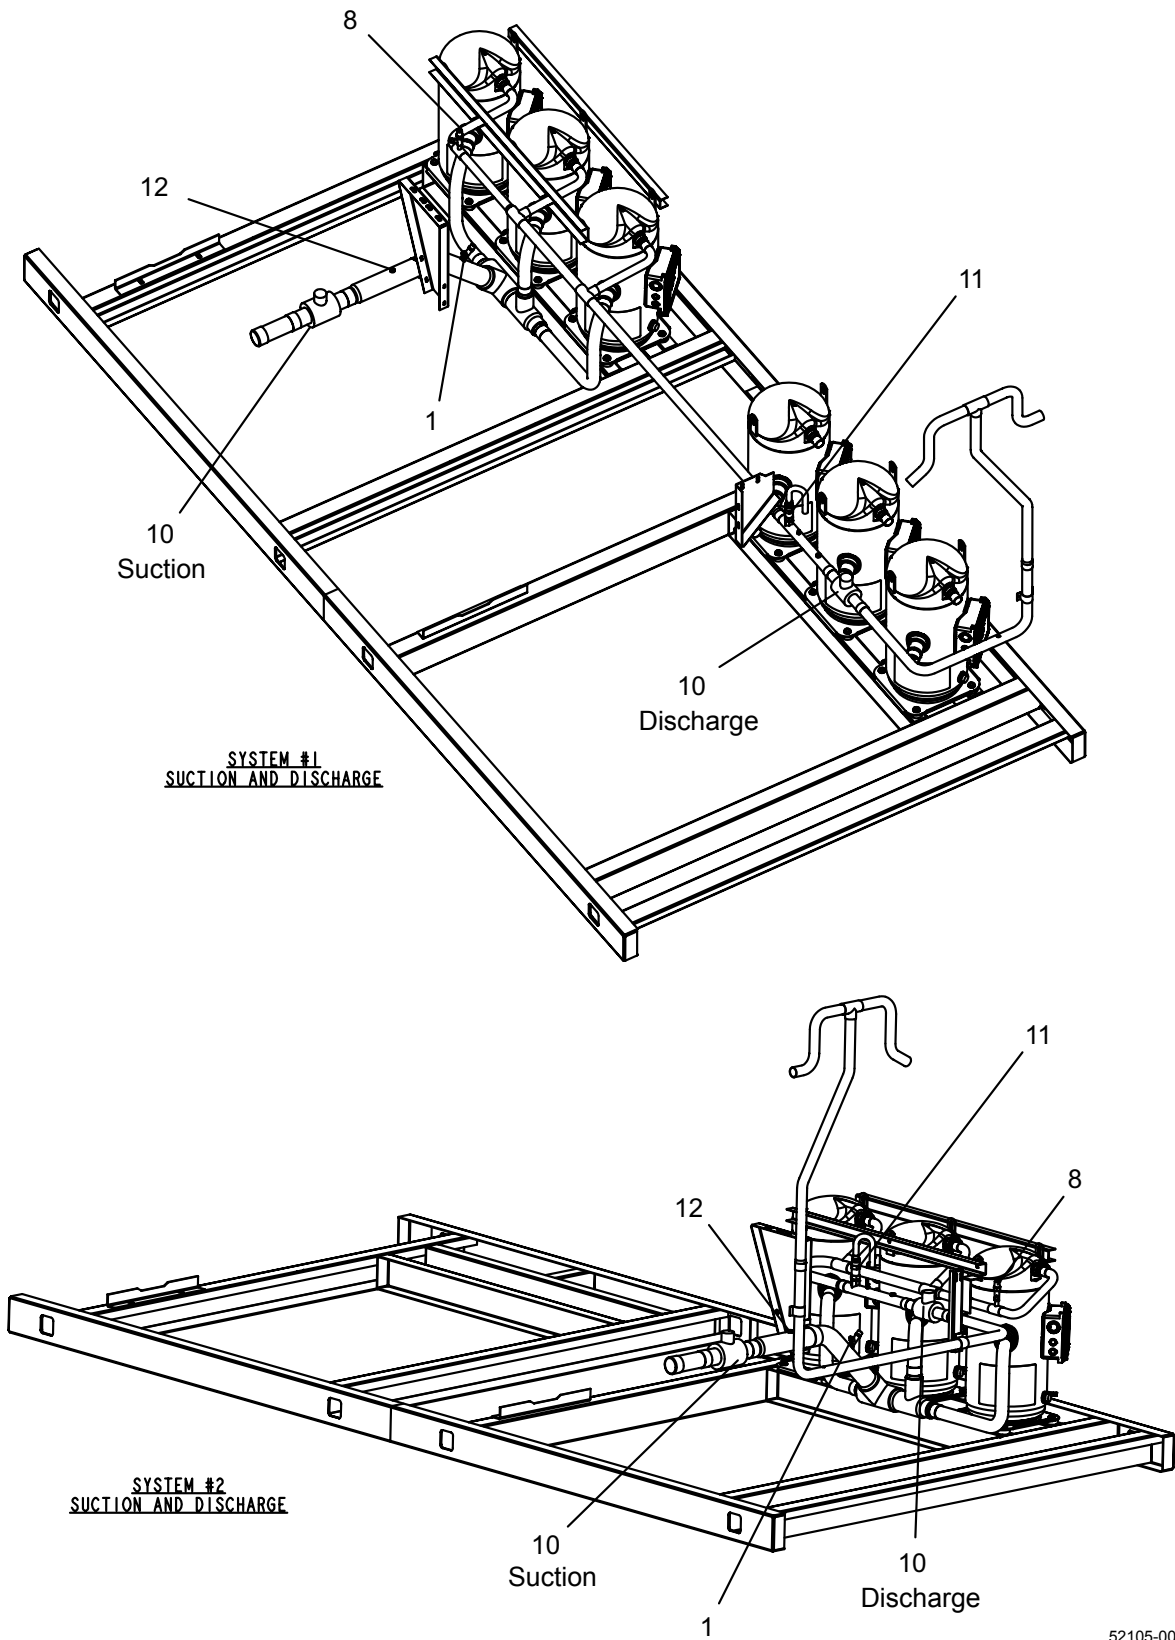


Piping

FIG. 3 – REFRIGERANT PIPING COMPONENTS - MODEL YCUL0120 SHOWN
(REF. TABLE 3, PAGES 8 & 9)

REFRIGERANT PIPING COMPONENTS (CONT'D)

CHILLER MODEL YCUL – MMHP

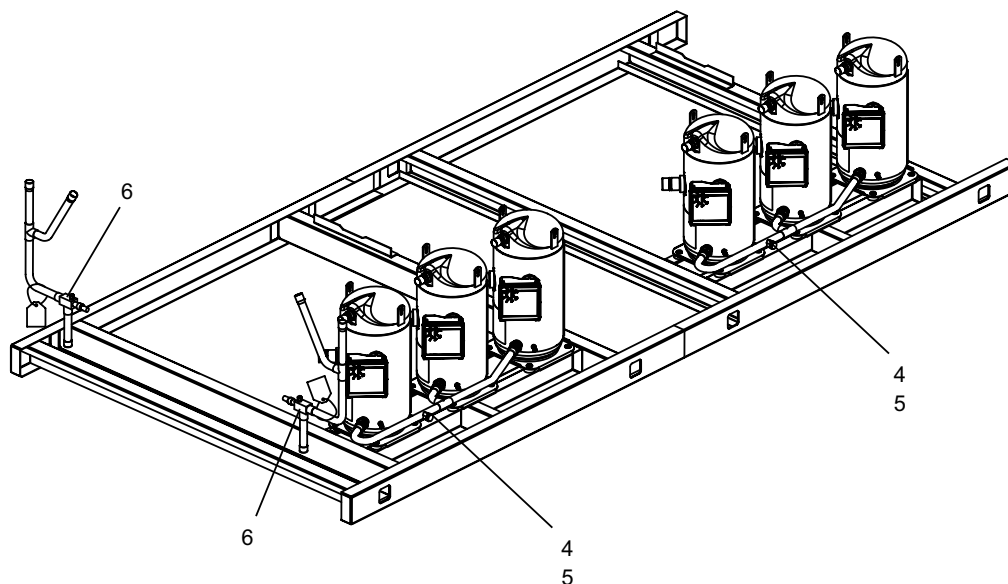

52105-002

FIG. 4 – REFRIGERANT PIPING COMPONENTS - (REF. TABLE 3, PAGES 8 & 9)

TABLE 3 – REFRIGERANT PIPING COMPONENTS (SEE FIGS. 3 AND 4, PAGES 7 AND 8)

ITEM NO.	SYS.	DESCRIPTION	YCUL0096	YCUL0100	YCUL0106
1	Both	Valve, Angle Stop	022-00021-000	022-00021-000	022-00021-000
2	1	Dehydrator, Body (Not Shown)	026-21055-000	026-21055-000	026-21055-000
	2		026-30598-000	026-21055-000	026-21055-000
3 ^s	Both	Core, Dehydrator (Not Shown)	026-37540-000	026-37540-000	026-37540-000
4	1	Moisture Indicator, Body	026-37544-000	026-37544-000	026-37545-000
	2		026-37545-000	026-37545-000	026-37545-000
5	Both	Moisture Indicator, Sight Glass Cap	026-37548-000	026-37548-000	026-37548-000
6	1	Valve, Liquid Stop	022-09778-000	022-09778-000	022-09778-000
	2		022-10022-000	022-09778-000	022-09778-000
7	Both	Compressor	See pages 12 and 13 for part numbers		
8	Both	Valve, Charging	022-09754-000	022-09754-000	022-09754-000
10	Both	Valve, Ball (Discharge)	022-08883-000	022-08883-000	022-08883-000
		Valve, Ball (Suction)	022-09753-000	022-09753-000	022-09753-000
11	Both	Valve, Relief - 450 psi	022-08863-000	022-08863-000	022-08863-000
12	Both	Button, Brass	075-37971-000	075-37971-000	075-37971-000

^s = Recommended Spare Parts

REFRIGERANT PIPING COMPONENTS (CONT'D)

CHILLER MODEL YCUL – MMHP

TABLE 3 (CONT'D) – REFRIGERANT PIPING COMPONENTS
(SEE FIGS. 3 AND 4, PAGES 7 AND 8)

ITEM NO.	SYS.	DESCRIPTION	YCUL0120	YCUL0130	YCUL0140
1^s	Both	Valve, Angle Stop	022-00021-000	022-00021-000	022-00021-000
2	1	Dehydrator, Body (Replacable Core)	026-21055-000	026-21055-000	026-21055-000
	2		026-21055-000	026-21055-000	026-21055-000
3^s	Both	Core, Dehydrator	026-37540-000	026-37540-000	026-37540-000
4	1	Moisture Indicator, Body	026-37545-000	026-37545-000	026-37545-000
	2		026-37545-000	026-37545-000	026-37545-000
5	Both	Moisture Indicator, Sight Glass Cap	026-37548-000	026-37548-000	026-37548-000
6	1	Valve, Liquid Stop	022-09778-000	022-09778-000	022-09778-000
	2		022-09778-000	022-09778-000	022-09778-000
7	Both	Compressor	See pages 12 and 13 for part numbers		
8	Both	Valve, Charging	022-09754-000	022-09754-000	022-09754-000
10	Both	Valve, Ball (Discharge)	022-08883-000	022-08883-000	022-08883-000
		Valve, Ball (Suction)	022-09753-000	022-09753-000	022-09753-000
11	Both	Valve, Relief - 450 psi	022-08863-000	022-08863-000	022-08863-000
12	Both	Button, Brass	075-37971-000	075-37971-000	075-37971-000


^s = Recommended Spare Parts

TABLE 3A – HOT GAS BY-PASS SOLENOID VALVE (025-34133-000) COIL REPLACEMENT

MODEL NUMBERS	VENDOR	DESCRIPTION	PART NUMBER
ALL	SPORLAN	COIL ONLY, SOLENOID VALVE	025-35151-000
	ALCO		025-35152-000
	DANFOSS		025-35169-000


COMPRESSOR

YCUL0096 and YCUL0100

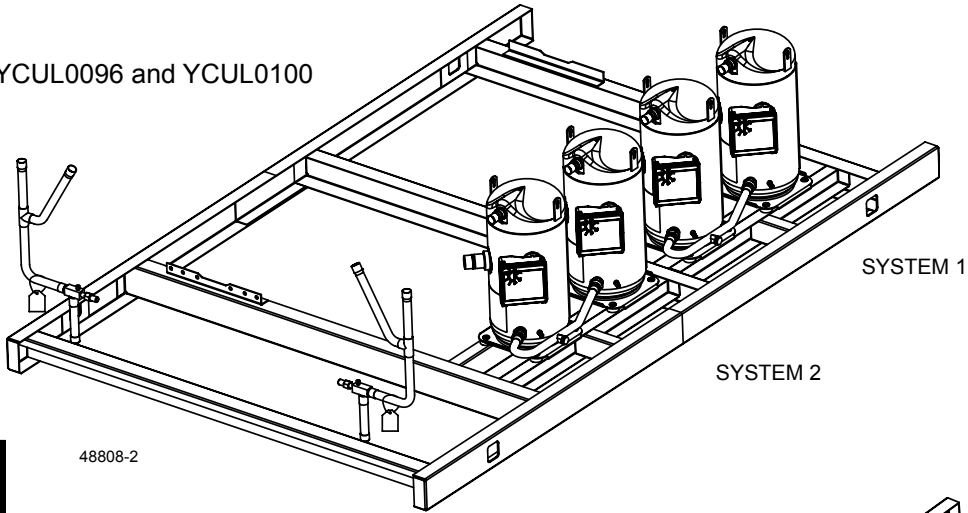


48808-2

YCUL0106

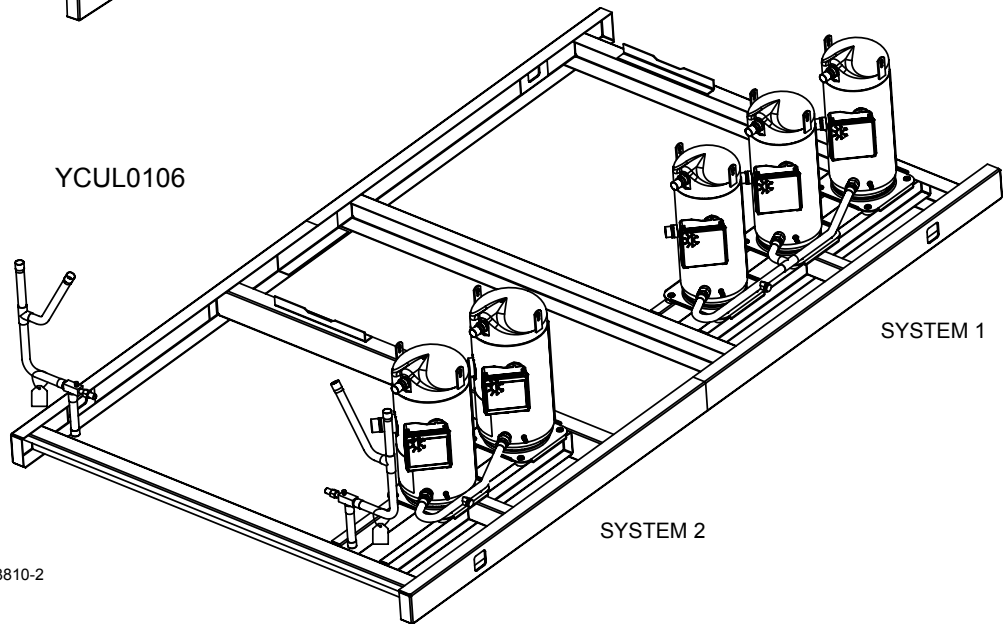

48810-2

YCUL0120, YCUL0130 and YCUL0140

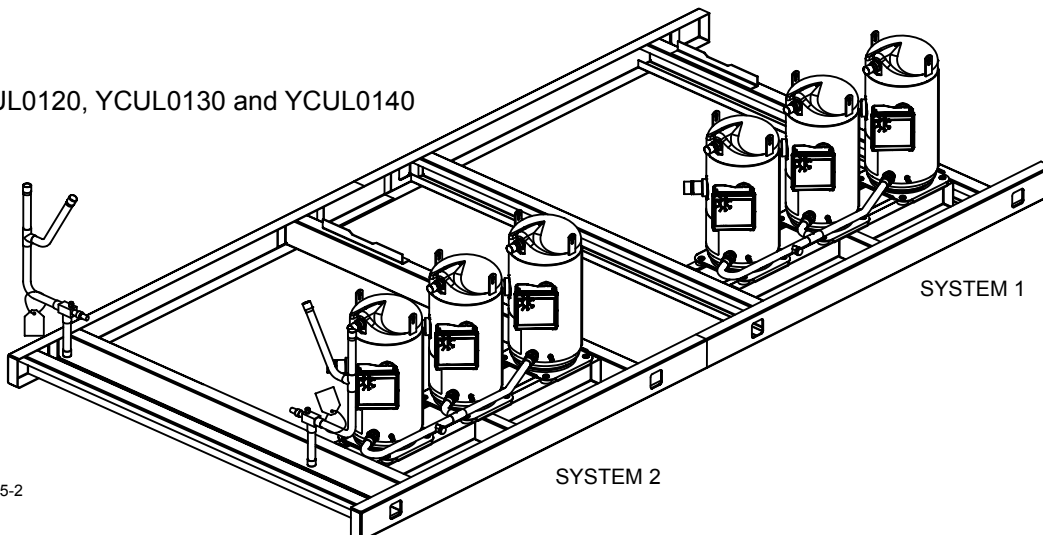

52105-2

FIG. 5 – COMPRESSOR LAYOUTS (REF. TABLES 4, 4A AND 4B, PAGES 11, 12 AND 13)

COMPRESSOR (CONT'D)

TABLE 4A – COMPRESSOR OIL TYPE

ITEM	REF.	DESCRIPTION	1 GALLON	5 GALLON
OIL^s	R-22	Oil, Type 'F' (Mineral)	—	011-00434-000
	R-407C	Oil, Type 'V'	011-00948-000	011-00949-000

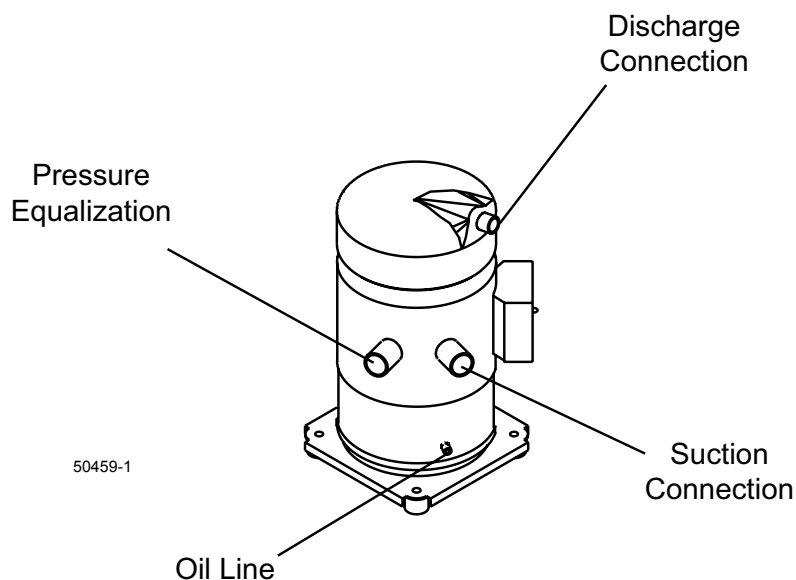
^s = Recommended Spare Parts

TABLE 4B – HEATER PART NUMBERS

MODEL	SYSTEM	WATTAGE	HEATER PART NUMBERS	QUANTITY
YCUL0096	1	150	025-37853-000	2
	2	120	025-37852-000	2
YCUL0100	1	150	025-37853-000	2
	2	150	025-37853-000	2
YCUL0106	1	120	025-37852-000	3
	2	150	025-37853-000	2
YCUL0120	1	120	025-37852-000	3
	2	120	025-37852-000	3
YCUL0130	1	150	025-37853-000	3
	2	120	025-37852-000	3
YCUL0140	1	150	025-37853-000	3
	2	150	025-37853-000	3

Compressor

ITEM	REF. NO.	DESCRIPTION	YORK NO.
A	071-0520-05	Module Protector, Copeland	025-38995-000
B	005-0892-00	Cover, T-Box	025-38996-000
C	052-1201-00	Label, Wiring Diagram	035-19345-000


FIG. 5A – COMPRESSOR (REF. TABLE 4, 4A AND 4B, PAGE 11, 12 AND 13)

COMPRESSOR (CONT'D)

TABLE 4 – COMPRESSOR PART NUMBERS - R-22
(SEE FIGS. 5 AND 5A, PAGE 10 AND 11)

R-22

MODEL	VOLTAGE CODE	SYSTEM #1 COMPRESSOR			SYSTEM #2 COMPRESSOR		
		PART #	MODEL #	QTY	PART #	MODEL #	QTY
YCUL0096	-17	015-02891-201	ZR300KC	2	015-02891-101	ZR250KC	2
	-28	015-02891-201	ZR300KC	2	015-02891-101	ZR250KC	2
	-40	015-02891-202	ZR300KC	2	015-02891-102	ZR250KC	2
	-46	015-02891-204	ZR300KC	2	015-02891-104	ZR250KC	2
	-58	015-02891-205	ZR300KC	2	015-02891-105	ZR250KC	2
YCUL0100	-17	015-02891-201	ZR300KC	2	015-02891-201	ZR300KC	2
	-28	015-02891-201	ZR300KC	2	015-02891-201	ZR300KC	2
	-40	015-02891-202	ZR300KC	2	015-02891-202	ZR300KC	2
	-46	015-02891-204	ZR300KC	2	015-02891-204	ZR300KC	2
	-58	015-02891-205	ZR300KC	2	015-02891-205	ZR300KC	2
YCUL0106	-17	015-02891-101	ZR250KC	3	015-02891-201	ZR300KC	2
	-28	015-02891-101	ZR250KC	3	015-02891-201	ZR300KC	2
	-40	015-02891-102	ZR250KC	3	015-02891-202	ZR300KC	2
	-46	015-02891-104	ZR250KC	3	015-02891-204	ZR300KC	2
	-58	015-02891-105	ZR250KC	3	015-02891-205	ZR300KC	2
YCUL0120	-17	015-02891-101	ZR250KC	3	015-02891-101	ZR250KC	3
	-28	015-02891-101	ZR250KC	3	015-02891-101	ZR250KC	3
	-40	015-02891-102	ZR250KC	3	015-02891-102	ZR250KC	3
	-46	015-02891-104	ZR250KC	3	015-02891-104	ZR250KC	3
	-58	015-02891-105	ZR250KC	3	015-02891-105	ZR250KC	3
YCUL0130	-17	015-02891-201	ZR300KC	3	015-02891-101	ZR250KC	3
	-28	015-02891-201	ZR300KC	3	015-02891-101	ZR250KC	3
	-40	015-02891-202	ZR300KC	3	015-02891-102	ZR250KC	3
	-46	015-02891-204	ZR300KC	3	015-02891-104	ZR250KC	3
	-58	015-02891-205	ZR300KC	3	015-02891-105	ZR250KC	3
YCUL0140	-17	015-02891-201	ZR300KC	3	015-02891-201	ZR300KC	3
	-28	015-02891-201	ZR300KC	3	015-02891-201	ZR300KC	3
	-40	015-02891-202	ZR300KC	3	015-02891-202	ZR300KC	3
	-46	015-02891-204	ZR300KC	3	015-02891-204	ZR300KC	3
	-58	015-02891-205	ZR300KC	3	015-02891-205	ZR300KC	3

APPROXIMATE COMPRESSOR WEIGHTS

ZR250KC	015-02891-1XX	313 LBS.
ZR300KC	015-02891-2XX	407 LBS.

COMPRESSOR (CONT'D)

TABLE 4 (CONT'D) – COMPRESSOR PART NUMBERS - R-407C
(SEE FIGS. 5 AND 5A, PAGE 10 AND 11)

R-407C

MODEL	VOLTAGE CODE	SYSTEM #1 COMPRESSOR			SYSTEM #2 COMPRESSOR		
		PART #	MODEL #	QTY	PART #	MODEL #	QTY
YCUL0096	-17	015-02891-401	ZR300KCE	2	015-02891-301	ZR250KCE	2
	-28	015-02891-401	ZR300KCE	2	015-02891-301	ZR250KCE	2
	-40	015-02891-402	ZR300KCE	2	015-02891-302	ZR250KCE	2
	-46	015-02891-404	ZR300KCE	2	015-02891-304	ZR250KCE	2
	-58	015-02891-405	ZR300KCE	2	015-02891-305	ZR250KCE	2
YCUL0100	-17	015-02891-401	ZR300KCE	2	015-02891-401	ZR300KCE	2
	-28	015-02891-401	ZR300KCE	2	015-02891-401	ZR300KCE	2
	-40	015-02891-402	ZR300KCE	2	015-02891-402	ZR300KCE	2
	-46	015-02891-404	ZR300KCE	2	015-02891-404	ZR300KCE	2
	-58	015-02891-405	ZR300KCE	2	015-02891-405	ZR300KCE	2
YCUL0106	-17	015-02891-301	ZR250KCE	3	015-02891-401	ZR300KCE	2
	-28	015-02891-301	ZR250KCE	3	015-02891-401	ZR300KCE	2
	-40	015-02891-302	ZR250KCE	3	015-02891-402	ZR300KCE	2
	-46	015-02891-304	ZR250KCE	3	015-02891-404	ZR300KCE	2
	-58	015-02891-305	ZR250KCE	3	015-02891-405	ZR300KCE	2
YCUL0120	-17	015-02891-301	ZR250KCE	3	015-02891-301	ZR250KCE	3
	-28	015-02891-301	ZR250KCE	3	015-02891-301	ZR250KCE	3
	-40	015-02891-302	ZR250KCE	3	015-02891-302	ZR250KCE	3
	-46	015-02891-304	ZR250KCE	3	015-02891-304	ZR250KCE	3
	-58	015-02891-305	ZR250KCE	3	015-02891-305	ZR250KCE	3
YCUL0130	-17	015-02891-401	ZR300KCE	3	015-02891-301	ZR250KCE	3
	-28	015-02891-401	ZR300KCE	3	015-02891-301	ZR250KCE	3
	-40	015-02891-402	ZR300KCE	3	015-02891-302	ZR250KCE	3
	-46	015-02891-404	ZR300KCE	3	015-02891-304	ZR250KCE	3
	-58	015-02891-405	ZR300KCE	3	015-02891-305	ZR250KCE	3
YCUL0140	-17	015-02891-401	ZR300KCE	3	015-02891-401	ZR300KCE	3
	-28	015-02891-401	ZR300KCE	3	015-02891-401	ZR300KCE	3
	-40	015-02891-402	ZR300KCE	3	015-02891-402	ZR300KCE	3
	-46	015-02891-404	ZR300KCE	3	015-02891-404	ZR300KCE	3
	-58	015-02891-405	ZR300KCE	3	015-02891-405	ZR300KCE	3

Compressor

APPROXIMATE COMPRESSOR WEIGHTS		
ZR250KC	015-02891-1XX	313 LBS.
ZR300KC	015-02891-2XX	407 LBS.

CONTROL PANEL COMPONENTS



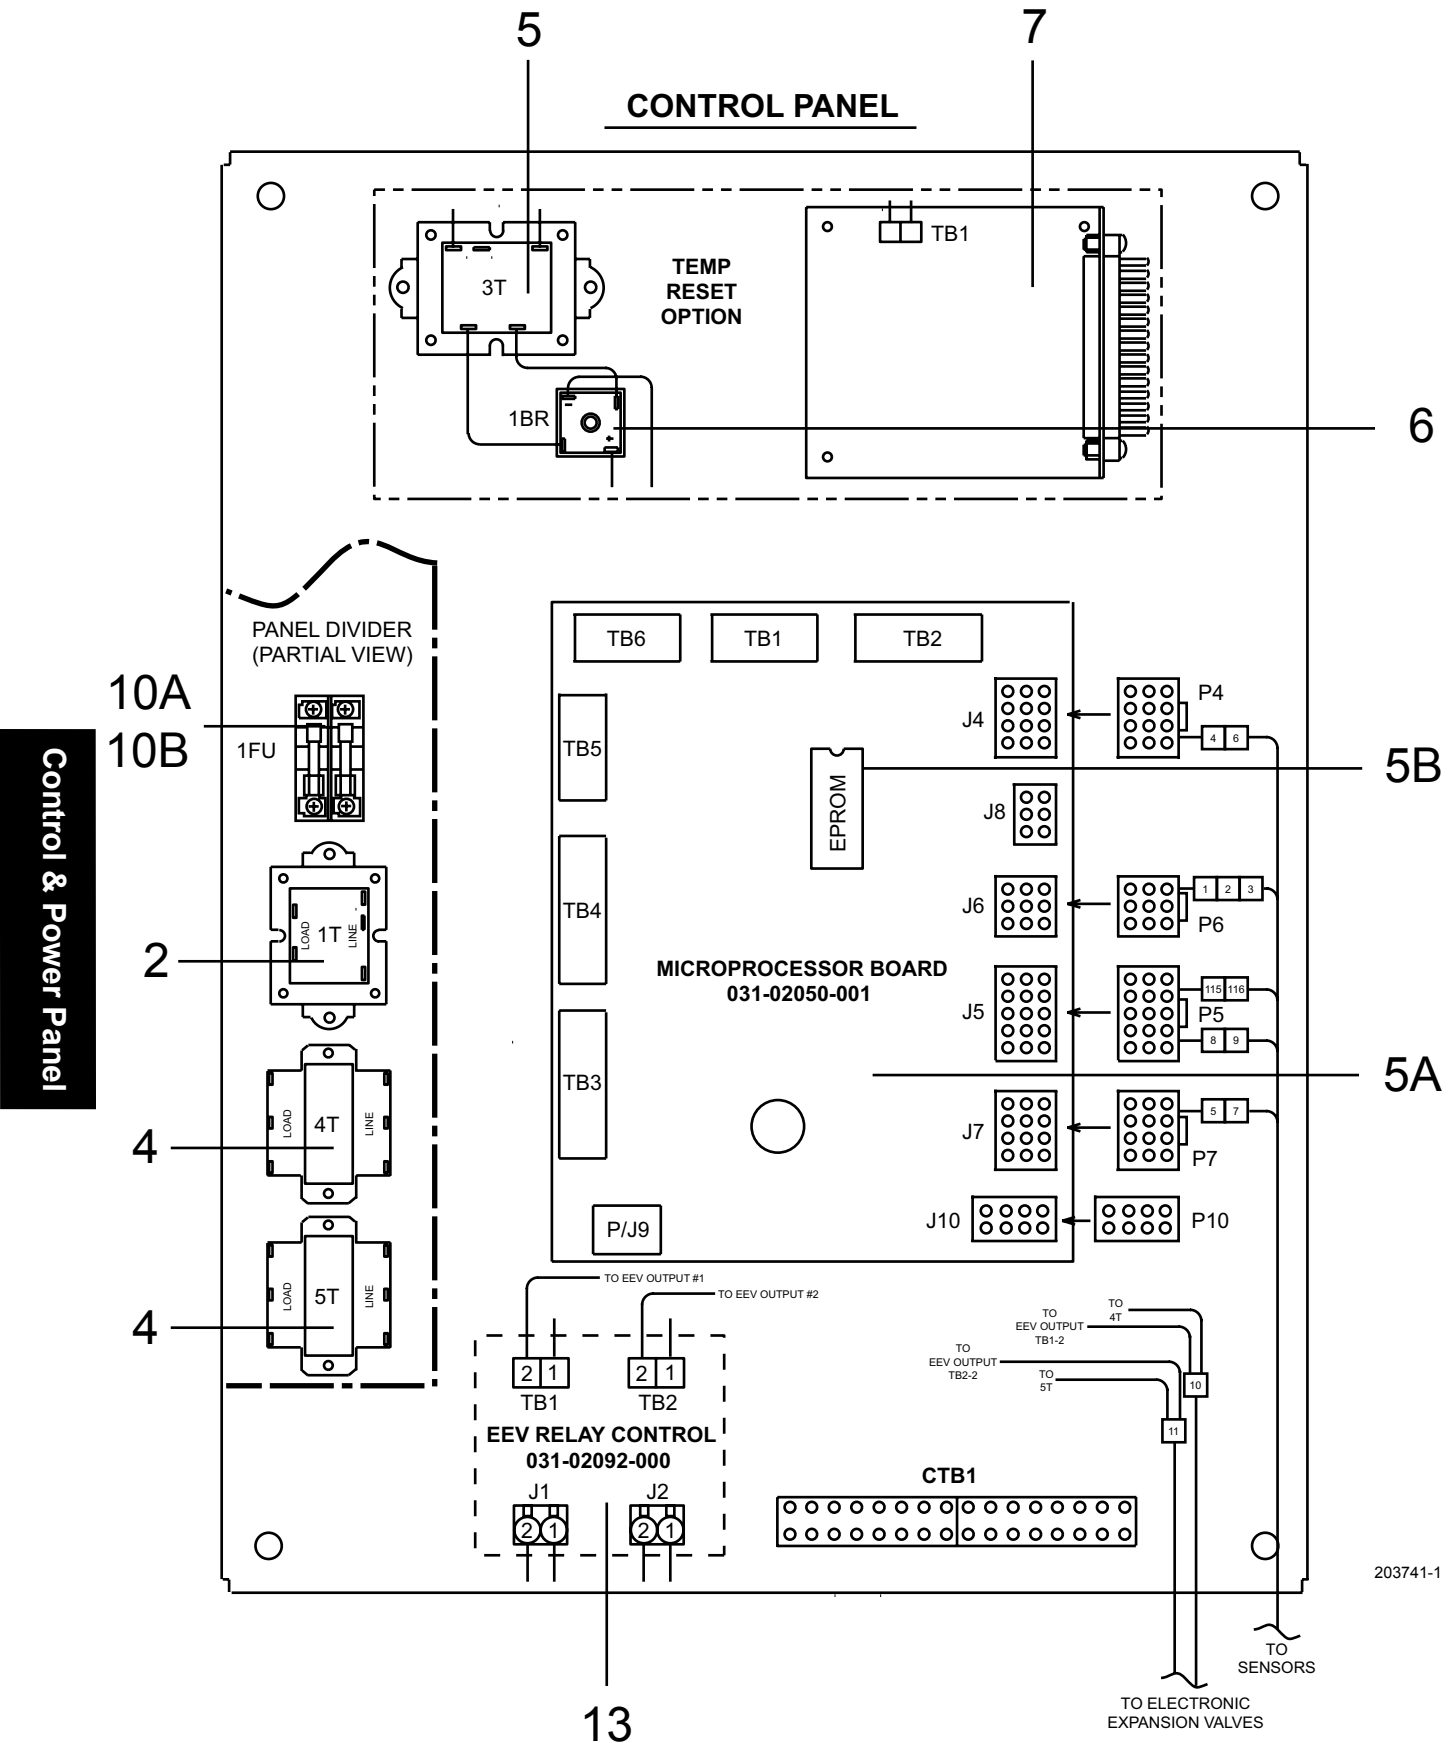


FIG. 6 – CONTROL PANEL COMPONENTS (REF. TABLE 5, PAGE 16)

CONTROL PANEL COMPONENTS (CONT'D)

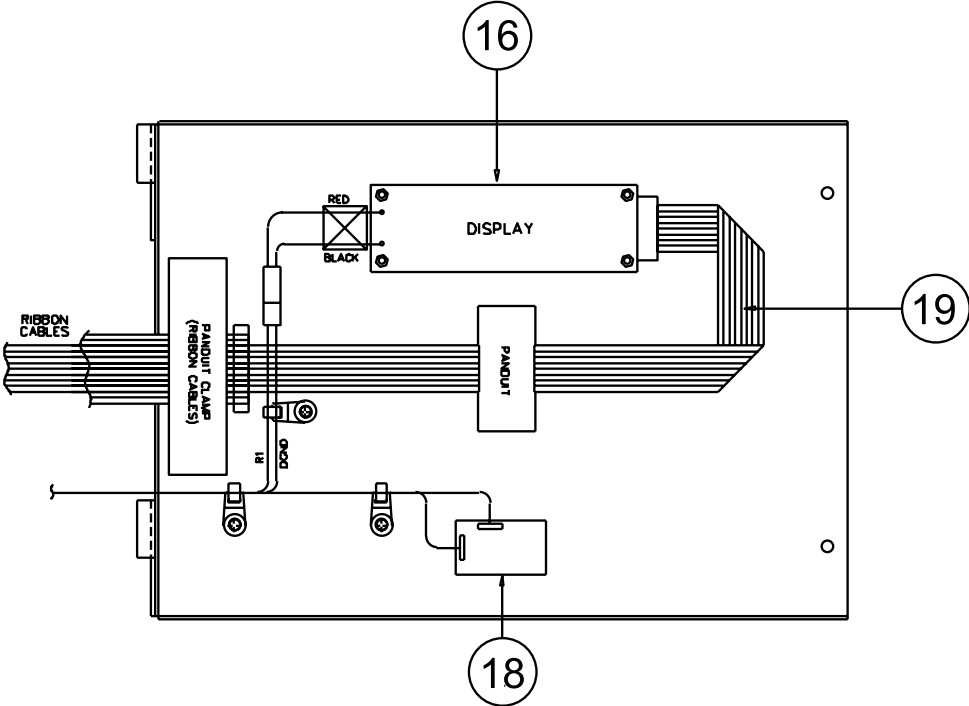

DISPLAY DOOR REAR VIEW

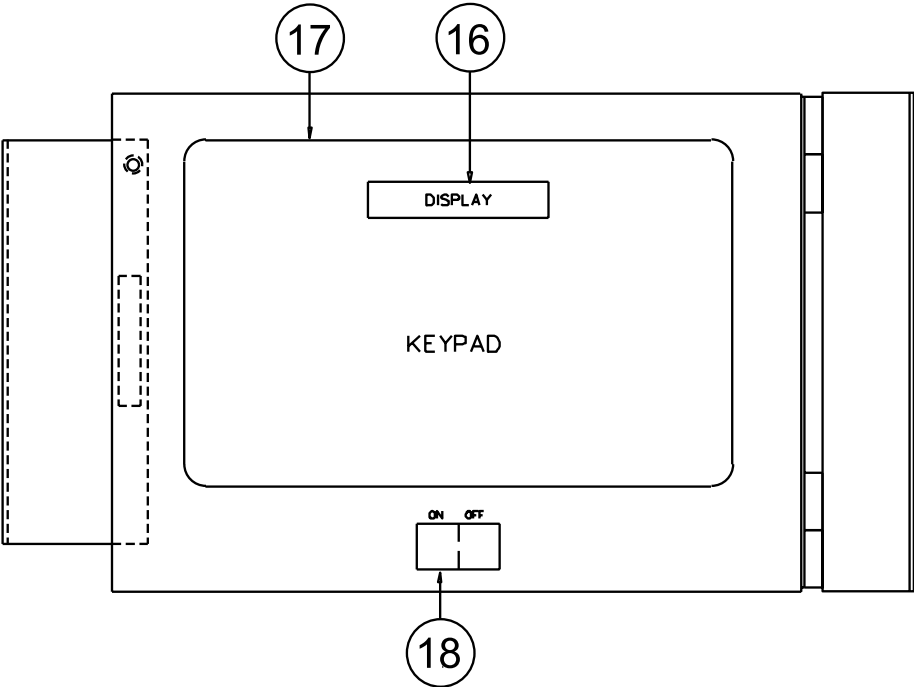

DISPLAY DOOR FRONT VIEW

Control & Power Panel

FIG. 6A – CONTROL PANEL COMPONENTS (REF. TABLE 5, PAGE 16)

CONTROL PANEL COMPONENTS (CONT'D)

TABLE 5 – CONTROL PANEL COMPONENTS (SEE FIGS. 6 AND 6A, PAGES 14 AND 15)

Item No.	Qty.	Description	Common Parts
2	1	Transformer (115/24V)	025-30889-000
4	2	Transformer (4T & 5T)	025-27911-000
5	1	Transformer (3T)	025-18452-000
6	1	Bridge Rectifier	031-02201-000
7	1	Remote Temp or Current Reset	031-00814-000
5A^S	1	Micro Board	031-02050-001
5B^S	1	EPROM	031-02423-001
10A	1	Fuse Holder	025-34484-000
10B^S	1	Fuse (10 Amp)	025-38357-000
		Fuse (20 Amp)	025-34142-000
13	1	EEV Board	031-02092-000
16	1	Display	031-01110-000
17	1	Keypad	024-27838-000
18	1	Switch, On/Off	024-25517-000
19	1	Ribbon Cable, Display	031-01109-211

S Recommended Spare Part

LUG KITS

LUG KITS TABLE

Circuit Breakers		Wire Size	YORK Lug Kit Part Number
024-31852-000	S3H035TW	#14AWG-#2 AWG	025-34477-000
024-31837-000	S3H040TW		
024-31838-000	S3H050TW		
024-31839-000	S3H060TW		
024-31840-000	S3H070TW	#14AWG-#1/0 AWG	025-34478-000
024-31841-000	S3H080TW		
024-31842-000	S3H090TW		
024-31843-000	S3H100TW		
024-31844-000	S3H125TW	(1) 2-4/0 AWG	025-34479-000
024-31649-000	S3H150TW		
024-31820-000	S3H175TW	#14AWG-300KCMIL AWG	025-34480-000
024-31851-000	S3H200TW		
024-31819-000	S3H225TW		
025-34419-000	S4H250BW	#6AWG-350KCMIL AWG	025-34418-000
024-34424-000	S5H400BW	(1) 250-500KCMIL AWG	025-34481-000
Non-Fused Disconnect Switch		Wire Size	YORK Lug Kit Part Number
024-31888-000	S3H150DW	(1) 2-4/0 AWG	025-34479-000
024-31871-000	S3B225DW	#14AWG-300KCMIL AWG	025-34480-000
024-30963-000	S4H250DW	#6AWG-350KCMIL AWG	025-34418-000
024-30964-000	S5H400DW	(1) 250-500KCMIL AWG	025-34481-000

SENSOR HARNESSES

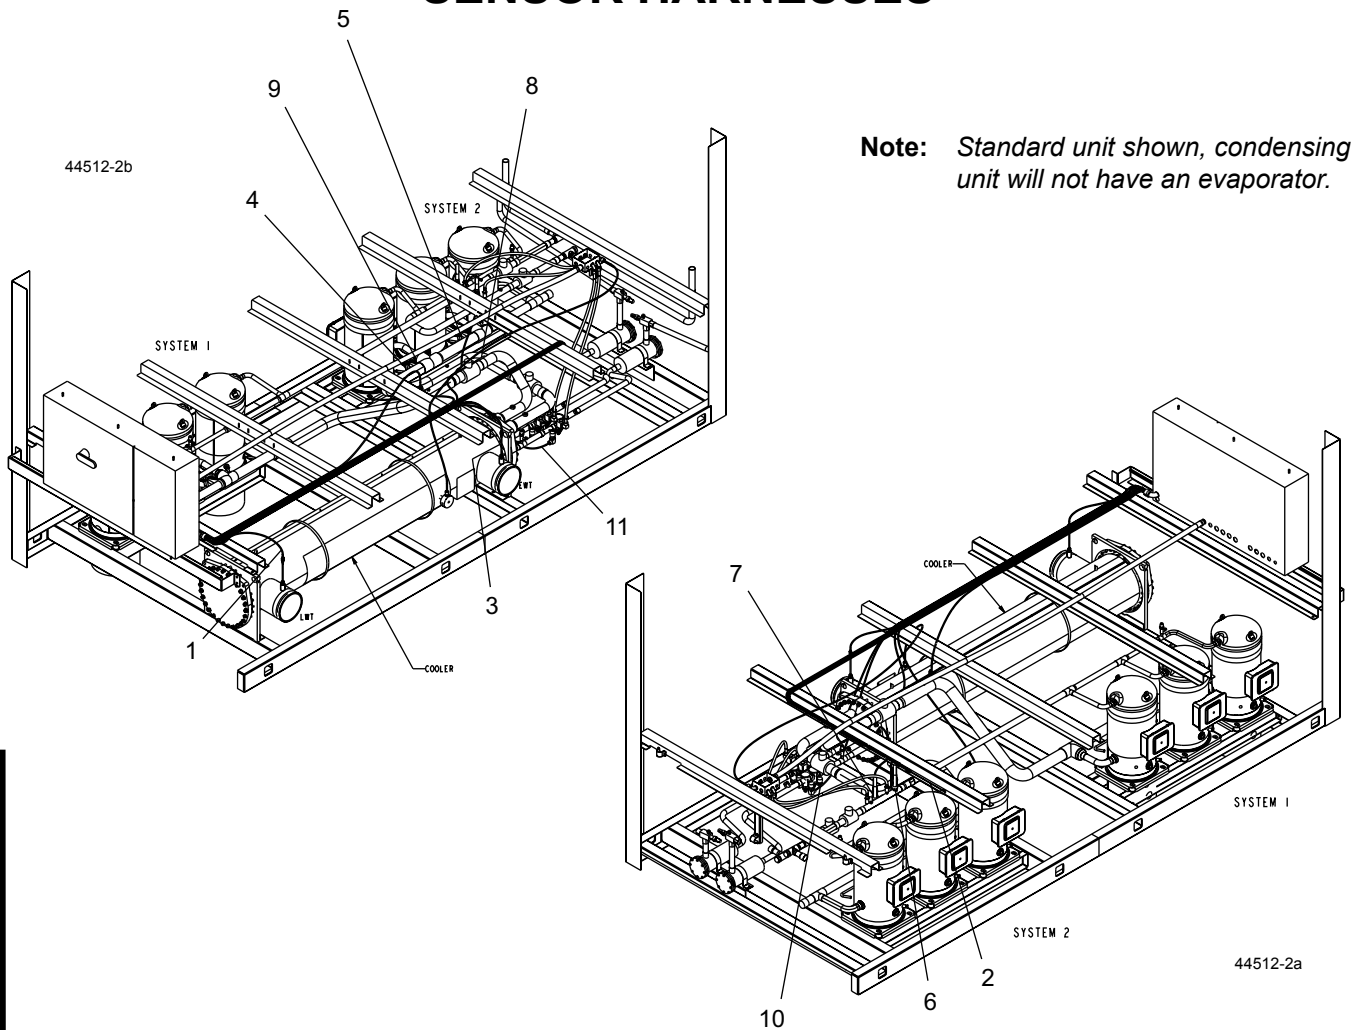


FIG. 7 – HARNESS LAYOUT (REF. TABLE 6, PAGE 19)

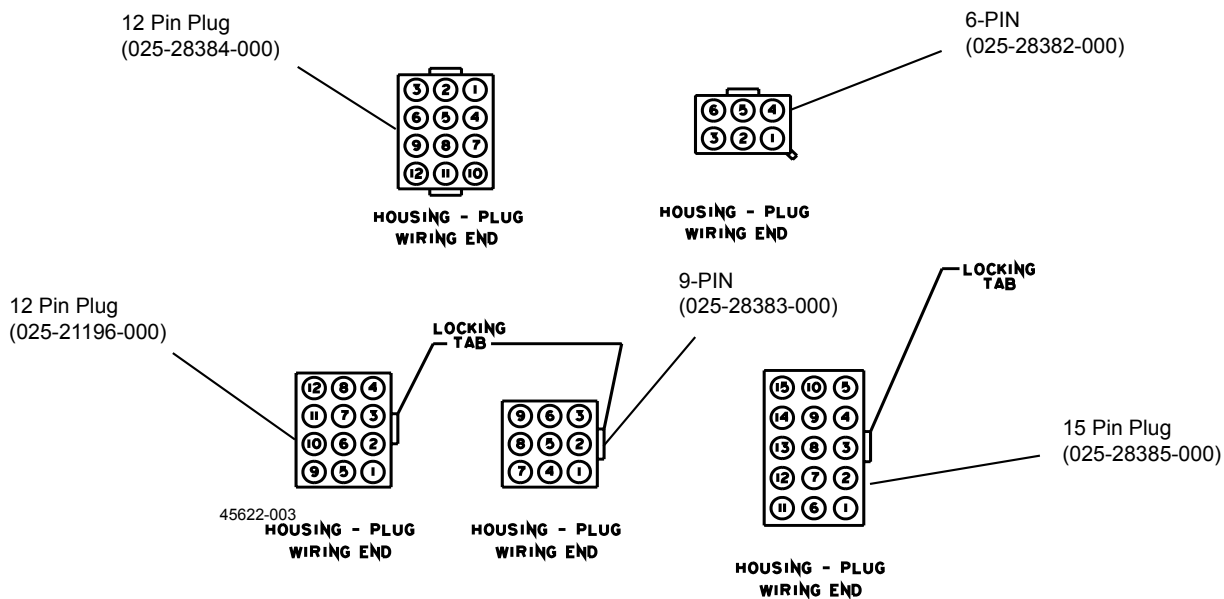


FIG. 8 – SENSOR HOUSING PART NUMBERS (REF. TABLE 6, PAGE 19)

SENSOR HARNESSES - CONT'D

TABLE 6 – SENSOR HARNESS WIRING (SEE FIGS. 7 AND 8, PAGE 18)

Board Location	Cable Item No.	Cable No.	Wire Color	Plug Pin No.	Function	Harness Assembly Part Number
MICRO P4	101	4	Red	5	System #1 Suction Pressure	375-46161-401
			White	10		
			Black	1		
			Drain	2		
	106	6	Red	7	System #1 Discharge Pressure	375-46161-403
			White	12		
			Black	8		
			Drain	9		
MICRO P6	103	1	Black	5	Leaving Chilled Water Temperature	N/A
			Red	8		
			Drain	2		
	105	3	Black	6	Entering Chilled Water Temperature	N/A
			Red	9		
			Drain	3		
	104	2	Black	4	Outside Air Temperature	375-46161-406
			Red	7		
			Drain	1		
MICRO P7	102	5	Red	5	System #2 Suction Pressure	375-46161-402
			White	10		
			Black	1		
			Drain	2		
	107	7	Red	7	System #2 Discharge Pressure	375-46161-404
			White	12		
			Black	8		
			Drain	9		
MICRO P5	407C	115	Red	12	System #1 Liquid Temperature Sensor	375-46161-281
			Black	7		
			Drain	2		
	407C	116	Red	13	System #2 Liquid Temperature Sensor	375-46161-282
			Black	8		
			Drain	3		
	108	8	Red	14	System #1 Suction Temperature Sensor	371-37966-281
			Black	9		
			Drain	4		
	109	9	Red	15	System #2 Suction Temperature Sensor	371-37966-282
			Black	10		
			Drain	5		

Control & Power Panel

TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS

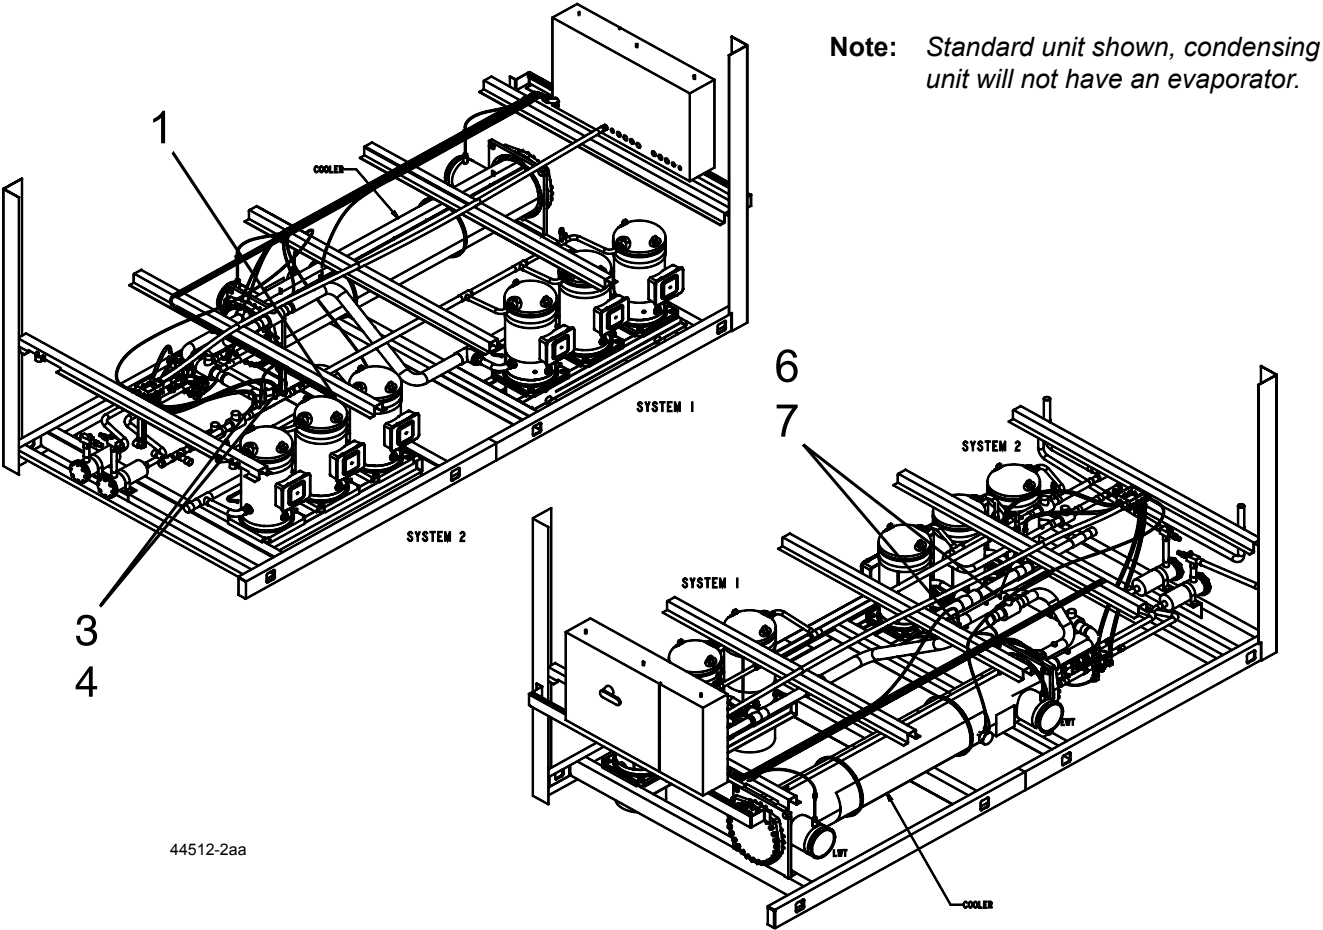



FIG. 9 – TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS (REF. TABLE 7)

TABLE 7 – TRANSDUCERS, PRESSURE CUTOUTS AND TEMP SENSORS (SEE FIG. 9)

Item Number	Quantity	Description	Volt-age Code	Part Number
1 ^S	1	Sensor, Outside Air Temperature	All	025-28663-001
2	1 per system	Sensor, Suction Temp. (Not Shown)	All	025-28935-000
3 ^S	1 per system	Switch, High Pressure Cutout	All	375-00453-063
4 ^S	1 per system	Switch, High Pressure Cutout	All	375-00453-064
5	-	Compound, Heat Conductive (Not Shown)	All	013-00898-000
6 ^S	1 per system	Transducer, Suction Pressure (0-200psi)	All	025-29583-000
7 ^S	1 per system	Transducer, Discharge Pressure (0-400psi)	All	025-29139-001
8	1 per system	Sensor, Discharge Air Temp. (Not Shown)	All	025-28935-000

^S Recommended Spare Part

TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS - FIELD REPLACEMENT PART NUMBERS

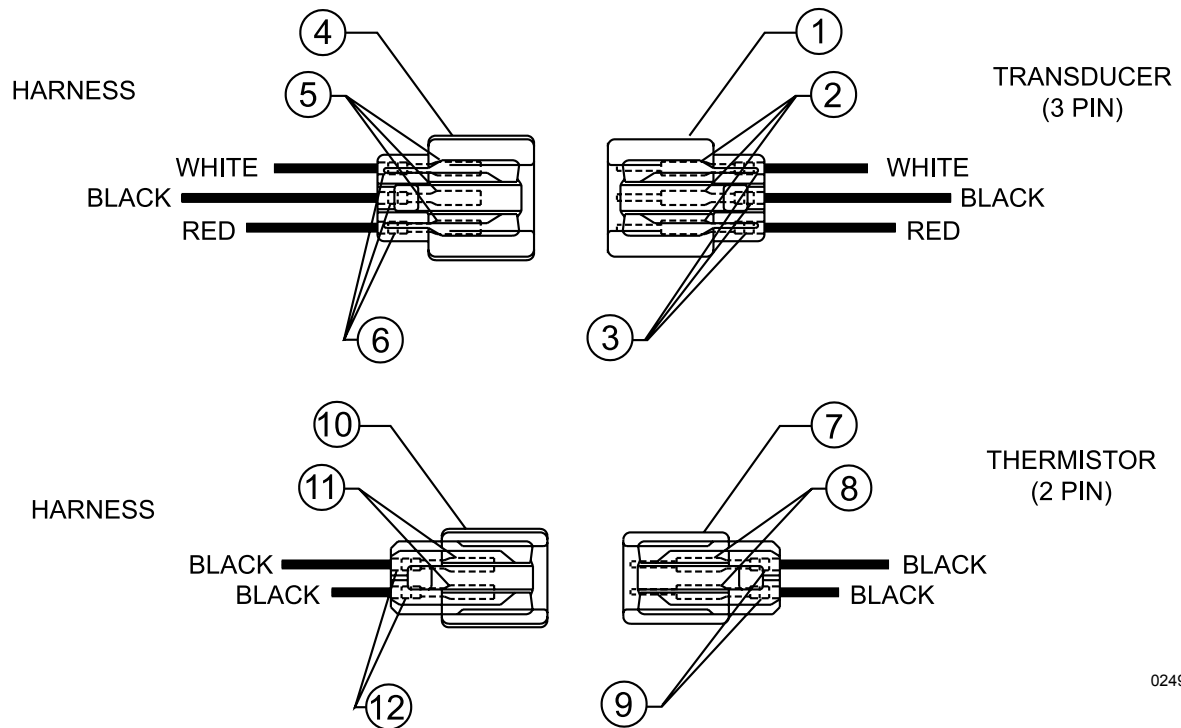

02492-2b

FIG. 10 – TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS - FIELD REPLACEMENT PART NUMBERS (REF. TABLE 8)

TABLE 8 – TRANSDUCER AND THERMISTOR WIRE HARNESS CONNECTORS - FIELD REPLACEMENT PART NUMBERS (SEE FIG. 10)

Item No.	Location	Description	Pins	Part Number
1	Transducer	Plug Connector	3 Pin End	025-28953-000
2		Contact Pins		025-28949-000
3		Rubber Collar		025-28950-000
4	Wire Harness	Plug Connector	3 Pin End	025-28954-000
5		Contact Pins		025-28952-000
6		Rubber Collar		025-28950-000
7	Transducer	Plug Connector	2 Pin End	025-28948-000
8		Contact Pins		025-28949-000
9		Rubber Collar		025-28950-000
10	Wire Harness	Plug Connector	2 Pin End	025-28951-000
11		Contact Pins		025-28952-000
12		Rubber Collar		025-28950-000

POWER PANEL COMPONENTS


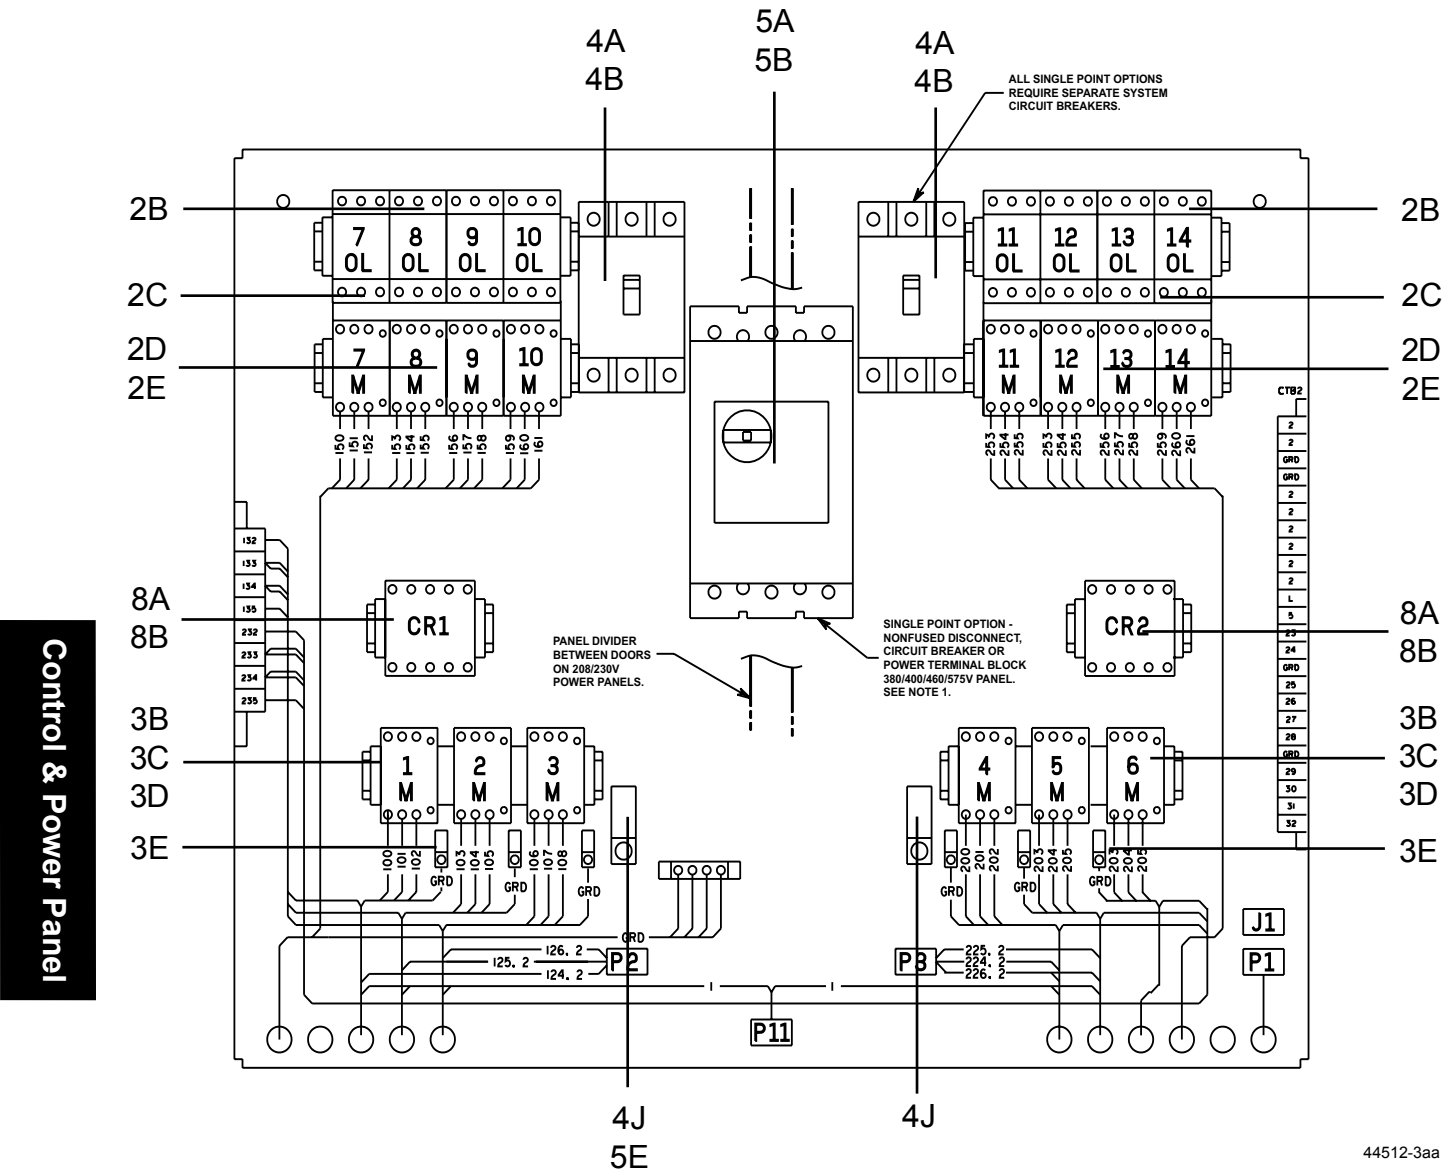


FIG. 11 – POWER PANEL COMPONENTS - (REF. TABLE 9, PAGES 24-113)

Note #1:

Lug Kits for Circuit Breakers or Non-Fused Disconnect Switches - See LUG KIT TABLE on Page 17.

POWER PANEL COMPONENTS (CONT'D)

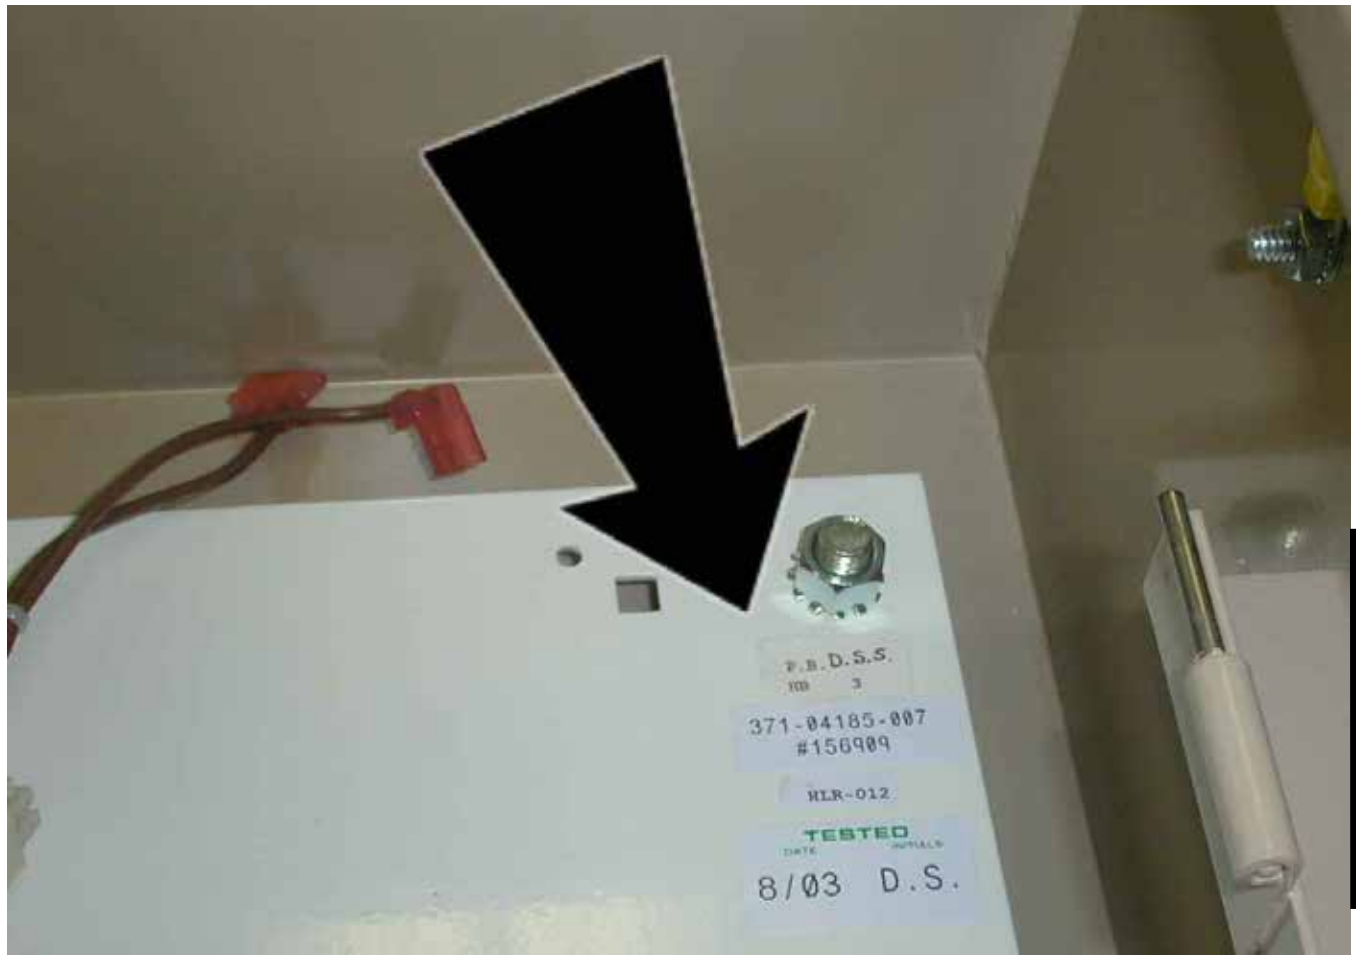

Control & Power Panel

FIG. 11a – PANEL NUMBER STICKER - (REF. TABLE 9, PAGES 24-113)

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-004	371-04187-005	371-04495-005	371-04116-009	371-04187-012	371-04495-012
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3C	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3D	2	Surge Suppressor (Sys 1)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
3E	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
4A	1	Auxiliary Contact	031-02213-000	031-02213-000	031-00808-000	031-02213-000	031-02213-000	031-00808-000
4B	1	Ground Lug	024-32933-000	024-32933-000	N/A	N/A	N/A	N/A
4C	4	MP Terminal Block (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4D	3	MP Terminal Block (Sys 2)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	N/A
4E	3	MP Circuit Breaker (Sys 1)	025-38349-000	025-38364-000	025-38364-000	025-34424-000	025-34419-000	025-34419-000
4F	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-31819-000	024-31819-000	024-31819-000
4G	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4H	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4I	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34085-000	025-34085-000
4K	1	MP Ground Lug (Sys 2)				025-34085-000		
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5C	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5D	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
5F	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^S Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	371-04495-021
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000
3C	2	Surge Suppressor (Sys 1)	031-02213-000	031-02213-000	031-02101-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-00808-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30963-000	024-30963-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-31871-000	024-31871-000	024-31871-000
4B	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34085-000	025-34085-000
	1	MP Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-17 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-024	371-04187-034	371-04495-034	371-04116-030	371-04187-027	371-04495-027
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	2	Surge Suppressor (Sys 1)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	031-00808-000	024-32933-000	024-32933-000	031-00808-000
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	025-34419-000	025-34419-000	025-34424-000	025-34419-000	025-34419-000
	1	MP Circuit Breaker (Sys 2)	024-31819-000	024-31819-000	024-31819-000	024-31819-000	024-31819-000	024-31819-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
	1	MP Ground Lug (Sys 2)	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5B	1	SP Non-Fused Disc. Sw.	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
	1	SP Oper. Mech. (NFDS)	025-35695-000	025-35695-000	025-35695-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^S Recommended Spare Part

***Service Note:**
 Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04116-004	371-04187-006	371-04495-006	371-04116-010	371-04187-013	371-04495-013
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	4	Surge Suppressor	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Ground Lug (Sys 1)	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	2	Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	025-38350-000	025-38364-000	025-34455-000	N/A	N/A	025-34455-000
	3	MP Terminal Block (Sys 2)	025-38349-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	024-31819-000	024-31819-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-31819-000	024-31819-000	024-31819-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34089-000	024-31878-000	024-31878-000	024-31878-000
4J	1	MP Ground Lug (Sys 2)	N/A	025-34088-000	025-34088-000	025-34085-000	025-34085-000	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04116-015	New Seimens 371-04187-020	Telemechanique 371-04495-020
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	024-32933-000
3E	2	Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34088-000
	2	Ground Lug (Sys 2)			025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30963-000	024-31871-000	024-31871-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-31871-000	024-31871-000	024-31871-000
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34085-000	025-34089-000	025-34089-000
	1	MP Ground Lug (Sys 2)	025-34089-000		
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-28 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw.			Single Point Terminal Block		
			w/ Sep. Sys. Circuit Breakers*			w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^s	6	Fan Overload	371-04116-025	371-04187-035	371-04495-035	371-04116-031	371-04187-028	371-04495-028
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	2	Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34455-000	025-34089-000	025-34089-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	024-31819-000	024-31819-000	025-34424-000	024-31819-000	024-31819-000
	1	MP Circuit Breaker (Sys 2)	024-31819-000	024-31819-000	024-31819-000	024-31819-000	024-31819-000	024-31819-000
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34085-000	025-34089-000	025-34085-000	025-34085-000
5A	1	MP Ground Lug (Sys 2)	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5B	1	SP Non-Fused Disc. Sw.	024-30965-000	024-30964-000	024-30964-000	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	025-35695-000	024-31878-000	024-31878-000	N/A	N/A	N/A
8A	2	SP Ground Lug	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34089-000	025-34089-000
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-010	371-04188-013	371-04496-013	371-04117-039	371-04188-032	371-04496-032
2C	6	Link Module	024-32935-000	024-32935-000	025-33169-000	024-32935-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Suppressor	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33419-000	024-33419-000	024-31649-000
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP Oper. Mech. (Sys 1)	N/A	N/A	N/A	024-33430-000	024-33430-000	024-31878-000
	1	MP Oper. Mech. (Sys 2)	N/A	N/A	N/A	024-33429-000	024-33429-000	024-31878-000
5A	1	MP Ground Lug (Sys 1)	025-34455-000	025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34089-000
	1	MP Ground Lug (Sys 2)	N/A	N/A	N/A	025-34088-000	025-34088-000	025-34088-000
5B	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8B	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04117-028	New Seimens 371-04188-050	Telemechanique 371-04496-050
2B ^s	6	Fan Overload	024-32935-000	024-32935-000	025-33169-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33412-000	024-33411-000	024-34309-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	024-32933-000
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-40 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-079	371-04188-087	371-04496-087	371-04118-099	371-04188-069	371-04496-069
2C	6	Link Module	024-34298-000	024-32935-000	025-33169-000	024-34298-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Suppressor	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	024-33419-000	024-33419-000	024-31649-000	024-33419-000	024-33419-000	024-31649-000
4B	2	MP Oper. Mech. CB & NFDS (Sys 1)	024-33418-000	024-33418-000	024-31844-000	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Oper. Mech. CB & NFDS (Sys 2)	024-33430-000	024-33430-000	024-31878-000	024-33430-000	024-33430-000	024-31878-000
5A	1	MP Oper. Mech. CB & NFDS (Sys 2)	024-33429-000	024-33429-000	025-34089-000	024-33429-000	025-34089-000	025-34089-000
	1	MP Ground Lug (Sys 1)	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5B	1	MP Ground Lug (Sys 2)	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
	1	SP Terminal Block	024-33425-000	024-33425-000	024-31870-000	N/A	N/A	N/A
5C	1	SP Non-Fused Disc. Sw.	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
5D	2	SP Oper. Mech. (NFDS)	025-34085-000	025-34085-000	025-34089-000	025-34086-000	025-34089-000	025-34089-000
5E	2	SP Ground Lug	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8A	2	Surge Suppressor	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000
8B	2	Relay						

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^s	6	Fan Overload	371-04117-008	024-34298-000	025-33169-000	371-04117-037	371-04188-028	371-04496-028
2C	6	Link Module		024-34314-000	025-38361-000	024-34298-000	024-34298-000	025-33169-000
2D^s	6	Fan Contactor		024-32929-000	024-34302-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor		031-02213-000	031-02106-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)		031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)		024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor		024-33046-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
	1	Auxiliary Contact		031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	4	Ground Lug		024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)		025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)		025-37614-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)		025-37614-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)		N/A	N/A	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)		N/A	N/A	024-33417-000	024-33417-000	024-31843-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)		N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.		N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug		N/A	N/A	024-33429-000	024-33429-000	024-31878-000
	1	SP Terminal Block		025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Non-Fused Disc. Sw.		N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)		N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug		N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor		031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay		024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		371-04496-045
2B ^s	6	Fan Overload	371-04117-055	371-04188-045	025-33169-000	025-33169-000
2C	6	Link Module	024-34298-000	024-32935-000	025-38361-000	025-38361-000
2D ^s	6	Fan Contactor	024-34314-000	024-32929-000	024-34302-000	024-34302-000
2E	6	Suppressor	031-02213-000	031-02213-000	031-02106-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33411-000	024-33046-000	024-34308-000	024-34308-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34307-000	024-34307-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000	024-31888-000
4J	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000	024-31878-000
5A	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000	025-34089-000
	1	SP Terminal Block	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A
	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-46 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^s	6	Fan Overload	371-04117-077	371-04188-083	371-04496-083	371-04117-097	371-04188-065	371-04496-065
			024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
2E	6	Suppressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33418-000	024-33418-000	024-31844-000	024-33418-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	024-33417-000	024-33417-000	024-31843-000	024-33417-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
	2	MP Ground Lug	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38363-000	025-38363-000
5B	1	SP Non-Fused Disc. Sw.	024-33425-000	024-33425-000	024-31870-000	N/A	N/A	N/A
	1	SP Oper. Mech. (NFDS)	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34085-000	025-34085-000	025-34089-000	025-34089-000	025-34088-000	025-34088-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*				Multiple Point Circuit Breakers*			
			Old Seimens 371-04117-006	New Seimens 371-04188-003	Telemechanique 371-04496-003	Old Seimens 371-04117-035	New Seimens 371-04188-022	Telemechanique 371-04496-022		
2B ^S	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000		
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000		
2D ^S	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000		
2E	6	Suppressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000		
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000		
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000		
3C	2	Surge Suppressor (Sys 1)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000		
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02104-000	031-02213-000	031-02213-000	031-02104-000		
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A		
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000		
	3	MP Terminal Block (Sys 1)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A		
4A	3	MP Terminal Block (Sys 2)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A		
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33417-000	024-33417-000	024-31843-000		
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33417-000	024-33417-000	024-31841-000		
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A		
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A		
	2	MP Oper. Mech.	N/A	N/A	N/A	024-33429-000	024-33429-000	024-31878-000		
4J	2	MP Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000		
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A		
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A		
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A		
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A		
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000		
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000		

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	371-04496-041
2B ^s	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-32942-000	024-34307-000
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000	024-34307-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0096-58 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-075	371-04188-077	371-04496-077	371-04117-095	371-04188-059	371-04496-059
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	2	Surge Suppressor (Sys 1)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	031-02104-000	031-02104-000	031-02104-000	031-02104-000	031-02104-000	031-02104-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	024-33417-000	024-33417-000	024-31843-000	024-33417-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33417-000	024-33417-000	024-31841-000	024-33417-000	024-33417-000	024-31841-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
5A	1	SP Terminal Block	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-37614-000	025-38363-000	025-38363-000
5B	1	SP Oper. Mech. (NFDS)	024-33425-000	024-33424-000	024-31888-000	N/A	N/A	N/A
5E	2	SP Ground Lug	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34085-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000	025-34088-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2BS	6	Fan Overload	371-04116-005	371-04187-009	371-04495-009	371-04116-010	371-04187-015	371-04495-015
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2DS	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33413-000	024-33414-000	029-23472-000
3C	4	Surge Supressor	024-33413-000	024-33414-000	024-35472-000	024-33413-000	024-33414-000	024-35472-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	3	MP Terminal Block (Sys 2)	025-38364-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34419-000	025-34419-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-31819-000	025-34419-000	025-34419-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34085-000	025-34085-000
4J	1	MP Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34089-000	025-34085-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

* Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens	New Seimens	Telemechanique
			371-04116-017	371-04187-024	371-04495-024
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Suppressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33414-000	029-23472-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30963-000	024-30963-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	024-30963-000	024-30963-000
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-17 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemecanique	Old Seimens	New Seimens	Telemecanique
2B ^S	6	Fan Overload	371-04116-026	024-32936-000	371-04495-037	371-04116-032	024-32936-000	371-04495-030
2C	6	Link Module		024-34314-000	025-33170-000		024-32936-000	025-33170-000
2D ^S	6	Fan Contactor		024-34314-000	025-38361-000		024-34314-000	025-38361-000
2E	6	Suppressor		024-32930-000	024-34300-000		024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	2	Compressor Contactor (Sys 2)	024-33413-000	024-33414-000	024-35472-000	024-33413-000	024-33414-000	024-35472-000
	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	025-34419-000	025-34419-000	025-34424-000	025-34419-000	025-34419-000
	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34419-000	025-34419-000	025-34424-000	025-34419-000	025-34419-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
	1	SP Non-Fused Disc. Sw.	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	025-35695-000	025-35695-000	025-35695-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04116-005	371-04187-009	371-04495-009	371-04116-010	371-04187-016	371-04495-016
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	4	Surge Suppressor	024-33413-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	024-34310-000
	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Ground Lug (Sys 1)	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	2	Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	2	MP Terminal Block (Sys 1)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 2)	025-38349-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	024-31819-000	024-31819-000
4B	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-31819-000	024-31819-000	024-31819-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
5A	1	MP Ground Lug (Sys 1)	025-34085-000	025-34089-000	025-34089-000	025-34089-000	025-34085-000	025-34085-000
	1	MP Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
5B	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04116-018	New Seimens 371-04187-023	Telemechanique 371-04495-023
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33414-000	029-34310-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000
					025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30963-000	024-31871-000	024-31871-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-31870-000	024-31871-000	024-31871-000
4B	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-28 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-026	371-04187-038	371-04495-038	371-04116-032	371-04187-031	371-04495-031
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	2	Compressor Contactor (Sys 1)	024-33413-000	024-33413-000	029-34310-000	024-33413-000	024-33413-000	029-34310-000
	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	2	Ground Lug (Sys 2)			025-34455-000			025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	024-31819-000	024-31819-000	025-34424-000	024-31819-000	024-31819-000
	1	MP Circuit Breaker (Sys 2)	025-34424-000	024-31819-000	024-31819-000	025-34424-000	024-31819-000	024-31819-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
	1	SP Non-Fused Disc. Sw.	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	025-35695-000	024-35695-000	024-35695-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
 Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04117-011	371-04188-015	371-04496-015	371-04117-040	371-04188-093	371-04496-093
2C	6	Link Module	024-32935-000	024-32935-000	025-33169-000	024-32935-000	024-32935-000	025-33169-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Suppressor	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33419-000	024-33419-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33419-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Oper. Mech. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Oper. Mech. (Sys 2)	N/A	N/A	N/A	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		371-04188-052
2B ^s	6	Fan Overload	371-04117-060	024-32935-000	025-33169-000	371-04496-052
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	
3B	2	Compressor Contactor (Sys 1)	024-33412-000	024-33411-000	024-34309-000	
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000	
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000	
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000	
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000	
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000	
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000	
5A	1	SP Terminal Block	N/A	N/A	N/A	
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	
5E	2	SP Ground Lug	N/A	N/A	N/A	
8A	2	Surge Supressor	031-02212-000	031-02212-000	031-02107-000	
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-40 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-080	371-04188-095	371-04496-095	371-04117-100	371-04188-094	371-04496-094
2C	6	Link Module	024-34298-000	024-32935-000	025-33169-000	024-34298-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Suppressor	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	024-33419-000	024-33419-000	024-31649-000	024-33419-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33419-000	024-33419-000	024-31649-000	024-33419-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech. CB & NFDS (Sys 1)	024-33430-000	024-33430-000	024-31878-000	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Oper. Mech. CB & NFDS (Sys 2)	025-34088-000	025-34088-000	025-34089-000	025-34088-000	025-34088-000	025-34089-000
5A	1	MP Ground Lug	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	024-33426-000	024-33425-000	024-30963-000	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDS)	024-33431-000	024-33430-000	024-31878-000	N/A	N/A	N/A
8A	2	SP Ground Lug	025-34086-000	025-34085-000	025-34085-000	025-34086-000	025-34089-000	025-34089-000
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-009	024-34298-000	371-04188-010	371-04117-038	371-04188-030	371-04496-030
2C	6	Link Module		024-34314-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D ^s	6	Fan Contactor		024-32929-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor		031-02213-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)		031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)		024-33411-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor		024-33411-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
	1	Auxiliary Contact		031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1			024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug		025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)		025-38358-000	025-38358-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)		025-38358-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)		N/A	N/A	024-33418-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)		N/A	N/A	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)		N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)		N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.		N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug		N/A	N/A	024-33429-000	024-33429-000	024-31878-000
5A	1	SP Terminal Block		025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000
	1	SP Non-Fused Disc. Sw.		N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)		N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug		N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor		031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay		024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		371-04496-047
2B ^s	6	Fan Overload	371-04117-057	371-04188-047	025-33169-000	025-33169-000
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33411-000	024-33046-000	024-34308-000	024-34308-000
3C	4	Surge Suppressor	024-33411-000	024-33046-000	024-34308-000	024-34308-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000	024-31888-000
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-46 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04117-078	371-04188-085	371-04496-085	371-04117-098	371-04188-067	371-04496-067
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3C	2	Compressor Contactor (Sys 2)	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3D	4	Surge Suppressor	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3E	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
4A	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	024-33418-000	024-33418-000	024-31844-000	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33418-000	024-33418-000	024-31844-000	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
5B	1	SP Non-Fused Disc. Sw.	024-33425-000	024-33425-000	024-31870-000	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34085-000	025-34085-000	025-34089-000	025-34086-000	025-34089-000	025-34089-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2		024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

^s Recommended Spare Part

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-007	371-04188-005	371-04496-005	371-04117-036	371-04188-024	371-04496-024
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	4	Surge Supressor	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-37614-000	N/A	N/A	024-33417-000	024-33417-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33417-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33429-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	N/A	N/A	N/A	N/A	N/A	N/A
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		371-04496-043
2B ^s	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000	
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	
2E	6	Suppressor	031-02213-000	031-02213-000	031-02106-000	
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-32942-000	024-34307-000	
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000	
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000	
	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000	
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000	
5A	1	SP Terminal Block	N/A	N/A	N/A	
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	
5B	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A	
5E	2	SP Ground Lug	N/A	N/A	N/A	
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0100-58 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04117-076	371-04188-079	371-04496-079	371-04117-096	371-04188-061	371-04496-061
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Circuit Breaker (Sys 2)	024-33417-000	024-33417-000	024-31843-000	024-33417-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33417-000	024-33417-000	024-31843-000	024-33417-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	MP Ground Lug	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
	1	SP Terminal Block	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-38349-000	025-38363-000	025-38363-000
5E	2	SP Oper. Mech. (NFDS)	024-33425-000	024-33425-000	024-30963-000	N/A	N/A	N/A
8A	2	SP Ground Lug	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
8B	2	Surge Suppressor	025-34085-000	025-34085-000	025-34085-000	025-34089-000	025-34088-000	025-34088-000
		Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04116-002	371-04187-004	371-04495-004	371-04116-007	371-04187-011	371-04495-011
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
3C	2	Surge Suppressor (Sys 1)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-00808-000	031-02213-000	031-02213-000	031-00808-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38349-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	025-34419-000	025-34419-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	025-34089-000	025-34089-000	025-34089-000	024-31878-000	024-31878-000	024-31878-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	371-04495-018
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33413-000	024-35473-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33414-000	029-23472-000
3C	2	Surge Suppressor (Sys 1)	031-02213-000	031-02213-000	031-00808-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30964-000	024-30964-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	024-30963-000	024-30963-000
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-17 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemecanique	Old Seimens	New Seimens	Telemecanique
2B ^S	6	Fan Overload	371-04116-022	371-04187-033	371-04495-033	371-04116-028	371-04187-026	371-04495-026
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
3C	2	Surge Suppressor (Sys 1)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-00808-000	031-02213-000	031-02213-000	031-00808-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	025-34424-000	025-34419-000	025-34419-000	025-34424-000	025-34419-000	025-34419-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
5A	1	SP Terminal Block	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000	025-34085-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5B	1	SP Oper. Mech. (NFDS)	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-35695-000	025-35695-000	025-35695-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-002	371-04187-003	371-04495-003	371-04116-007	371-04187-011	371-04495-041
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	029-34310-000
3C	4	Surge Suppressor	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Ground Lug (Sys 1)	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	2	Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34455-000	025-34089-000	025-34089-000	025-34455-000
3E	3	MP Terminal Block (Sys 1)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38349-000	025-38364-000	025-38364-000	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34419-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	025-34419-000	024-31819-000
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Ground Lug	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
5A	1	SP Terminal Block	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04116-013	New Seimens 371-04187-019	Telemechanique 371-04495-019
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33413-000	024-33413-000	024-34310-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34455-000
	2	Ground Lug (Sys 2)			025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30965-000	024-30964-000	024-30963-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30963-000	024-31871-000	024-31871-000
4J	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
5A	1	MP Ground Lug (Sys 1)	025-34089-000		025-34085-000
	1	MP Ground Lug (Sys 2)	025-34085-000	025-34085-000	025-34089-000
5B	1	SP Terminal Block	N/A	N/A	N/A
5C	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5D	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-28 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04116-022	371-04187-033	371-04495-063	371-04116-028	371-04187-026	371-04495-056
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Suppressor	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	2	Ground Lug (Sys 1)	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	2	Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34455-000	025-34089-000	025-34089-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	025-34088-000	N/A	N/A	025-34088-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	025-34424-000	025-34419-000	025-34424-000	025-34424-000	025-34419-000
4B	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34419-000	024-31819-000	025-34424-000	025-34419-000	024-31819-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
4U	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5A	1	SP Non-Fused Disc. Sw.	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	025-35695-000	024-35695-000	024-35695-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04117-018	371-04188-012	371-04496-012	371-04117-032	371-04188-031	371-04496-031
2C	6	Link Module	024-32935-000	024-32935-000	025-33169-000	024-32935-000	024-32935-000	025-33169-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-37614-000	025-38363-000	025-38363-000	024-33420-000	024-33419-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33419-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	024-33430-000	024-31878-000
	1	MP Ground Lug (Sys 1)	025-34455-000	025-34088-000	025-34088-000	025-34089-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-34088-000	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
		Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04117-054	New Seimens 371-04188-049	Telemechanique 371-04496-049
2B ^s	6	Fan Overload	024-32935-000	024-32935-000	025-33169-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-33046-000	024-34308-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-40 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-072	371-04188-086	371-04496-086	371-04117-092	371-04188-068	371-04496-068
2C	6	Link Module	024-34298-000	024-32935-000	025-33169-000	024-34298-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33420-000	024-33419-000	024-31649-000	024-33420-000	024-33419-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	024-33419-000	024-33419-000	024-31649-000	024-33419-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech. CB & NFDS (Sys 1)	024-33430-000	024-33430-000	024-31878-000	024-33430-000	024-33430-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000	025-34089-000
	1	MP Ground Lug (Sys 2)	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38370-000	025-38370-000
5B	1	SP Non-Fused Disc. Sw.	024-33426-000	024-33426-000	024-30964-000	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	024-33431-000	024-33431-000	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34086-000	025-34086-000	025-34085-000	025-34086-000	025-34085-000	025-34085-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^s	6	Fan Overload	371-04117-015	371-04188-007	371-04496-007	371-04117-029	371-04188-026	371-04496-026
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	4	Surge Suppressor	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33419-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Oper. Mech. (Sys 1)	N/A	N/A	N/A	024-33430-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04117-049	New Seimens 371-04188-044	Telemechanique 371-04496-044
2B ^s	6	Fan Overload	024-34298-000	024-34298-000	025-33169-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000
2E	6	Suppressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-32942-000	024-34307-000
	2	Compressor Contactor (Sys 2)	024-33411-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4J	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
5A	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000
	1	SP Terminal Block	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-46 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04117-069	371-04188-081	371-04496-081	371-04117-089	371-04188-063	371-04496-063
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34307-000	024-33046-000	024-33046-000	024-34307-000
3C	4	Surge Suppressor	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33419-000	024-33418-000	024-31844-000	024-33419-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	024-33418-000	024-33418-000	024-31844-000	024-33418-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Oper. Mech. (Sys 1)	024-33430-000	024-33429-000	024-31878-000	024-33430-000	024-33429-000	024-31878-000
	1	MP Oper. Mech. (Sys 2)	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
	1	SP Non-Fused Disc. Sw.	024-33425-000	024-33425-000	024-31870-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34085-000	025-34085-000	025-34089-000	025-34086-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUAL0106-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04117-013	New Seimens 371-04188-002	Telemechanique 371-04496-002	Old Seimens 371-04117-027	New Seimens 371-04188-021	Telemechanique 371-04496-021
2B ^S	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^S	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
3C	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
	2	Surge Suppressor (Sys 1)	031-02213-000	031-02213-000	031-02104-000	031-02213-000	031-02213-000	031-02104-000
3D	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33417-000	024-33417-000	024-31843-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33418-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33429-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34455-000	025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		371-04496-039
2B ^S	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000	
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	
2D ^S	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	
3B	2	Compressor Contactor (Sys 1)	024-32942-000	024-32941-000	024-34307-000	
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000	
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000	
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000	
	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000	
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000	
5A	1	SP Terminal Block	N/A	N/A	N/A	
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	
5E	2	SP Ground Lug	N/A	N/A	N/A	
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0106-58 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04117-067	371-04188-076	371-04496-076	371-04117-087	371-04188-058	371-04496-058
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
3C	2	Surge Suppressor (Sys 1)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02104-000	031-02213-000	031-02213-000	031-02104-000
3D	2	Auxiliary Contact	031-02101-000	031-02101-000	031-02101-000	031-02101-000	031-02101-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33418-000	024-33417-000	024-31843-000	024-33418-000	024-33417-000	024-31843-000
	1	MP Circuit Breaker (Sys 2)	024-33417-000	024-33417-000	024-31843-000	024-33417-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38363-000	025-38363-000
	1	SP Non-Fused Disc. Sw.	024-33425-000	024-33425-000	024-30963-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34085-000	025-34085-000	025-34085-000	025-34086-000	025-34088-000	025-34088-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^S Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04116-001	New Seimens 371-04187-002	Telemechanique 371-04495-002	Old Seimens 371-04116-006	New Seimens 371-04187-010	Telemechanique 371-04495-010
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-00808-000	031-02213-000	031-02213-000	031-00808-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	025-38350-000	025-38370-000	025-38364-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38350-000	025-38370-000	025-38364-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		371-04495-017
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000	
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000	
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	
3B	2	Compressor Contactor (Sys 1)	024-33413-000	024-33413-000	024-35473-000	
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000	
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-00808-000	
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30964-000	024-30964-000	
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	024-30964-000	024-30964-000	
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000	
5A	1	SP Terminal Block	N/A	N/A	N/A	
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	
5E	2	SP Ground Lug	N/A	N/A	N/A	
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-17 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04116-021	024-32936-000	371-04495-032	371-04116-027	371-04187-025	371-04495-025
2C	6	Link Module	024-34314-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^s	6	Fan Contactor	024-32930-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	031-02213-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	024-33413-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
3C	4	Surge Suppressor	031-02213-000	024-33414-000	024-35473-000	024-33413-000	024-33414-000	024-35473-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-00808-000	031-02213-000	031-02213-000	031-00808-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34089-000	025-34085-000	025-34089-000	025-34089-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
	1	SP Non-Fused Disc. Sw.	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	025-35695-000	025-35695-000	025-35695-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04116-001	New Seimens 371-04187-001	Telemechanique 371-04495-001	Old Seimens 371-04116-006	New Seimens 371-04187-010	Telemechanique 371-04495-040
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34455-000	025-34089-000	025-34089-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34419-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34419-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	371-04495-047
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33413-000	024-33413-000	024-34310-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30964-000	024-30963-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	024-30964-000	024-30963-000
4B	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-28 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw.			Single Point Terminal Block		
			w/ Sep. Sys. Circuit Breakers*			w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-021	371-04187-032	371-04495-062	371-04116-027	371-04187-025	371-04495-055
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Suppressor	024-33413-000	024-33414-000	024-34310-000	024-33413-000	024-33414-000	024-34310-000
	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34089-000	025-34089-000	025-34455-000	025-34089-000	025-34089-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
5A	1	SP Terminal Block	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34085-000	025-34085-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5B	1	SP Oper. Mech. (NFDS)	024-30965-000	024-30965-000	024-30965-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-35695-000	024-35695-000	024-35695-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04117-017	371-04188-011	371-04496-011	371-04117-031	371-04188-029	371-04496-029
2C	6	Link Module	024-32935-000	024-32935-000	025-33169-000	024-32935-000	024-32935-000	025-33169-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3C	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 1)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33420-000	024-33419-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33420-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34089-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04117-053	New Seimens 371-04188-048	Telemechanique 371-04496-048
2B ^s	6	Fan Overload	024-32935-000	024-32935-000	025-33169-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-33046-000	024-34308-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-40 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-071	371-04188-084	371-04496-084	371-04117-091	371-04188-066	371-04496-066
2C	6	Link Module	024-34298-000	024-32935-000	025-33169-000	024-34298-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33420-000	024-33419-000	024-31649-000	024-33420-000	024-33419-000	024-31649-000
	1	MP Circuit Breaker (Sys 2)	024-33420-000	024-33419-000	024-31649-000	024-33420-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech. CB & NFDS	024-33430-000	024-33430-000	024-31878-000	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-34405-000	025-38370-000	025-38370-000
5B	1	SP Non-Fused Disc. Sw.	024-33426-000	024-33426-000	024-30964-000	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	024-33431-000	024-33431-000	024-31878-000	N/A	N/A	N/A
8A	2	SP Ground Lug	025-34086-000	025-34086-000	025-34085-000	025-34085-000	025-34085-000	025-34085-000
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-03757-014	371-04186-006	371-04496-006	371-03757-028	371-04185-025	371-04496-025
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33419-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33419-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34455-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*			Telemechanique
			Old Seimens	New Seimens		
2B ^s	6	Fan Overload	371-04117-048	371-04188-042	371-04496-042	
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	
3C	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000	
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000	
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000	
4J	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000	
5A	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000	
	1	SP Terminal Block	N/A	N/A	N/A	
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	
8A	2	SP Ground Lug	N/A	N/A	N/A	
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	
	2	Relay	024-33416-000	024-33416-000	024-33177-000	

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-46 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-068	371-04188-080	371-04496-080	371-04117-088	371-04188-062	371-04496-062
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33419-000	024-33418-000	024-31844-000	024-33419-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	024-33419-000	024-33418-000	024-31844-000	024-33419-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	024-33430-000	024-33429-000	024-31878-000	024-33430-000	024-33429-000	024-31878-000
5A	1	SP Terminal Block	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
5B	1	SP Oper. Mech. (NFDS)	024-33426-000	024-33425-000	024-30963-000	N/A	N/A	N/A
5E	2	SP Ground Lug	024-33431-000	024-33430-000	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34086-000	025-34085-000	025-34085-000	025-34086-000	025-34089-000	025-34089-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04117-012	New Seimens 371-04188-001	Telemechanique 371-04496-001	Old Seimens 371-04117-026	New Seimens 371-04188-020	Telemechanique 371-04496-020
2B ^S	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^S	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02104-000	031-02213-000	031-02213-000	031-02104-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33418-000	024-33417-000	024-31843-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33418-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	025-34455-000	025-34455-000	025-34455-000	024-33429-000	024-33429-000	024-31878-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*		Telemechanique	
			Old Seimens	New Seimens		
2B ^s	6	Fan Overload	024-32934-000	024-32934-000	371-04188-038	371-04496-038
2C	6	Link Module	024-34314-000	024-34314-000		025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	024-32929-000		024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000		031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-32942-000	024-32941-000		024-34306-000
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000		024-34306-000
3C	4	Surge Supressor	031-02213-000	031-02213-000		031-02104-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000		N/A
3E	4	Ground Lug	025-34088-000	025-34088-000		025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A		N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A		N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A		N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A		N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000		024-31888-000
4B	2	MP Oper. Mech.	024-33425-000	024-33424-000		024-31888-000
	2	MP Ground Lug	024-33430-000	024-33430-000		024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000		025-34089-000
	1	SP Terminal Block	N/A	N/A		N/A
5A	1	SP Non-Fused Disc. Sw.	N/A	N/A		N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A		N/A
5E	2	SP Ground Lug	N/A	N/A		N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000		031-02107-000
8B	2	Relay	024-33416-000	024-33416-000		024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0120-58 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04117-066	371-04188-075	371-04496-075	371-04117-086	371-04188-057	371-04496-057
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
3C	2	Surge Suppressor (Sys 1)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02104-000	031-02213-000	031-02213-000	031-02104-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33418-000	024-33417-000	024-31843-000	024-33418-000	024-33417-000	024-31843-000
	1	MP Circuit Breaker (Sys 2)	024-33418-000	024-33417-000	024-31843-000	024-33418-000	024-33417-000	024-31843-000
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
5A	2	MP Ground Lug	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
5B	1	SP Non-Fused Disc. Sw.	024-33425-000	024-33425-000	024-30963-000	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDS)	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34085-000	025-34085-000	025-34085-000	025-34086-000	025-34089-000	025-34089-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04116-003	New Seimens 371-04187-007	Telemechanique 371-04495-007	Old Seimens 371-04116-008	New Seimens 371-04187-014	Telemechanique 371-04495-014
2B ^S	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^S	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
3C	2	Surge Suppressor (Sys 1)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-00808-000	031-02213-000	031-00808-000	031-00808-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38350-000	025-38370-000	025-38370-000	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	025-38350-000	025-38370-000	025-38370-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-17 MULTIPLE POINT (SEE FIG. 7, PAGE 17)

Item No.	Qty.	Description	Multiple Point			
			Non-Fused Disconnect Switches*		Telemechanique	
			Old Seimens	New Seimens		
2B ^s	6	Fan Overload	371-04116-016	371-04187-022	371-04495-022	
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	
2E	6	Supressor	024-32930-000	024-32930-000	024-34300-000	
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	
3C	2	Surge Suppressor (Sys 1)	024-33413-000	024-33413-000	024-35473-000	
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	031-00808-000	
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30964-000	024-30964-000	
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	024-30964-000	024-30964-000	
	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	
4J	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000	
5A	1	SP Terminal Block	N/A	N/A	N/A	
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	
5E	2	SP Ground Lug	N/A	N/A	N/A	
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-17 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04116-023	371-04187-036	371-04495-036	371-04116-029	371-04187-029	371-04495-029
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	2	Surge Suppressor (Sys 1)	024-33413-000	024-33413-000	024-35473-000	024-33413-000	024-33413-000	024-35473-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	024-32933-000	031-00808-000	024-32933-000	024-32933-000	031-00808-000
3E	4	Ground Lug	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
5A	2	MP Ground Lug	025-34089-000	025-34089-000	025-34085-000	025-34089-000	025-34089-000	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5B	1	SP Non-Fused Disc. Sw.	024-31889-000	024-31889-000	024-31889-000	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDS)	025-35695-000	025-35695-000	025-35695-000	N/A	N/A	N/A
8A	2	SP Ground Lug	025-34089-000	025-34085-000	025-34085-000	025-34089-000	025-34089-000	025-34089-000
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^S Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04116-003	New Seimens 371-04187-008	Telemechanique 371-04495-008	Old Seimens 371-04116-008	New Seimens 371-04187-014	Telemechanique 371-04495-044
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
	2	Ground Lug (Sys 2)			025-34455-000			025-34455-000
4A	3	MP Terminal Block (Sys 1)	025-38350-000	025-38370-000	025-38370-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38350-000	025-38364-000	025-38364-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	025-34424-000	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	024-31878-000	024-31878-000
4J	2	MP Ground Lug	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-041116-016	New Seimens 371-04187-022	Telemechanique 371-04495-052
2B ^s	6	Fan Overload	024-32936-000	024-32936-000	025-33170-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	024-32930-000	024-34300-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	024-33414-000	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33413-000	024-33413-000	024-34310-000
3C	4	Surge Supressor	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34088-000
	2	Ground Lug (Sys 2)			025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	024-30964-000	024-30964-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	024-30964-000	024-30964-000
4J	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000
5A	2	MP Ground Lug	025-34089-000	025-34085-000	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A
	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-28 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^s	6	Fan Overload	371-04116-023	371-04187-036	371-04495-066	371-04116-029	371-04187-029	371-04495-059
2C	6	Link Module	024-32936-000	024-32936-000	025-33170-000	024-32936-000	024-32936-000	025-33170-000
2D^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32930-000	024-32930-000	024-34300-000	024-32930-000	024-32930-000	024-34300-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33414-000	024-33414-000	029-23472-000	024-33414-000	024-33414-000	029-23472-000
3C	4	Surge Suppressor	024-33413-000	024-33413-000	024-34310-000	024-33413-000	024-33413-000	024-34310-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	2	Ground Lug (Sys 1)	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	2	Ground Lug (Sys 2)	025-34089-000	025-34089-000	025-34088-000	025-34089-000	025-34089-000	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	025-34455-000	N/A	N/A	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
	1	MP Circuit Breaker (Sys 2)	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000	025-34424-000
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000	024-31878-000
5A	2	MP Ground Lug	025-34089-000	025-34089-000	025-34085-000	025-34089-000	025-34089-000	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A	025-38356-000	025-32536-000	025-32536-000
5B	1	SP Non-Fused Disc. Sw.	024-31889-000	024-31889-000	024-30965-000	N/A	N/A	N/A
5E	1	SP Oper. Mech. (NFDS)	025-35695-000	024-35695-000	024-35695-000	N/A	N/A	N/A
8A	2	SP Ground Lug	025-34089-000	025-34085-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2BS	6	Fan Overload	371-04117-020	371-04188-014	371-04496-014	371-04117-034	371-04188-033	371-04496-033
			024-32935-000	024-32935-000	025-33169-000	024-32935-000	024-32935-000	025-33169-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2DS	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 1)	025-38349-000	025-38363-000	025-38363-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-37614-000	025-38363-000	025-38363-000	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33420-000	024-33420-000	024-31851-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33420-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	024-33430-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34088-000	025-34088-000	025-34089-000	025-34089-000	025-34089-000
	1	MP Ground Lug (Sys 2)	025-34085-000	025-34088-000	025-34088-000	025-34089-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
 Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	
2B ^s	6	Fan Overload	371-04117-059	371-04188-051	371-04496-051
2C	6	Link Module	024-32935-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Suppressor	024-33046-000	024-33046-000	024-34308-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33425-000	024-31870-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34085-000	025-34085-000	025-34085-000
	1	MP Ground Lug (Sys 2)	025-34085-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-40 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemecanique	Old Seimens	New Seimens	Telemecanique
2B ^s	6	Fan Overload	371-04117-074	371-04188-088	371-04496-088	371-04117-094	371-04188-070	371-04496-070
2C	6	Link Module	024-34298-000	024-32935-000	025-33169-000	024-34298-000	024-32935-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	024-33411-000	024-34309-000	024-33412-000	024-33411-000	024-34309-000
3C	4	Surge Suppressor	024-33046-000	024-33046-000	024-34308-000	024-33046-000	024-33046-000	024-34308-000
3D	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33420-000	024-33420-000	024-31851-000	024-33420-000	024-33420-000	024-31851-000
	1	MP Circuit Breaker (Sys 2)	024-33420-000	024-33419-000	024-31649-000	024-33420-000	024-33419-000	024-31649-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech. CB & NFDS (Sys 2)	024-33430-000	024-33430-000	024-31878-000	024-33430-000	024-33430-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
	1	MP Ground Lug (Sys 2)	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38370-000	025-38370-000
5B	1	SP Non-Fused Disc. Sw.	024-33426-000	024-33426-000	024-30964-000	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	024-33431-000	024-33431-000	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34086-000	025-34086-000	025-34085-000	025-34087-000	025-34085-000	025-34085-000
8B	2	Relay	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
			024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-019	371-04188-009	371-04496-009	371-04117-033	371-04188-027	371-04496-027
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
3E	4	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	025-38349-000	025-38363-000	025-38363-000	N/A	N/A	N/A
4A	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33420-000	024-33420-000	024-31820-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33419-000	024-33418-000	024-31844-000
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	024-33430-000	024-31878-000
	1	MP Ground Lug (Sys 1)	025-34089-000	025-34455-000	025-34088-000	025-34089-000	025-34089-000	025-34089-000
5A	1	MP Ground Lug (Sys 2)	025-34455-000	N/A	N/A	025-34088-000	025-34088-000	025-34088-000
	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDs)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-056	371-04188-046	371-04496-046
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33411-000	024-33046-000	024-34308-000
3C	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000
3D	1	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33425-000	024-31870-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4J	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
	1	MP Ground Lug (Sys 1)	025-34085-000	025-34085-000	025-34085-000
5A	1	MP Ground Lug (Sys 2)	025-34085-000	025-34088-000	025-34089-000
	1	SP Terminal Block	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A
	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-46 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04117-073	371-04188-082	371-04496-082	371-04117-093	371-04188-064	371-04496-064
2C	6	Link Module	024-34298-000	024-34298-000	025-33169-000	024-34298-000	024-34298-000	025-33169-000
2D ^S	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3C	2	Compressor Contactor (Sys 2)	024-33411-000	024-33046-000	024-34308-000	024-33411-000	024-33046-000	024-34308-000
3D	4	Surge Suppressor	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3E	2	Auxiliary Contact	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
4A	2	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	4	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	024-33420-000	024-33420-000	024-31820-000	024-33420-000	024-33420-000	024-31820-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33419-000	024-33418-000	024-31844-000	024-33419-000	024-33418-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Oper. Mech. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Oper. Mech. (Sys 2)	024-33430-000	024-33430-000	024-31878-000	024-33430-000	024-33430-000	024-31878-000
4J	1	MP Ground Lug (Sys 1)	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000	025-34089-000
	1	MP Ground Lug (Sys 2)	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-34405-000	025-38364-000	025-38364-000
5B	1	SP Non-Fused Disc. Sw.	024-33426-000	024-33426-000	024-30964-000	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	024-33431-000	024-33431-000	024-31878-000	N/A	N/A	N/A
8A	2	SP Ground Lug	025-34086-000	025-34086-000	025-34085-000	025-34086-000	025-34089-000	025-34089-000
8B	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-016	371-04188-004	371-04496-004	371-04117-030	371-04188-023	371-04496-023
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Supressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	2	Surge Suppressor (Sys 1)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact			031-02104-000			031-02104-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 2)	025-37614-000	025-38358-000	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33419-000	024-33418-000	024-31844-000
4B	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33418-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4J	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Oper. Mech. (Sys 1)	N/A	N/A	N/A	024-33430-000	024-33429-000	024-31878-000
5A	2	MP Oper. Mech. (Sys 2)	N/A	N/A	N/A	024-33430-000	024-33429-000	024-31878-000
	1	MP Ground Lug (Sys 1)	025-34455-000	025-34455-000	025-34455-000	025-34088-000	025-34088-000	025-34088-000
5B	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5E	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8B	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	371-04496-040
2B ^S	6	Fan Overload	024-32934-000	024-32934-000	025-33168-000
2C	6	Link Module	024-34314-000	024-34314-000	025-38361-000
2D ^S	6	Fan Contactor	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	024-32942-000	024-34307-000
	2	Compressor Contactor (Sys 2)	024-32942-000	024-32941-000	024-34306-000
3C	2	Surge Suppressor (Sys 1)	031-02213-000	031-02213-000	031-02101-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02104-000
3D	1	Auxiliary Contact	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	025-34088-000	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	024-33424-000	024-31888-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	024-33424-000	024-31888-000
4B	2	MP Oper. Mech.	024-33430-000	024-33430-000	024-31878-000
4J	2	MP Ground Lug	025-34085-000	025-34088-000	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0130-58 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-070	371-04188-078	371-04496-078	371-04117-090	371-04188-060	371-04496-060
2C	6	Link Module	024-32934-000	024-32934-000	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2D ^s	6	Fan Contactor	024-34314-000	024-34314-000	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2E	6	Suppressor	024-32929-000	024-32929-000	024-34302-000	024-32929-000	024-32929-000	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	031-02213-000	031-02106-000	031-02213-000	031-02213-000	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	024-32942-000	024-34307-000	024-33046-000	024-32942-000	024-34307-000
3C	2	Surge Suppressor (Sys 1)	024-32942-000	024-32941-000	024-34306-000	024-32942-000	024-32941-000	024-34306-000
	2	Surge Suppressor (Sys 2)	031-02213-000	031-02213-000	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	2	Auxiliary Contact	031-02104-000	031-02104-000	031-02104-000	031-02104-000	031-02104-000	031-02104-000
3E	4	Ground Lug	024-32933-000	024-32933-000	N/A	024-32933-000	024-32933-000	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	025-34088-000	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33419-000	024-33418-000	024-31844-000	024-33419-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	024-33418-000	024-33417-000	024-31843-000	024-33418-000	024-33417-000	024-31843-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Oper. Mech. (Sys 1)	024-33430-000	024-33429-000	024-31878-000	024-33430-000	024-33429-000	024-31878-000
	1	MP Oper. Mech. (Sys 2)	024-33429-000	024-33429-000	024-31878-000	024-33429-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38349-000	025-38364-000	025-38364-000
	1	SP Non-Fused Disc. Sw.	024-33425-000	024-33425-000	024-30963-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	024-33430-000	024-33430-000	024-31878-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34085-000	025-34085-000	025-34085-000	025-34086-000	025-34089-000	025-34089-000
8A	2	Surge Suppressor	031-02212-000	031-02212-000	031-02107-000	031-02212-000	031-02212-000	031-02107-000
8B	2	Relay	024-33416-000	024-33416-000	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04116-033	New Seimens N/A	Telemechanique 371-04497-033	Old Seimens 371-04116-034	New Seimens N/A	Telemechanique 371-04497-034
2B ^s	6	Fan Overload	024-32936-000	N/A	025-33170-000	024-32936-000	N/A	025-33170-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	N/A	024-34300-000	024-32930-000	N/A	024-34300-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	N/A	029-23472-000	024-33414-000	N/A	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33414-000	N/A	029-23472-000	024-33414-000	N/A	029-23472-000
3C	2	Surge Suppressor (Sys 1)	N/A	N/A	031-02101-000	N/A	N/A	031-02101-000
	2	Surge Suppressor (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
3D	1	Auxiliary Contact	N/A	N/A	N/A	N/A	N/A	N/A
3E	4	Ground Lug	025-34089-000	N/A	025-34088-000	025-34089-000	N/A	025-34088-000
	3	MP Terminal Block (Sys 1)	025-38370-000	N/A	025-38370-000	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	025-38370-000	N/A	025-38370-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	N/A	025-34424-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	N/A	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34089-000	N/A	025-34089-000	025-34089-000	N/A	025-34089-000
	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5A	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
	2	Relay	024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-17 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04116-035	New Seimens N/A	Telemechanique 371-04497-035
2B ^s	6	Fan Overload	024-32936-000	N/A	025-33170-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	N/A	024-34300-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	N/A	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33414-000	N/A	029-23472-000
3C	4	Surge Suppressor	N/A	N/A	031-02101-000
3D	1	Auxiliary Contact	N/A	N/A	N/A
3E	4	Ground Lug	025-34089-000	N/A	025-34088-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	N/A	024-30964-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	N/A	024-30964-000
	2	MP Oper. Mech.	024-31878-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34089-000	N/A	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-17 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-036	N/A	N/A	N/A	N/A	N/A
2C	6	Link Module	024-32936-000	N/A	N/A	N/A	N/A	N/A
2D ^S	6	Fan Contactor	024-34314-000	N/A	N/A	N/A	N/A	N/A
2E	6	Supressor	024-32930-000	N/A	N/A	N/A	N/A	N/A
3B	2	Compressor Contactor (Sys 1)	031-02213-000	N/A	N/A	N/A	N/A	N/A
	2	Compressor Contactor (Sys 2)	024-33414-000	N/A	N/A	N/A	N/A	N/A
3C	4	Surge Supressor	024-33414-000	N/A	N/A	N/A	N/A	N/A
3D	2	Auxiliary Contact	N/A	N/A	N/A	N/A	N/A	N/A
3E	4	Ground Lug	025-34089-000	N/A	N/A	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	025-34424-000	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Oper. Mech.	024-31878-000	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	025-34089-000	N/A	N/A	N/A	N/A	N/A
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	024-31889-000	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDs)	025-35695-000	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	N/A	N/A	N/A	N/A
8B	2	Relay	024-33416-000	N/A	N/A	N/A	N/A	N/A

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04116-037	New Seimens N/A	Telemechanique 371-04497-037	Old Seimens 371-04116-038	New Seimens N/A	Telemechanique 371-04497-038
2B ^s	6	Fan Overload	024-32936-000	N/A	025-33170-000	024-32936-000	N/A	025-33170-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2D ^s	6	Fan Contactor	024-32930-000	N/A	024-34300-000	024-32930-000	N/A	024-34300-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	N/A	029-23472-000	024-33414-000	N/A	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33414-000	N/A	029-23472-000	024-33414-000	N/A	029-23472-000
3C	4	Surge Suppressor	N/A	N/A	031-02101-000	N/A	N/A	031-02101-000
3D	1	Auxiliary Contact	N/A	N/A	N/A	N/A	N/A	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	N/A	025-34088-000	025-34089-000	N/A	025-34088-000
	2	Ground Lug (Sys 2)						
4A	3	MP Terminal Block (Sys 1)	025-38370-000	N/A	025-38370-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38370-000	N/A	025-38370-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	025-34424-000	N/A	025-34424-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	025-34424-000	N/A	025-34424-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-31878-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34089-000	N/A	025-34089-000	025-34089-000	N/A	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-28 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04116-039	New Seimens N/A	Telemechanique 371-04497-039
2B ^S	6	Fan Overload	024-32936-000	N/A	025-33170-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000
2D ^S	6	Fan Contactor	024-32930-000	N/A	024-34300-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33414-000	N/A	029-23472-000
	2	Compressor Contactor (Sys 2)	024-33414-000	N/A	029-23472-000
3C	4	Surge Suppressor	N/A	N/A	031-02101-000
3D	1	Auxiliary Contact	N/A	N/A	N/A
3E	2	Ground Lug (Sys 1)	025-34089-000	N/A	025-34088-000
	2	Ground Lug (Sys 2)			
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-30964-000	N/A	024-30964-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-30964-000	N/A	024-30964-000
4B	2	MP Oper. Mech.	024-31878-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34089-000	N/A	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-28 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^S	6	Fan Overload	371-04116-040	N/A	371-04497-040	N/A	N/A	N/A
2C	6	Link Module	024-32936-000	N/A	025-33170-000	N/A	N/A	N/A
2D ^S	6	Fan Contactor	024-34314-000	N/A	025-38361-000	N/A	N/A	N/A
2E	6	Suppressor	024-32930-000	N/A	024-34300-000	N/A	N/A	N/A
3B	2	Compressor Contactor (Sys 1)	031-02213-000	N/A	031-02106-000	N/A	N/A	N/A
	2	Compressor Contactor (Sys 2)	024-33414-000	N/A	029-23472-000	N/A	N/A	N/A
3C	4	Surge Suppressor	024-33414-000	N/A	029-23472-000	N/A	N/A	N/A
	2	Auxiliary Contact	N/A	N/A	031-02101-000	N/A	N/A	N/A
3D	2	Ground Lug (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
3E	2	Ground Lug (Sys 2)	025-34089-000	N/A	025-34088-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	025-34424-000	N/A	025-34424-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	025-34424-000	N/A	025-34424-000	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	024-31878-000	N/A	024-31878-000	N/A	N/A	N/A
4J	2	MP Ground Lug	025-34089-000	N/A	025-34085-000	N/A	N/A	N/A
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	024-31889-000	N/A	024-31889-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	025-35695-000	N/A	024-35695-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34089-000	N/A	025-34089-000	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	N/A	N/A	N/A
8B	2	Relay	024-33416-000	N/A	024-33177-000	N/A	N/A	N/A

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04117-101	New Seimens N/A	Telemechanique 371-04496-120	Old Seimens 371-04117-102	New Seimens N/A	Telemechanique 371-04496-121
2B ^s	6	Fan Overload	024-32935-000	N/A	025-33169-000	024-32935-000	N/A	025-33169-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	N/A	024-34302-000	024-32929-000	N/A	024-34302-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33412-000	N/A	024-34309-000	024-33412-000	N/A	024-34309-000
	2	Compressor Contactor (Sys 2)	024-33412-000	N/A	024-34309-000	024-33412-000	N/A	024-34309-000
3C	4	Surge Suppressor	031-02213-000	N/A	031-02101-000	031-02213-000	N/A	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	N/A	N/A	024-32933-000	N/A	N/A
3E	4	Ground Lug	025-34088-000	N/A	025-34455-000	025-34088-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 1)	025-38363-000	N/A	025-38363-000	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33420-000	N/A	024-31851-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33420-000	N/A	024-31851-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34088-000	N/A	025-34088-000	025-34089-000	N/A	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDs)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-40 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	
			371-04117-103	N/A	371-04496-122
2B ^s	6	Fan Overload	024-32935-000	N/A	025-33169-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	N/A	024-34302-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33412-000	N/A	024-34309-000
	2	Compressor Contactor (Sys 2)	024-33412-000	N/A	024-34309-000
3C	4	Surge Suppressor	031-02213-000	N/A	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	N/A	N/A
3E	4	Ground Lug	025-34088-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	N/A	024-31870-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	N/A	024-31870-000
4B	2	MP Oper. Mech.	024-33430-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34085-000	N/A	025-34085-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-40 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-105	N/A	371-04496-124	371-04117-104	N/A	371-04496-123
2C	6	Link Module	024-32935-000	N/A	025-33169-000	024-32935-000	N/A	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2E	6	Suppressor	024-32929-000	N/A	024-34302-000	024-32929-000	N/A	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	N/A	031-02106-000	031-02213-000	N/A	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33412-000	N/A	024-34309-000	024-33412-000	N/A	024-34309-000
3C	4	Surge Suppressor	024-33412-000	N/A	024-34309-000	024-33412-000	N/A	024-34309-000
3D	2	Auxiliary Contact	031-02213-000	N/A	031-02101-000	031-02213-000	N/A	031-02101-000
3E	4	Ground Lug	024-32933-000	N/A	N/A	024-32933-000	N/A	N/A
	3	MP Terminal Block (Sys 1)	025-34088-000	N/A	025-34455-000	025-34088-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	024-33420-000	N/A	024-31851-000	024-33420-000	N/A	024-31851-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33420-000	N/A	024-31851-000	024-33420-000	N/A	024-31851-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Ground Lug	024-33430-000	N/A	024-31878-000	024-33430-000	N/A	024-31878-000
5A	1	SP Terminal Block	025-34089-000	N/A	025-34089-000	025-34089-000	N/A	025-34089-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-38351-000	N/A	025-38370-000
5B	1	SP Oper. Mech. (NFDs)	024-33427-000	N/A	024-30964-000	N/A	N/A	N/A
5E	2	SP Ground Lug	024-33431-000	N/A	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34086-000	N/A	025-34085-000	025-34087-000	N/A	025-34085-000
8B	2	Relay	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
	2		024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-106	N/A	371-04496-125	371-04117-107	N/A	371-04496-126
2C	6	Link Module	024-34298-000	N/A	025-33169-000	024-34298-000	N/A	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2E	6	Suppressor	024-32929-000	N/A	024-34302-000	024-32929-000	N/A	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	N/A	031-02106-000	031-02213-000	N/A	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33411-000	N/A	024-34308-000	024-33411-000	N/A	024-34308-000
3C	4	Surge Suppressor	024-33411-000	N/A	024-34308-000	024-33411-000	N/A	024-34308-000
3D	1	Auxiliary Contact	031-02213-000	N/A	031-02101-000	031-02213-000	N/A	031-02101-000
3E	4	Ground Lug	024-32933-000	N/A	N/A	024-32933-000	N/A	N/A
4A	3	MP Terminal Block (Sys 1)	025-34088-000	N/A	025-34455-000	025-34088-000	N/A	025-34455-000
	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	025-38363-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33420-000	N/A	024-31820-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33420-000	N/A	024-31820-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34088-000	N/A	025-34088-000	025-34089-000	N/A	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-46 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		
			Old Seimens 371-04117-108	New Seimens N/A	Telemechanique 371-04496-127
2B ^s	6	Fan Overload	024-34298-000	N/A	025-33169-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	N/A	024-34302-000
2E	6	Suppressor	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33411-000	N/A	024-34308-000
	2	Compressor Contactor (Sys 2)	024-33411-000	N/A	024-34308-000
3C	4	Surge Suppressor	031-02213-000	N/A	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	N/A	N/A
3E	4	Ground Lug	025-34088-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33425-000	N/A	024-31870-000
	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33425-000	N/A	024-31870-000
4J	2	MP Oper. Mech.	024-33430-000	N/A	024-31878-000
5A	1	MP Ground Lug	025-34085-000	N/A	025-34085-000
	1	SP Terminal Block	N/A	N/A	N/A
5B	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5E	2	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
8A	2	SP Ground Lug	N/A	N/A	N/A
	2	Surge Suppressor	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-46 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B ^s	6	Fan Overload	371-04117-110	N/A	371-04496-129	371-04117-109	N/A	371-04496-128
2C	6	Link Module	024-34298-000	N/A	025-33169-000	024-34298-000	N/A	025-33169-000
2D ^s	6	Fan Contactor	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2E	6	Suppressor	024-32929-000	N/A	024-34302-000	024-32929-000	N/A	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	N/A	031-02106-000	031-02213-000	N/A	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33411-000	N/A	024-34308-000	024-33411-000	N/A	024-34308-000
3C	4	Surge Suppressor	024-33411-000	N/A	024-34308-000	024-33411-000	N/A	024-34308-000
3D	2	Auxiliary Contact	031-02213-000	N/A	031-02101-000	031-02213-000	N/A	031-02101-000
3E	4	Ground Lug	024-32933-000	N/A	N/A	024-32933-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 1)	025-34088-000	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33420-000	N/A	024-31820-000	024-33420-000	N/A	024-31820-000
	1	MP Circuit Breaker (Sys 2)	024-33420-000	N/A	024-31820-000	024-33420-000	N/A	024-31820-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	N/A	N/A	N/A
	2	MP Ground Lug	024-33430-000	N/A	024-31878-000	024-33430-000	N/A	024-31878-000
5A	1	SP Terminal Block	025-34089-000	N/A	025-34089-000	025-34089-000	N/A	025-34089-000
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	025-38370-000	N/A	025-38370-000
5B	1	SP Oper. Mech. (NFDS)	024-33426-000	N/A	024-30964-000	N/A	N/A	N/A
5E	2	SP Ground Lug	024-33431-000	N/A	024-31878-000	N/A	N/A	N/A
8A	2	Surge Suppressor	025-34086-000	N/A	025-34085-000	025-34085-000	N/A	025-34085-000
8B	2	Relay	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
			024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
 Locate the **PANEL NUMBER** sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point Terminal Blocks*			Multiple Point Circuit Breakers*		
			Old Seimens 371-04117-111	New Seimens N/A	Telemechanique 371-04496-130	Old Seimens 371-04117-112	New Seimens N/A	Telemechanique 371-04496-131
2B ^s	6	Fan Overload	024-32934-000	N/A	025-33168-000	024-32934-000	024-32934-000	025-33168-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000	024-34314-000	024-34314-000	025-38361-000
2D ^s	6	Fan Contactor	024-32929-000	N/A	024-34302-000	024-32929-000	024-32929-000	024-34302-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000	031-02213-000	031-02213-000	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	N/A	024-34307-000	024-33046-000	024-32942-000	024-34307-000
	2	Compressor Contactor (Sys 2)	024-33046-000	N/A	024-34307-000	024-33046-000	024-32941-000	024-34307-000
3C	2	Surge Suppressor (Sys 1)	031-02213-000	N/A	031-02101-000	031-02213-000	031-02213-000	031-02101-000
	2	Surge Suppressor (Sys 2)	031-02213-000	N/A	031-02101-000	031-02213-000	031-02213-000	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	N/A	N/A	024-32933-000	024-32933-000	N/A
3E	4	Ground Lug	025-34088-000	N/A	025-34455-000	025-34088-000	025-34088-000	025-34455-000
	3	MP Terminal Block (Sys 1)	025-38363-000	N/A	025-38358-000	N/A	N/A	N/A
4A	3	MP Terminal Block (Sys 2)	025-38363-000	N/A	025-38358-000	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A	024-33419-000	024-33418-000	024-31844-000
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A	024-33419-000	024-33417-000	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4B	2	MP Oper. Mech.	N/A	N/A	N/A	024-33430-000	024-33429-000	024-31878-000
4J	2	MP Ground Lug	025-34088-000	N/A	025-34455-000	025-34088-000	025-34088-000	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	031-02212-000	031-02212-000	031-02107-000
	2	Relay	024-33416-000	N/A	024-33177-000	024-33416-000	024-33416-000	024-33177-000

^s Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

Control & Power Panel

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-58 MULTIPLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Multiple Point		
			Non-Fused Disconnect Switches*		Telemechanique
			Old Seimens	New Seimens	371-04496-132
2B ^S	6	Fan Overload	024-32934-000	N/A	025-33168-000
2C	6	Link Module	024-34314-000	N/A	025-38361-000
2D ^S	6	Fan Contactor	024-32929-000	N/A	024-34302-000
2E	6	Supressor	031-02213-000	N/A	031-02106-000
3B	2	Compressor Contactor (Sys 1)	024-33046-000	N/A	024-34307-000
	2	Compressor Contactor (Sys 2)	024-33046-000	N/A	024-34307-000
3C	4	Surge Suppressor	031-02213-000	N/A	031-02101-000
3D	1	Auxiliary Contact	024-32933-000	N/A	N/A
3E	4	Ground Lug	025-34088-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 2)	N/A	N/A	N/A
	1	MP Non-Fused Disc. Sw. (Sys 1)	024-33424-000	N/A	024-31888-000
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	024-33424-000	N/A	024-31888-000
	2	MP Oper. Mech.	024-33430-000	N/A	024-31878-000
4J	2	MP Ground Lug	025-34088-000	N/A	025-34089-000
5A	1	SP Terminal Block	N/A	N/A	N/A
	1	SP Non-Fused Disc. Sw.	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	N/A	N/A	N/A
5E	2	SP Ground Lug	N/A	N/A	N/A
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000

^S Recommended Spare Part

***Service Note:**

Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

POWER PANEL COMPONENTS (CONT'D)

TABLE 9 – POWER PANEL COMPONENTS - YCUL0140-58 SINGLE POINT (SEE FIG. 11, PAGE 22)

Item No.	Qty.	Description	Single Point Non-Fused Disc. Sw. w/ Sep. Sys. Circuit Breakers*			Single Point Terminal Block w/ Sep. Sys. Circuit Breakers*		
			Old Seimens	New Seimens	Telemechanique	Old Seimens	New Seimens	Telemechanique
2B^S	6	Fan Overload	371-04117-115	N/A	371-04496-134	371-04117-114	N/A	371-04496-133
2C	6	Link Module	024-32934-000	N/A	025-33168-000	024-32934-000	N/A	025-33168-000
2D^S	6	Fan Contactor	024-34314-000	N/A	025-38361-000	024-34314-000	N/A	025-38361-000
2E	6	Suppressor	024-32929-000	N/A	024-34302-000	024-32929-000	N/A	024-34302-000
3B	2	Compressor Contactor (Sys 1)	031-02213-000	N/A	031-02107-000	031-02213-000	N/A	031-02106-000
	2	Compressor Contactor (Sys 2)	024-33046-000	N/A	024-34307-000	024-33046-000	N/A	024-34307-000
3C	2	Surge Suppressor (Sys 1)	024-33046-000	N/A	024-34307-000	024-33046-000	N/A	024-34307-000
	2	Surge Suppressor (Sys 2)	031-02213-000	N/A	031-02101-000	031-02213-000	N/A	031-02101-000
3D	2	Auxiliary Contact	024-32933-000	N/A	N/A	024-32933-000	N/A	N/A
3E	4	Ground Lug	025-34088-000	N/A	025-34455-000	025-34088-000	N/A	025-34455-000
4A	3	MP Terminal Block (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
	3	MP Terminal Block (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
	1	MP Circuit Breaker (Sys 1)	024-33419-000	N/A	024-31844-000	024-33419-000	N/A	024-31844-000
	1	MP Circuit Breaker (Sys 2)	024-33419-000	N/A	024-31844-000	024-33419-000	N/A	024-31844-000
	1	MP Non-Fused Disc. Sw. (Sys 1)	N/A	N/A	N/A	N/A	N/A	N/A
4B	1	MP Non-Fused Disc. Sw. (Sys 2)	N/A	N/A	N/A	N/A	N/A	N/A
4J	2	MP Oper. Mech.	024-33430-000	N/A	024-31878-000	024-33430-000	N/A	024-31878-000
	2	MP Ground Lug	025-34088-000	N/A	025-34088-000	025-34088-000	N/A	025-34088-000
5A	1	SP Terminal Block	N/A	N/A	N/A	025-38364-000	N/A	025-38364-000
	1	SP Non-Fused Disc. Sw.	024-33426-000	N/A	024-30963-000	N/A	N/A	N/A
5B	1	SP Oper. Mech. (NFDS)	024-33431-000	N/A	024-31878-000	N/A	N/A	N/A
5E	2	SP Ground Lug	025-34086-000	N/A	025-34085-000	025-34089-000	N/A	025-34089-000
8A	2	Surge Suppressor	031-02212-000	N/A	031-02107-000	031-02212-000	N/A	031-02107-000
8B	2	Relay	024-33416-000	N/A	024-33177-000	024-33416-000	N/A	024-33177-000

^s Recommended Spare Part

***Service Note:**
Locate the PANEL NUMBER sticker on the upper right hand corner of the power panel, see Figure 11a, Page 23, then refer to the appropriate parts list for that number.

YCUL CHILLER OPTIONS – KITS

TABLE 10 – FIELD INSTALLED OPTIONS PART NUMBERS

MODEL NUMBER YCUL	VIBRATION ISOLATORS SPRING 1" DEFLEC. ALUMINUM* & BLACK FIN	VIBRATION ISOLATORS SPRING 2" (SEISMIC) ALUMINUM* & BLACK FIN	VIBRATION ISOLATOR PAD 1/2" DEFLEC. NEOPRENE	VIBRATION ISOLATORS SPRING 1" DEFLEC. COPPER*	VIBRATION ISOLATORS SPRING 2" (SEISMIC) COPPER*	VIBRATION ISOLATOR PAD 1/2" DEFLEC. NEOPRENE	HOT GAS BY-PASS SOLENOID VALVE W/ HARNESS	BAS/EMS TEMPERA- TURE RESET / OFFSET
MODEL #	029-23771	029-23769	029-23770	029-23771	029-23769	029-23770	375-00431	375-30914
0096	-107	-207	-007	-110	-210	-010	-076	-000
0100	-107	-207	-007	-110	-210	-010		-000
0106	-108	-208	-008	-109	-209	-011		-000
0120	-109	-209	-009	-111	-211	-012		-000
0130	-109	-209	-009	-111	-211	-012		-000
0140	-109	-209	-009	-111	-211	-012		-000

* Note: Condenser Coil Fin Material.

** Note: Hot Gas By-Pass Solenoid Valve Only: 025-34133-000

MODEL NUMBER YCUL	HIGH AMBIENT KIT	DEHYDRATOR KIT	CHICAGO RELIEF VALVE	MOTOR CURRENT MODULE KIT	OPTIVIEW REMOTE CONTROL PANEL	RELIEF SAFETY DEVICE KIT	DISCHARGE AIR SENSOR KIT	ACOUSTIC SOUND BLANKET
MODEL #	475-47349	475-49011	022-08863	371-04101	371-02750	375-45657	475-33729	310-06507
0096	-17 &-28 Voltage Codes -000	-001	-000	-000	-101	-001	-000	-100
0100		-002						-200
0106		-002						-300
0120	-40,-46 &-58 Voltage Codes -001	-002						-400
0130		-002						-500
0140		-002						-600

TABLE 10A – CONTROL TRANSFORMER KIT


MODEL NUMBERS	VOLTAGE	DESCRIPTION	PART NUMBER	XFMR ONLY
YCUL0096-YCUL0140	-17	KIT, CONTROL TRANSFORMER 1.5 KVA	375-03770-001	025-26291-000
	-28		375-03770-002	025-26292-000
	-40		375-03771-001	025-26294-000
	-46		375-03771-002	025-26292-000
	-58		375-03771-003	025-26293-000

ENCLOSURE KIT OPTIONS

TABLE 11 – ENCLOSURE KIT OPTIONS - TOP AND BOTTOM SECTIONS
(SEE FIGS. 12-15, PAGES 116-119)

MODEL NUMBER YCUL-	WIRE ENCLOSURE	LOUVERED ENCLOSURE	WIRE / LOUVERED ENCLOSURE	LOUVERED ENCLOSURE CONDENSER ONLY
0096 (Top)	475-47327-110	475-47330-110	475-47330-110	475-47330-110
0096 (Bottom)	475-47327-210	475-47330-210	475-47327-210	N/A
0100 (Top)	475-47327-110	475-47330-110	475-47330-110	475-47330-110
0100 (Bottom)	475-47327-210	475-47330-210	475-47327-210	N/A
0106 (Top)	475-47328-112	475-47331-112	475-47331-112	475-47331-112
0106 (Bottom)	475-47328-212	475-47331-212	475-47328-212	N/A
0120 (Top)	475-47329-114	475-47332-114	475-47332-114	475-47332-114
0120 (Bottom)	475-47329-214	475-47332-214	475-47329-214	N/A
0130 (Top)	475-47329-114	475-47332-114	475-47332-114	475-47332-114
0130 (Bottom)	475-47329-214	475-47332-214	475-47329-214	N/A
0140 (Top)	475-47329-114	475-47332-114	475-47332-114	475-47332-114
0140 (Bottom)	475-47329-214	475-47332-214	475-47329-214	N/A

ENCLOSURE KIT OPTIONS (CONT'D)

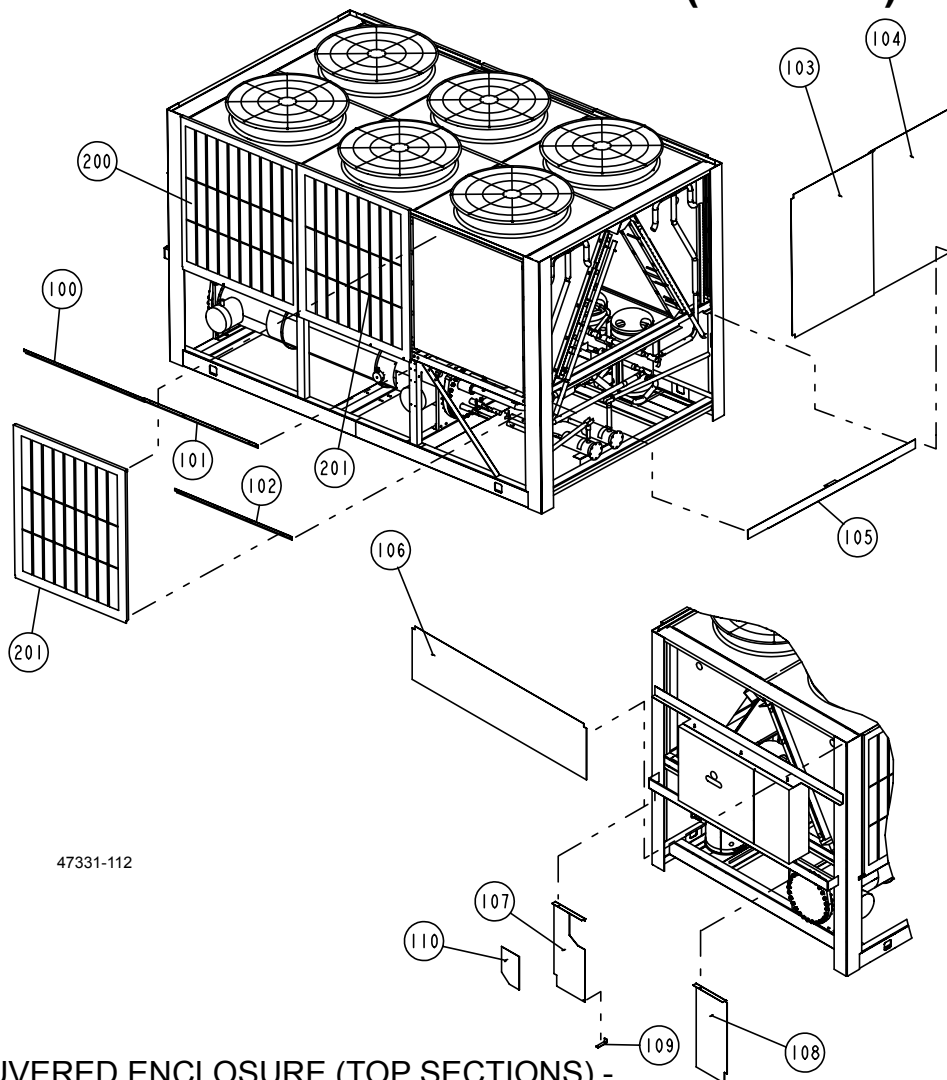

47331-112

FIG. 12 – LOUVERED ENCLOSURE (TOP SECTIONS) - YCUL0106 SHOWN (REF. TABLE 12)

TABLE 12 – LOUVERED ENCLOSURE (Top Sections) - (SEE FIG. 12)

LOUVERED ENCLOSURE (TOP SECTIONS)		YCUL0096 & YCUL0100		YCUL0106		YCUL0120, 0130 & YCUL0140	
ITEM #	DESCRIPTION	475-47330-110	QTY	475-47331-112	QTY	475-47332-114	QTY
100	RAIL	075-44535-000	2	075-47340-000	2	075-44535-000	2
101	Z CHANNEL	075-29073-000	2	075-29589-000	2	075-29073-000	4
102	RAIL	075-44529-000	2	075-47341-000	2	075-44529-000	2
103	PANEL, REAR LH	075-29532-000	1	075-29532-000	1	075-29532-000	1
104	PANEL, REAR RH	075-29533-000	1	075-29533-000	1	075-29533-000	1
105	RAIL, REAR	075-47029-000	1	075-47029-000	1	075-47029-000	1
106	PANEL, FRONT	075-47036-000	1	075-47036-000	1	075-47036-000	1
107	PANEL, FRONT LEFT	075-47026-001	1	075-47026-001	1	075-47026-001	1
108	PANEL, FRONT RIGHT	075-47025-000	1	075-47025-000	1	075-47025-000	1
109	BRACKET	075-47027-000	2	075-47027-000	2	075-47027-000	2
110	PLATE, PANEL	075-47026-002	1	075-47026-002	1	075-47026-002	1
200	PANEL, TOP	075-29068-000	2	075-47345-000	2	075-29068-000	2
201	PANEL, TOP	075-29069-000	4	075-29580-000	4	075-29069-000	6

ENCLOSURE KIT OPTIONS (CONT'D)

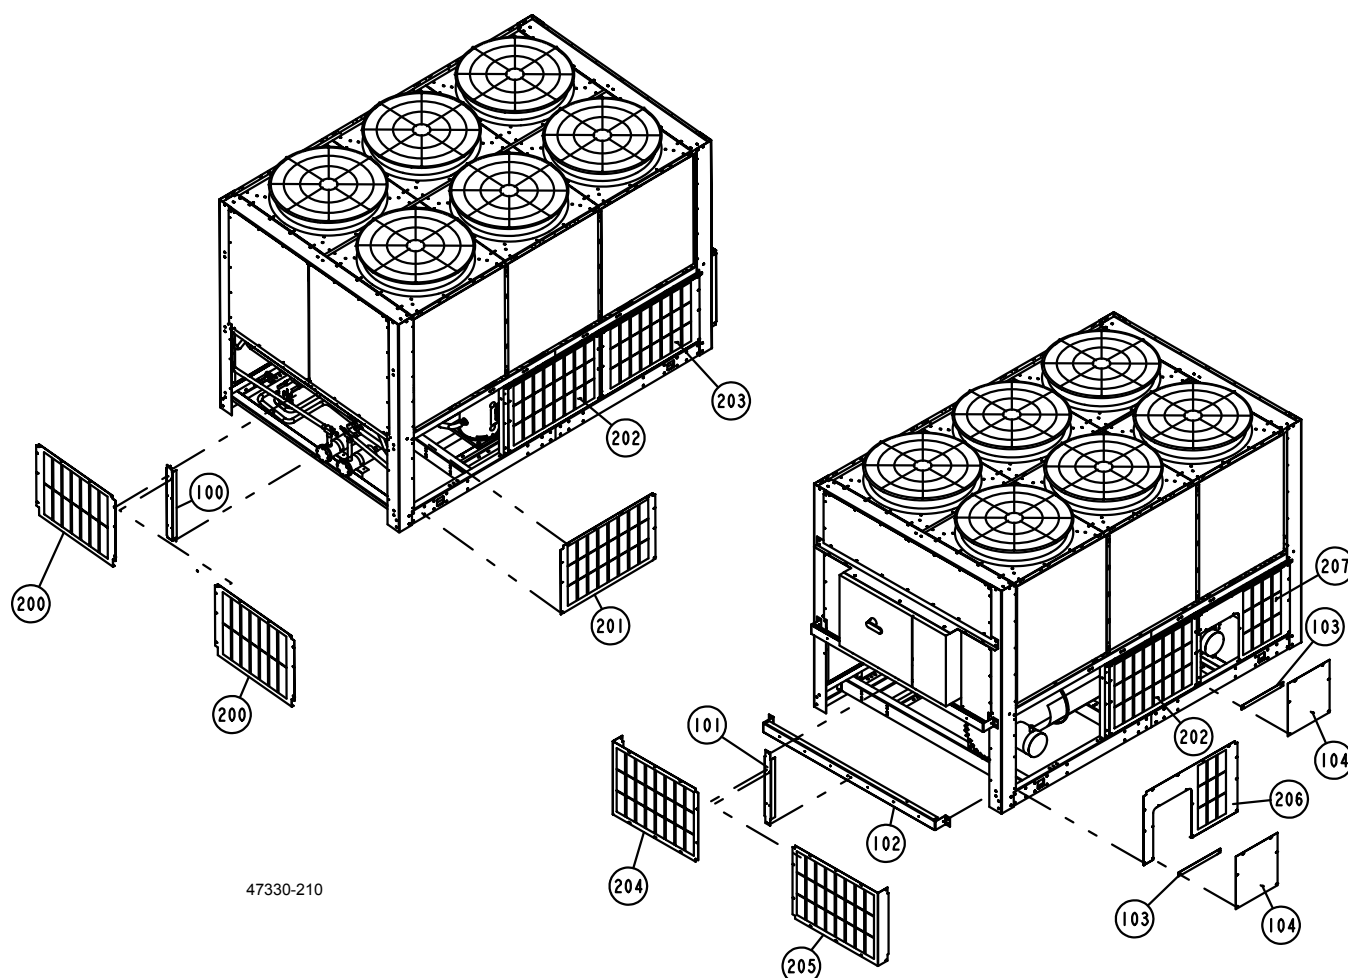


FIG. 13 – LOUVERED ENCLOSURE (BOTTOM SECTIONS)
- YCUL0096 AND YCUL0100 SHOWN (REF. TABLE 13)

TABLE 13 – LOUVERED ENCLOSURE (Bottom Sections) - (SEE FIG. 13)

LOUVERED ENCLOSURE (BOTTOM SECTIONS)		YCUL0096 & YCUL0100		YCUL0106		YCUL0120, 0130 & YCUL0140	
ITEM #	DESCRIPTION	475-47330-210	QTY	475-47331-212	QTY	475-47332-214	QTY
100	SUPPORT, REAR	075-47030-000	1	075-47030-000	1	075-47030-000	1
101	SUPPORT	075-47028-000	1	075-47028-000	1	075-47028-000	1
102	BRACE	075-44564-000	1	075-44564-000	1	075-44564-000	1
103	SUPPORT, ANGLE	075-29587-000	2	075-29587-000	2	075-29587-000	2
104	COVER	075-29586-000	2	075-29586-000	2	075-29586-000	2
200	PANEL	075-29585-000	2	075-29585-000	2	075-29585-000	2
201	PANEL	075-35802-000	1	075-47344-000	2	075-35802-000	2
202	PANEL	075-29071-000	2	075-29581-000	1	075-29071-000	3
203	PANEL	075-47022-000	1	075-47346-000	1	075-47022-000	1
204	PANEL, FRONT	075-47035-000	1	075-47035-000	1	075-47035-000	1
205	PANEL, FRONT	075-47034-000	1	075-47034-000	1	075-47034-000	1
206	PANEL	075-45287-000	1	075-47343-000	1	075-45287-000	1
207	PANEL	075-47342-000	1	075-29584-000	1	075-45288-000	1

ENCLOSURE KIT OPTIONS (CONT'D)

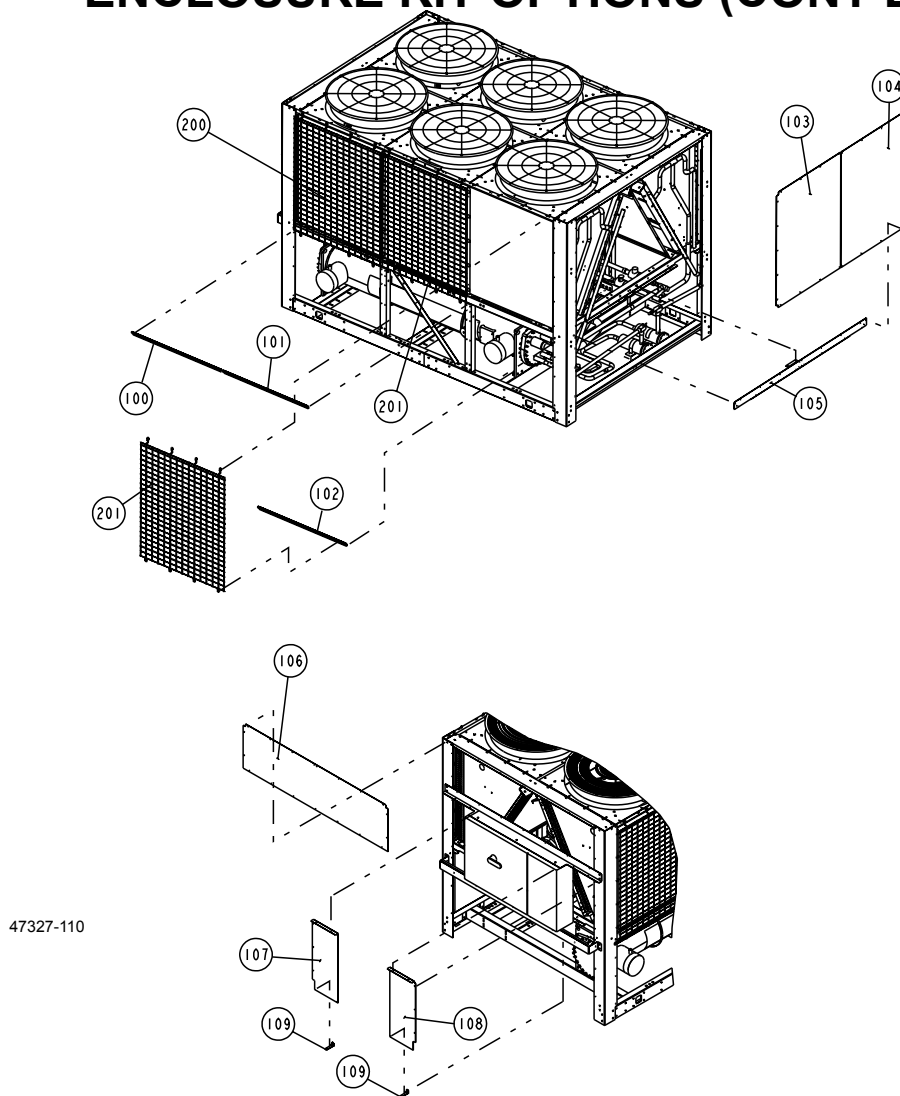


FIG. 14 – WIRE ENCLOSURE (TOP SECTIONS) - YCUL0096 AND YCUL0100 SHOWN (REF. TABLE 14)

TABLE 14 – WIRE ENCLOSURE (Top Sections) - (SEE FIG. 14)

WIRE ENCLOSURE (TOP SECTIONS)		YCUL0096 & YCUL0100		YCUL0106		YCUL0120, 0130 & YCUL0140	
ITEM #	DESCRIPTION	475-47327-110	QTY	475-47328-112	QTY	475-47329-114	QTY
100	RAIL	075-44535-000	2	075-47340-000	2	075-44535-000	2
101	Z CHANNEL	075-29073-000	2	075-29589-000	2	075-29073-000	4
102	RAIL	075-44529-000	2	075-47341-000	2	075-44529-000	2
103	PANEL, REAR LH	075-29532-000	1	075-29532-000	1	075-29532-000	1
104	PANEL, REAR RH	075-29533-000	1	075-29533-000	1	075-29533-000	1
105	RAIL, REAR	075-47029-000	1	075-47029-000	1	075-47029-000	1
106	PANEL, FRONT	075-47036-000	1	075-47036-000	1	075-47036-000	1
107	PANEL, FRONT	075-47026-001	1	075-47026-001	1	075-47026-001	1
108	PANEL, FRONT	075-47025-000	1	075-47025-000	1	075-47025-000	1
109	BRACKET	075-47027-000	2	075-47027-000	2	075-47027-000	2
200	GRILLE	026-36770-000	2	026-37949-000	2	026-36770-000	2
201	GRILLE	026-36771-000	4	026-36533-000	4	026-36771-000	6

ENCLOSURE KIT OPTIONS (CONT'D)


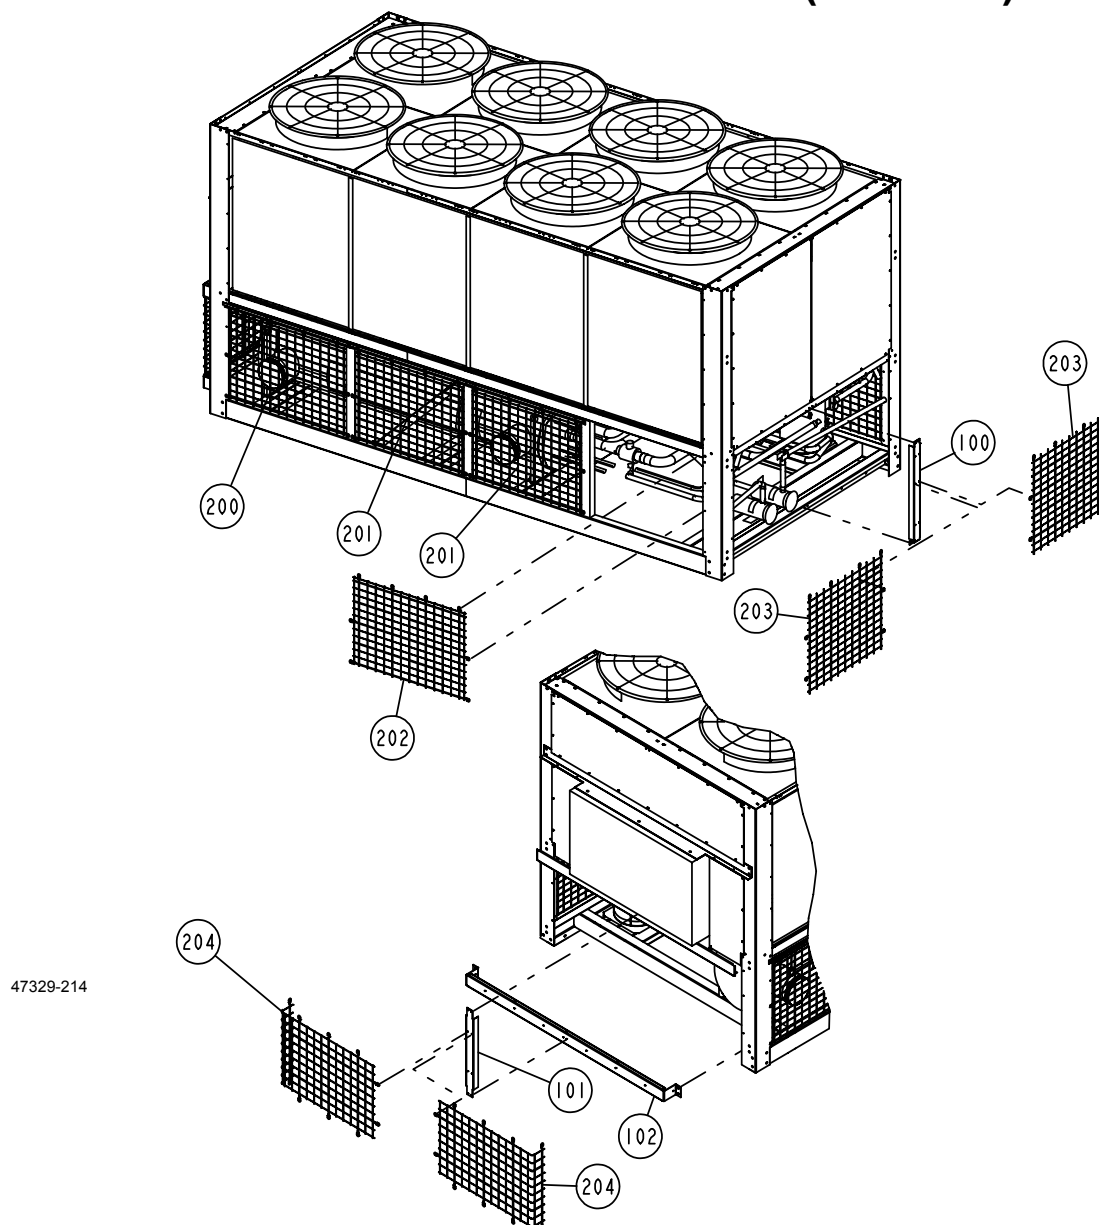


FIG. 15 – WIRE ENCLOSURE (BOTTOM SECTIONS) - YCUL0120, YCUL0130 AND YCUL0140 SHOWN (REF. TABLE 15)

TABLE 15 – WIRE ENCLOSURE (Bottom Sections) - (SEE FIG. 15)

WIRE ENCLOSURE (BOTTOM SECTIONS)		YCUL0096 & YCUL0100		YCUL0106		YCUL0120, 0130 & YCUL0140	
ITEM #	DESCRIPTION	475-47327-210	QTY	475-47328-212	QTY	475-47329-214	QTY
100	SUPPORT	075-47030-000	1	075-47030-000	1	075-47030-000	1
101	SUPPORT	075-47028-000	1	075-47028-000	1	075-47028-000	1
102	BRACE	075-44564-000	1	075-44564-000	1	075-44564-000	1
200	GRILLE	026-37938-000	2	026-37947-000	2	026-37938-000	2
201	GRILLE, BOTTOM	026-36773-000	2	026-36534-000	2	026-36773-000	4
202	GRILLE, BOTTOM	026-36772-000	2	026-37948-000	2	026-36772-000	2
203	GRILLE, REAR	026-36535-000	2	026-36535-000	2	026-36535-000	2
204	GRILLE	026-37939-000	2	026-37939-000	2	026-37939-000	2

REMOTE CONTROL CENTER

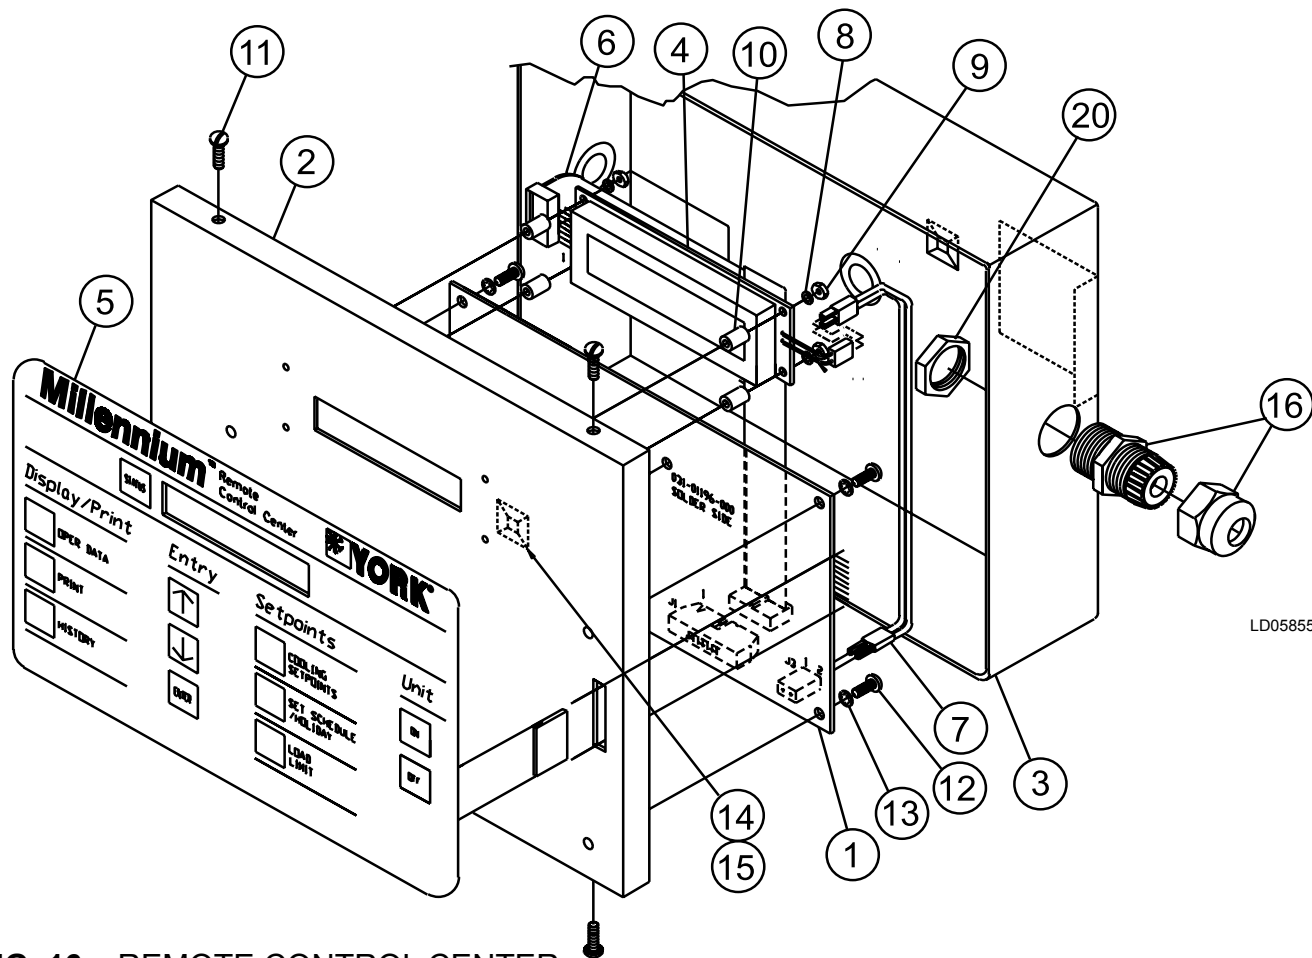


LD05855

FIG. 16 – REMOTE CONTROL CENTER

TABLE 16 – REMOTE CONTROL CENTER PARTS - 371-02485-104 (60HZ)

ITEM NUMBER	QTY	DESCRIPTION	PART NUMBER
1	1	CONTROL, MICROBOARD	031-01196-000
2	1	COVER, REMOTE CONTROL	371-02485-311
3	1	BASE, REMOTE CONTROL	071-02485-320
4	1	DISPLAY, LCD	031-01110-000
5	1	SWITCH, KEYPAD	024-30930-000
6	1	RIBBON CABLE	071-01289-211
7	1	WIRE CABLE	071-01289-212
10	4	SPACER, NYLON 1/4 OD X 7/16 LONG	021-17575-000
11	1	TRANSFORMER	025-29917-002
14	3	CABLE TIE	025-25155-000
15	1	EPROM	031-02016-003
16	1	CABLE FITTING	025-05701-000
17	2	INSULATOR, RECIPAK ROOFTOP	071-01730-000
18	2	MODULE, LAN TRANSIENT PROTECTION (LTP)	031-01586-000
19	1	INSTALLATION INSTRUCTIONS	071-01289-002
20	1	NUT, LOCKING, HEYCO - 3232	025-31732-000
21	1	OPERATOR'S MANUAL	150.62-NM1

REMOTE CURRENT/TEMPERATURE RESET PARTS BREAKDOWN

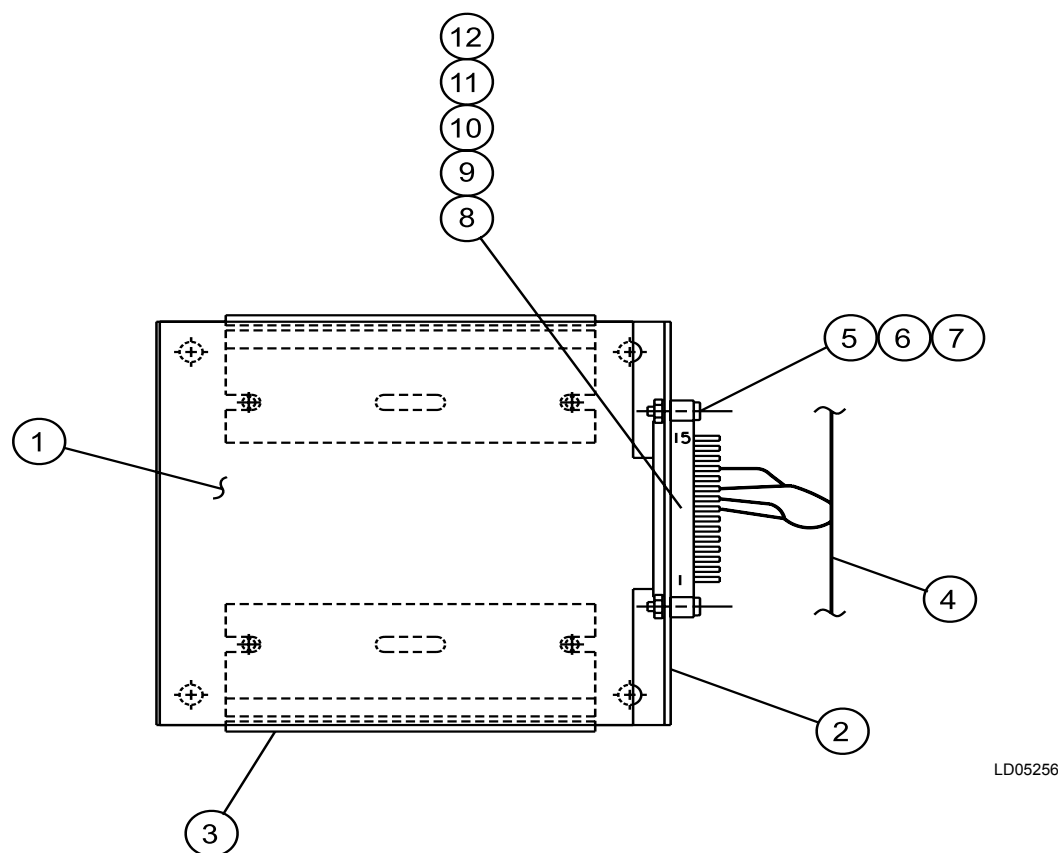

LD05256

FIG. 17 – REMOTE CURRENT/TEMPERATURE RESET COMPONENTS

TABLE 17 – REMOTE CURRENT OR TEMPERATURE RESET KIT NUMBER 375-90914-000

ITEM NUMBER	QTY	DESCRIPTION	PART NUMBER
1	1	CONTROL, REMOTE CURRENT/TEMPERATURE	031-00814-000
2	1	BRACKET, REMOTE CURRENT/TEMPERATURE RESET	371-01232-361
3	1	TRACK, SNAP	071-01232-363
4	1	WIRING, REMOTE CURRENT/ TEMPERATURE RESET	571-02492-231*
5	2	SCREW, MACHINE PAN HEAD #4	021-17594-000
6	2	NUT, HEX #4-40UNC-2B	021-10056-000
7	2	LOCKWASHER, HELICAL SPRING #4 REG.	021-17576-000

* Refer to **Table 17a**

TABLE 17a – REMOTE RESET WIRING

ITEM NUMBER	QTY	DESCRIPTION	PART NUMBER
8	2	CONTROL, SOC AWG WIRE SIZE 20	025-19674-000
9	2	TERMINAL PUSH ON STRAIGHT	025-06642-000
10	4	TUBING HEAT SHRINKABLE 1/8 ID	025-29632-000
11	1	HGS CONNECTOR ELECTRICAL PLUG	025-32564-000*
12	1	CONNECTOR EDGE, 15 POSITION, 0.125	025-29631-000

RECOMMENDED SPARE PARTS

York Model YCUL Style C Air Cooled Liquid Chillers
Suggested Spare Parts List for Critical Duty Applications

TABLE 18 – RECOMMENDED SPARE PARTS - YCUL0096-YCUL0140 CHILLERS

PAGE REF. & ITEM NUMBER	DESCRIPTION	MODEL NUMBER YCUL	PART NUMBER
Page 6, Item 1	Fan Motor (Standard)	-17	024-30900-002
		-28	024-30900-002
		-40	024-30900-004
		-46	024-30900-001
		-50	024-30900-001
		-58	024-30900-003
Page 6, Item 1	Fan Motor (Low Noise)	-17	024-30933-002
		-28	024-30933-002
		-40	024-30933-004
		-46	024-30933-001
		-50	024-30933-001
		-58	024-30933-003
Page 6, Item 2	Fan Blade (Standard)	All	026-37577-000
	Fan Blade (Low Noise)	All	026-37579-000
Page 8 and 9, Item 1	Valve, Electronic Expansion	See Table 3	025-37835-000
			025-37836-000
			025-35952-000
Page 8 and 9, Item 3	Core, Dehydrator	All	026-37540-000
Page 11, Item OIL	Oil, Compressor (Type 'F')	R-22	011-00434-000
	Oil, Compressor (Type 'V')	407-C	011-00948-000
Page 16, Item 5A	Microboard	All	031-02050-001
Page 16, Item 5B	EPROM	All	031-02423-001
Page 16, Item 10B	Fuse	All	025-34142-000
Page 20, Item 1	Sensor, Outside Air Temperature	All	025-28663-001
Page 20, Item 3	Switch, High Pressure Cutout	All	025-28985-002
Page 20, Item 4	Switch, Low Pressure Cutout	All	025-33707-000
Page 20, Item 6	Transducer, Suction Pressure (0-200psi)	All	025-29583-000
Page 20, Item 7	Transducer, Discharge Pressure (0-400psi)	All	025-29139-001
Page 20, Item 8	Sensor, Discharge Air Temperature	All	025-28935-000
Page 24-113, Item 2B	Fan Overload	See TABLE 9	024-32934-000
			024-32935-000
			024-32936-000
			024-34298-000
Page 24-113, Item 2D	Fan Contactor	See TABLE 9	024-32929-000
			024-32930-000

All parts should be purchased from your local YORK
Sales and Service Center.

NOTES



P.O. Box 1592, York, Pennsylvania USA 17405-1592
Copyright © by Johnson Controls 2013
Form 150.66-RP1 (713)
Issue Date: September 25, 2013
Supersedes: 150.66-RP1 (713)

800-861-1001
www.johnsoncontrols.com

Subject to change without notice. Printed in USA
ALL RIGHTS RESERVED