


UNIT NOMENCLATURE

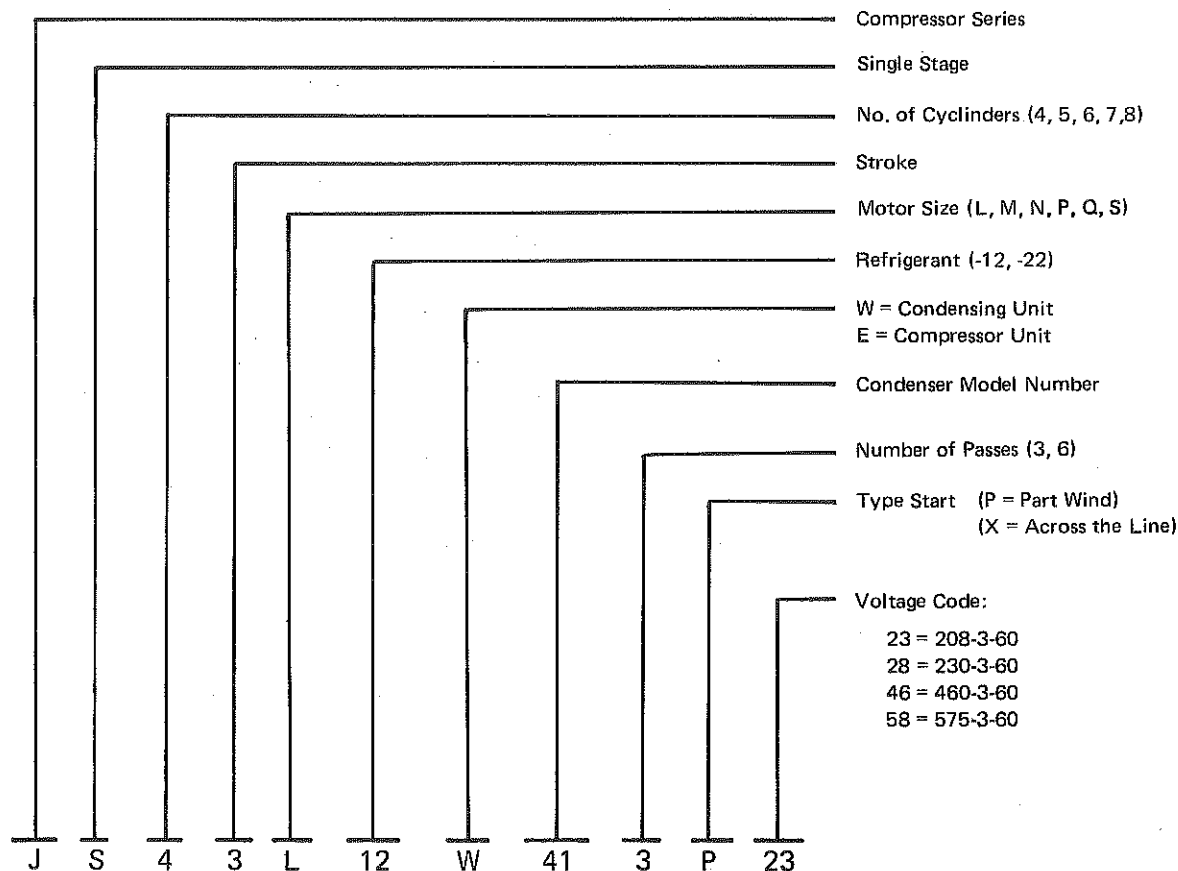

NOTE

For Replacement Compressors and/or Compressor Parts Refer to Form 180.23-RP1.

TABLE 1 —CONDENSER PARTS

Part Description	Condenser Size					
	41	52	61	76	101	126
Condenser (Less Purge & Relief Valves)						
3 Pass	366-30199	366-30201	366-30203	366-30205	366-30207	366-30209
6 Pass	366-30200	366-30202	366-30204	366-30206	366-30208	366-30210
Purge Valve	022-01582	022-01582	022-01582	022-01582	022-01582	022-01582
Relief Valve	022-01887	022-01887	022-01887	022-01887	022-01887	022-01887
Tube	007-06131	007-06131	007-06131	007-06131	007-06131	007-06131
No. Req'd.	48	60	72	90	120	150
Gasket, Head - 3 Pass Cond. (2 Req'd.)	066-26911	066-26911	066-26912	066-26912	066-30273	066-30273
Gasket, Head 6 Pass Cond. 1 Each Req'd.	066-30277 066-30278	066-30277 066-30278	066-30279 066-30280	066-30279 066-30280	066-30281 066-30282	066-30281 066-30282

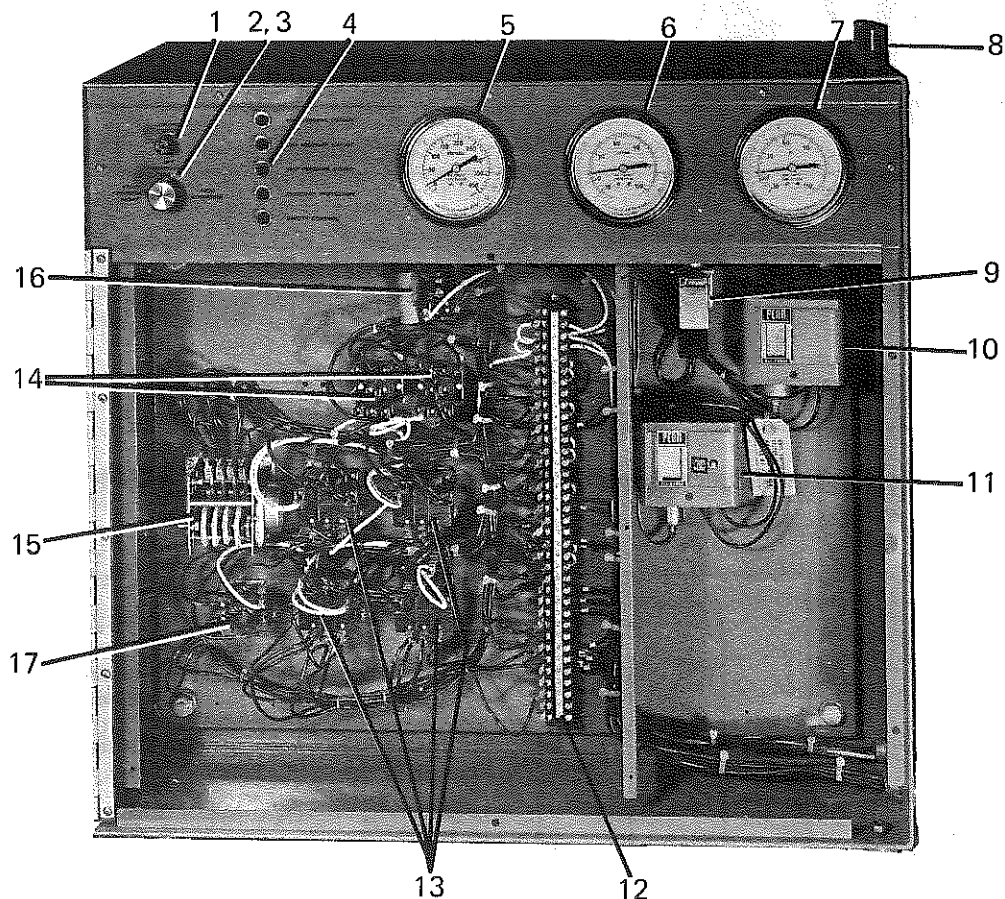


TABLE 2 —CONTROL PANEL

Item	Description	Part No.
1	Fuse	025-17317
2	Switch (Stop-Off-Auto)	024-06916
3	Knob	365-22494
4	Light, Indicating (5 Req'd)	025-13551
5	Gauge, Discharge Pressure	026-14294
6	Gauge, Suction Pressure	026-14295
7	Gauge, Oil Pressure	026-14296
8	Valve, Gauge Stop (3 Req'd)	022-02994
*	Connection - Dish. Gauge to Valve	366-11929
*	Connection - Suct. Gauge to Valve	366-11930
*	Connection - Oil Gauge to Valve	366-11931
9	Cutout - Oil Pressure	025-17778
10	Cutout - Low Pressure	025-12044
11	Cutout - High Pressure	025-15860
12	Block, Terminal (36 Req'd)	025-15865
13	Relay - 1R, 2R, 4R, 5R (4 Req'd)	024-17027
14	Relay - 6R, 7R (2 Req'd)	024-14519
15	Timer, Repeat Cycle	025-16563
16	Relay, Time Delay (Optional)	024-13577
17**	Relay - 3R (1 Req'd)	024-17075
*	Lock and Key	029-07382
*	Key Only	029-10876
*	Transformer (Optional)	
	230, 460 volt	025-17437
	575 volt	025-15532

* Not Shown

**Wiring on older models must be changed per Wiring Diagram 180.23-W
Coded 874 or later (interchange wiring for contacts 1 and 2).