



**PACKAGED LIQUID CHILLERS
AIR COOLED – RECIPROCATING HERMETIC**

RENEWAL PARTS

Supersedes: 150.60-RP2 (792)

193

FORM 150.60-RP2


60 HZ MODELS

**YCAZ88MR6, YCAJ44MR6, YCAJ44ST6, YCAJ54NS6,
YCAJ55ST8, YCAJ65ST8, YCAJ66XT8**


50 HZ MODELS



**YCAJ44MR7, YCAJ55MR7, YCAJ55ST7, YCAJ65NS7,
YCAJ66ST9, YCAJ76ST9, YCAJ77XT9**

STYLE B

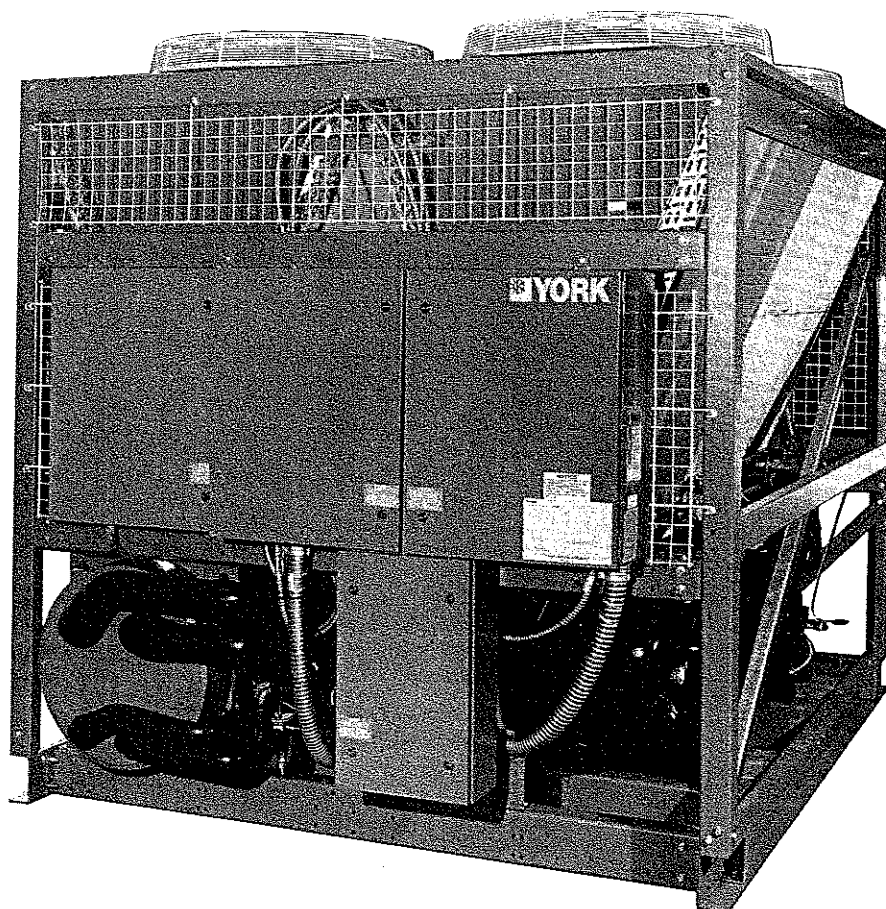

UNIT NOMENCLATURE

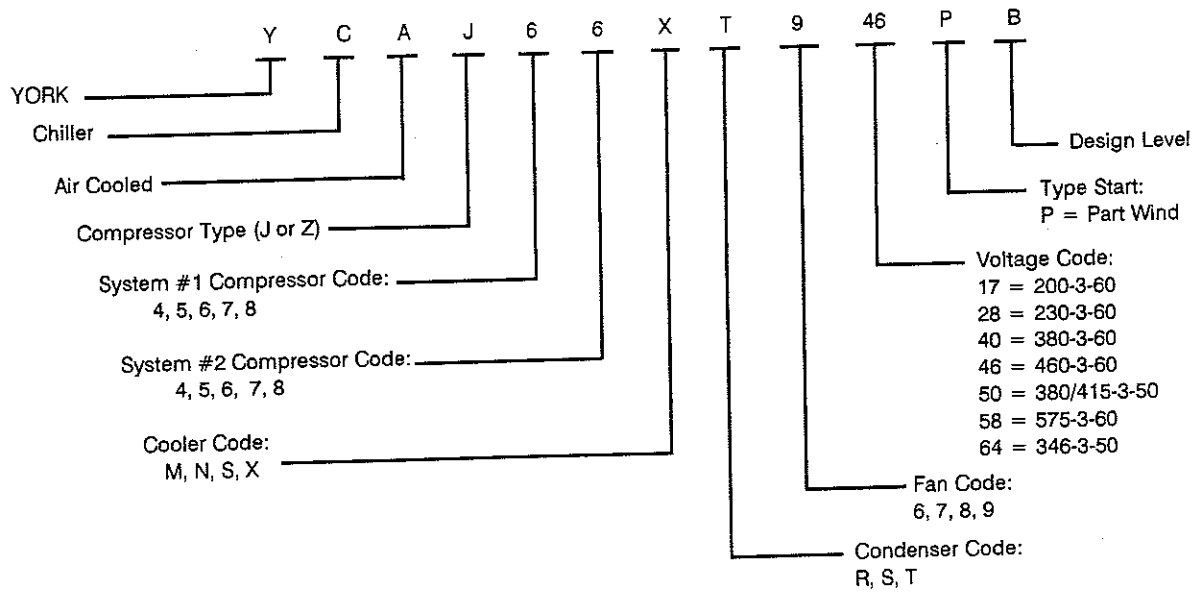

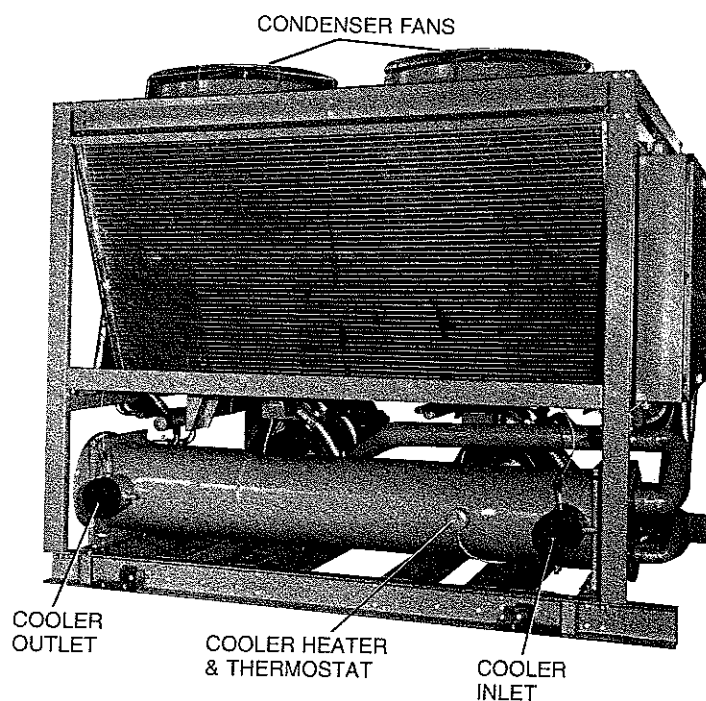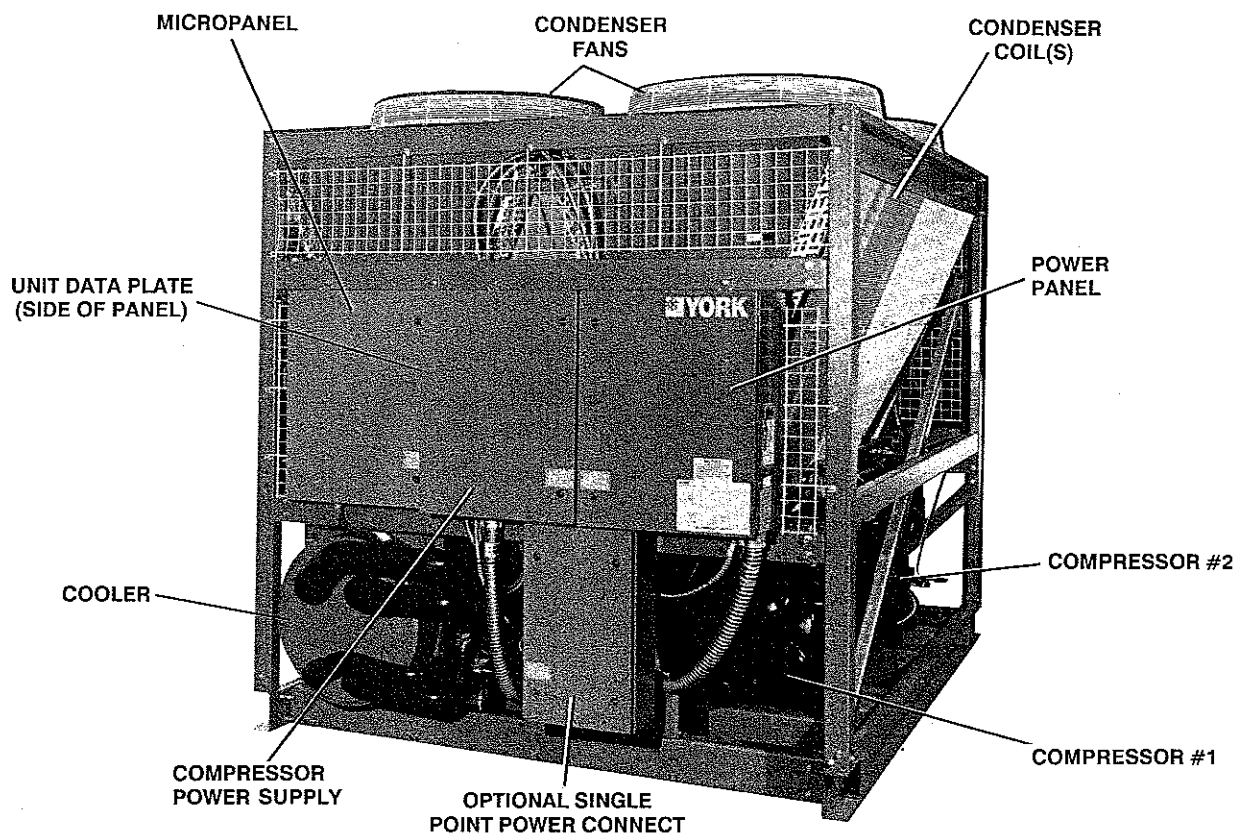

MAJOR UNIT COMPONENTS

COMPRESSOR MODEL NUMBERS

UNIT MODEL	60 HZ	YCAZ88MR6	YCAJ44MR6	YCAJ44ST6	YCAJ54NS6	YCAJ55ST8	YCAJ65ST8	YCAJ66XT8
COMPRESSOR MODEL	SYSTEM NO. 1	Z6W-E	JS43-M	JS43-M	JS44-P	JS44-P	JS63-Q	JS63-Q
	SYSTEM NO. 2	Z6W-E	JS43-M	JS43-M	JS43-M	JS44-P	JS44-P	JS63-Q


UNIT MODEL	50 HZ	YCAJ44MR7	YCAJ55MR7	YCAJ55ST7	YCAJ65NS7	YCAJ66ST9	YCAJ76ST9	YCAJ77XT9
COMPRESSOR MODEL	SYSTEM NO. 1	JS43-M	JS44-P	JS44-P	JS63-Q	JS63-Q	JS64-S	JS64-S
	SYSTEM NO. 2	JS43-M	JS44-P	JS44-P	JS44-P	JS63-Q	JS63-Q	JS64-S

For replacement compressors and/or compressor parts, refer to the following, as appropriate:


"J" Compressors—Form 180.23-RP3

"Z" Compressors—Form 180.45-RP1

COMPRESSOR NOMENCLATURE Z MODELS

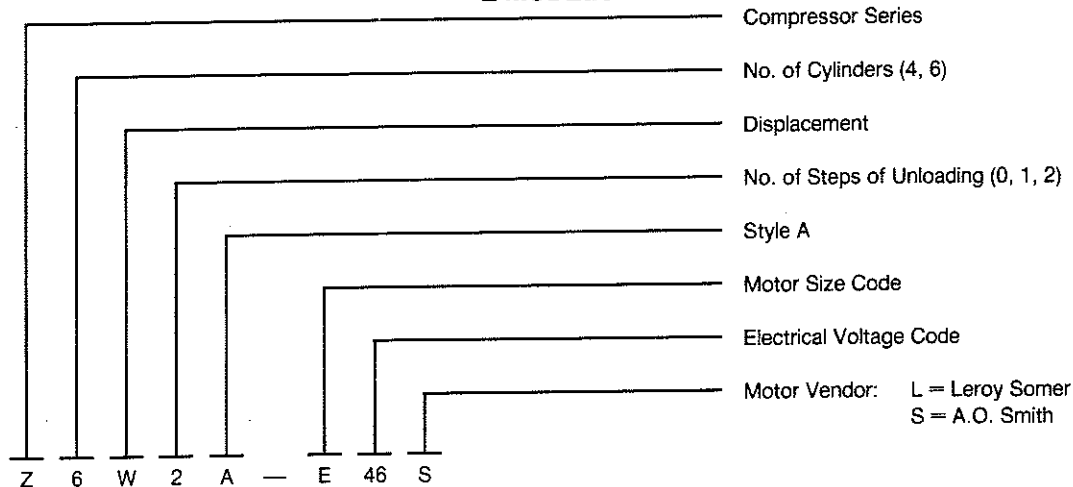

J MODELS

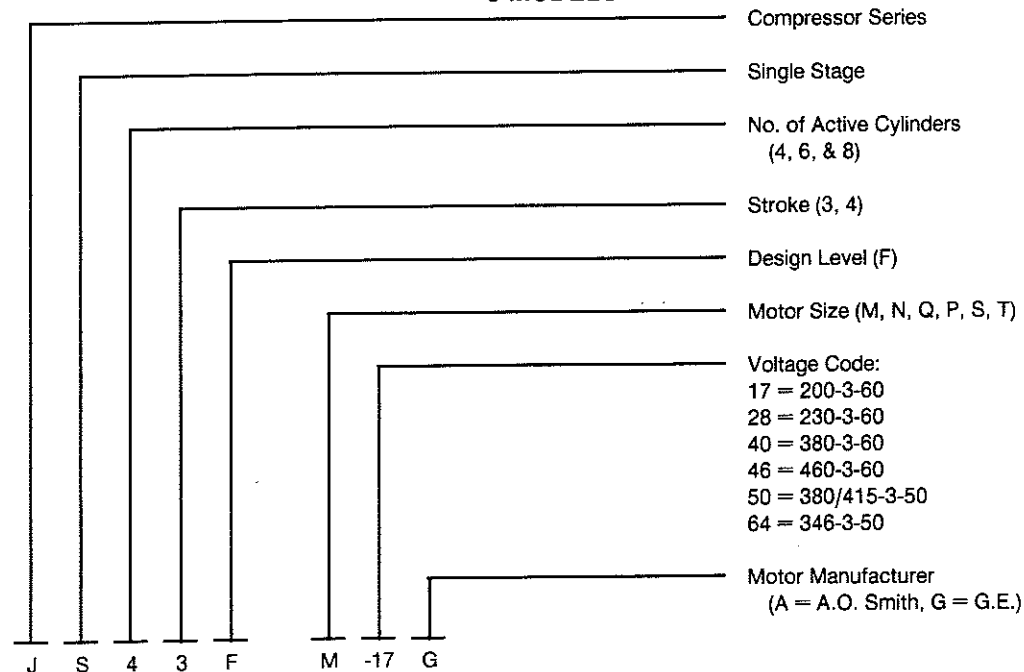

⑤ COMPRESSOR MOTOR CONTACTORS




VOLTAGE CODE	TYPE START	SYSTEM	60 HZ UNIT MODEL							
			YCAZ88MR6	YCAJ44MR6	YCAJ44ST6	YCAJ54NS6	YCAJ55ST8	YCAJ65ST8	YCAJ66XT8	
-17	P	1	024-25549-000	024-25549-000	024-25549-000	024-25548-000	024-25548-000	024-25548-000	024-25548-000	
		2	024-25549-000	024-25549-000	024-25549-000	024-25548-000	024-25548-000	024-25548-000	024-25548-000	
-28	P	1	024-25550-000	024-25549-000	024-25549-000	024-25549-000	024-25549-000	024-25548-000	024-25548-000	
		2	024-25550-000	024-25549-000	024-25549-000	024-25549-000	024-25549-000	024-25548-000	024-25548-000	
-40	P	1	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25550-000	024-25549-000	024-25549-000	
		2	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25550-000	024-25549-000	024-25549-000	
-46	P	1	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25550-000	024-25550-000	024-25550-000	
		2	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25550-000	024-25550-000	024-25550-000	
-58	P	1	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25550-000	
		2	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25550-000	

VOLTAGE CODE	TYPE START	SYSTEM	50 HZ UNIT MODEL						
			YCAJ44MR7	YCAJ55MR7	YCAJ55ST7	YCAJ65NS7	YCAJ66ST9	YCAJ76ST9	YCAJ77XT9
-50	P	1	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25549-000	024-25549-000
		2	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25549-000	024-25549-000
-64	P	1	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25549-000	024-25549-000
		2	024-25551-000	024-25551-000	024-25551-000	024-25551-000	024-25550-000	024-25549-000	024-25549-000


NOTES: ⑤ = Recommended Stock Spare Parts

P = Part Winding


Part Winding (start) compressors require two (2) contactors per compressor (system); contactors include suppressors.

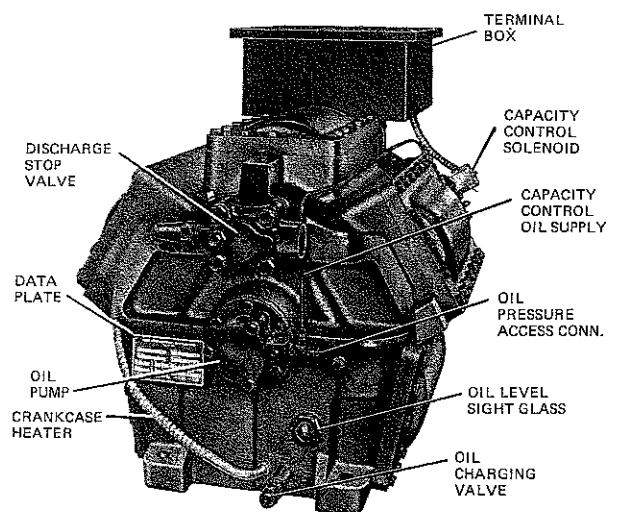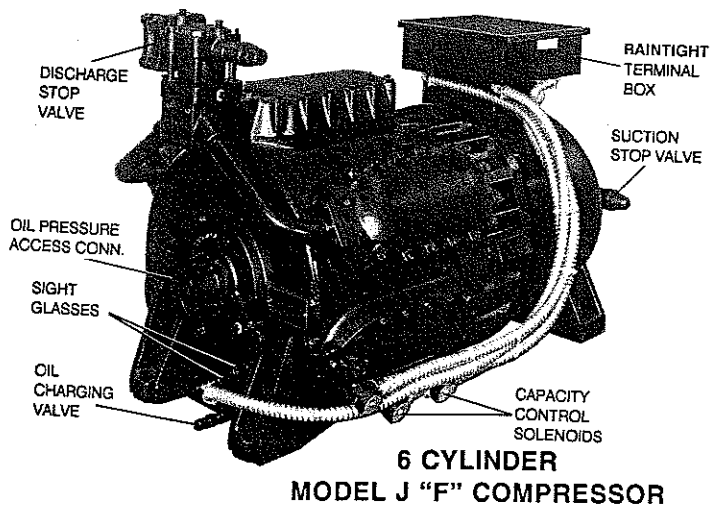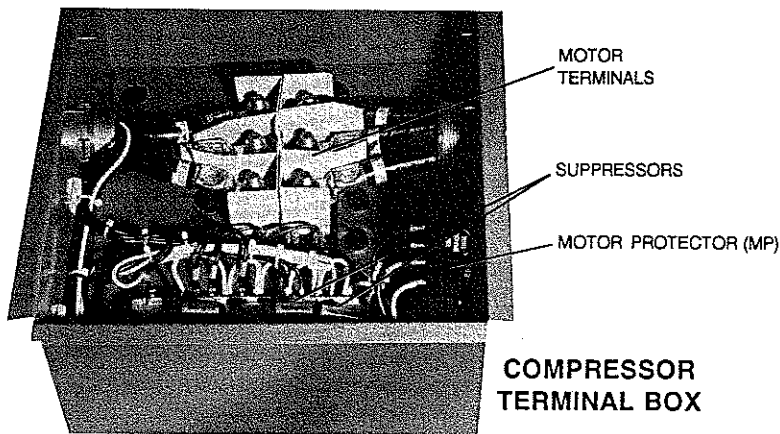



**6 CYLINDER
MODEL Z COMPRESSOR**

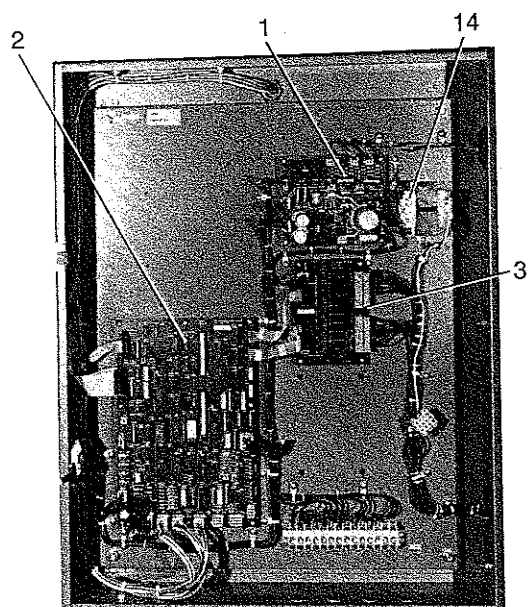


ELECTRONIC PANEL

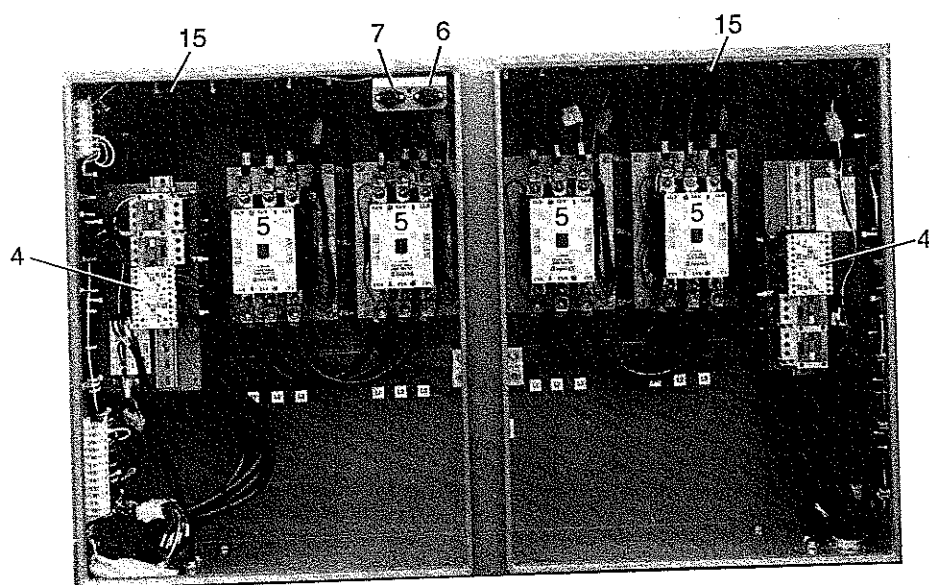

POWER PANEL

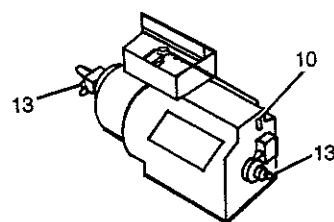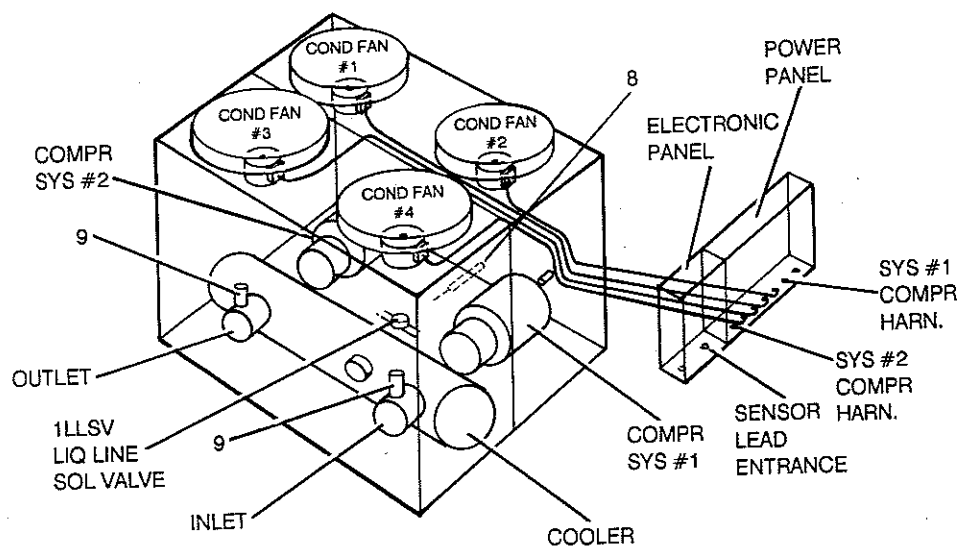

6 CYL. "Z" COMP.

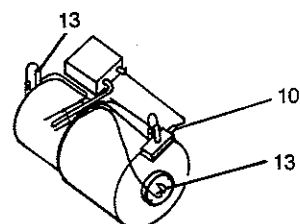

4 & 6 CYL. "J" COMP.

FIG. 1 - CONTROL COMPONENTS

CONTROL COMPONENTS (See Fig. 1)


ITEM NO.	QTY. PER UNIT	DESCRIPTION	VOLT-AGE CODE	ALL MODELS	HZ 60 50	UNIT MODEL						
						YCAZ88MR6 YCAJ44MR7	YCAJ44MR6 YCAJ55MR7	YCAJ44ST6 YCAJ55ST7	YCAJ54NS6 YCAJ65NS7	YCAJ55ST8 YCAJ66ST9	YCAJ65ST8 YCAJ76ST9	YCAJ66XT8 YCAJ77XT9
⑤ 1	1	CIRCUIT BOARD ASSEMBLIES Power Supply Board	ALL	031-01094-000								
⑤ 2	1	Micro Board	ALL	031-01095-000								
⑤ 3	Varies	Relay Board		031-01093-000								
		Quantity Per Unit										
			-17			1	1	1	1	1	2	2
			-28			1	1	1	1	1	2	2
			-40			1	1	1	1	1	2	2
			-46			1	1	1	1	1	2	2
			-50			1	1	1	2	2	2	2
			-58			1	1	1	1	1	2	2
			-64			1	1	1	2	2	2	2
⑤ 4	4	CONTACTORS Fan, w/ suppressor	-17			024-25521-000	024-25521-000	024-25521-000	024-25521-000	024-25526-000	024-25526-000	024-25526-000
			-28			024-25521-000	024-25521-000	024-25521-000	024-25521-000	024-25526-000	024-25526-000	024-25526-000
			-40			024-25522-000	024-25522-000	024-25522-000	024-25522-000	024-25521-000	024-25521-000	024-25521-000
			-46			024-25522-000	024-25522-000	024-25522-000	024-25522-000	024-25521-000	024-25521-000	024-25521-000
			-50			024-25522-000	024-25522-000	024-25522-000	024-25522-000	024-25521-000	024-25521-000	024-25521-000
			-58			024-25522-000	024-25522-000	024-25522-000	024-25522-000	024-25521-000	024-25521-000	024-25521-000
			-64			024-25522-000	024-25522-000	024-25522-000	024-25522-000	024-25521-000	024-25521-000	024-25521-000
5	**	Compressor (w/suppressor)	**	**								
⑤ 6	1	FUSES Electronic Power Supply Circuit (5 amp), 2FU	ALL	025-27922-000								
⑤ 7	1	Control Circuit (20 amp), 1FU	ALL	025-28967-000								
⑤ 8	1	SENSORS Outside Air Temperature (OAT)	ALL	025-28663-001								
⑤ 9	2	Water Temperature (LWT, RWT)	ALL	025-28935-000								
⑤ 10	2	HIGH PRESSURE CUTOUT	ALL	025-28985-002								
⑤ 11	2	MODULE, MOTOR PROTECTOR	ALL	025-27522-000								
⑤ 12	Varies	SUPPRESSOR (See NOTE 1) Quantity per Unit		031-01117-000								
			-17			4	4	4	4	4	5	6
			-28			4	4	4	4	4	5	6
			-40			4	4	4	4	4	5	6
			-46			4	4	4	4	4	5	6
			-50			4	4	4	5	6	6	6
			-58			4	4	4	4	4	5	6
			-64			4	4	4	5	6	6	6
⑤ 13	4	TRANSDUCER (Oil and Suction Pressure)	ALL	025-29139-002								
14	1	TRANSFORMER Micro Panel (2T)	ALL	025-27911-000								
15	2	Current (1CT, 2CT)	ALL	025-27408-000								
16 *	3	SUPPRESSOR (For Options)	ALL	031-00808-000								

NOTES: ⑤ Recommended stock spare part.

* Not shown; shipped loose for field use in the application of inductive loads, such as: Alarm Circuit Relays and Pump Starter Pilot Relays. See FORM 150.60-NM2, Installation, Operating and Maintenance

** See page 5.

1. For compressor unloading solenoid and liquid line solenoid.

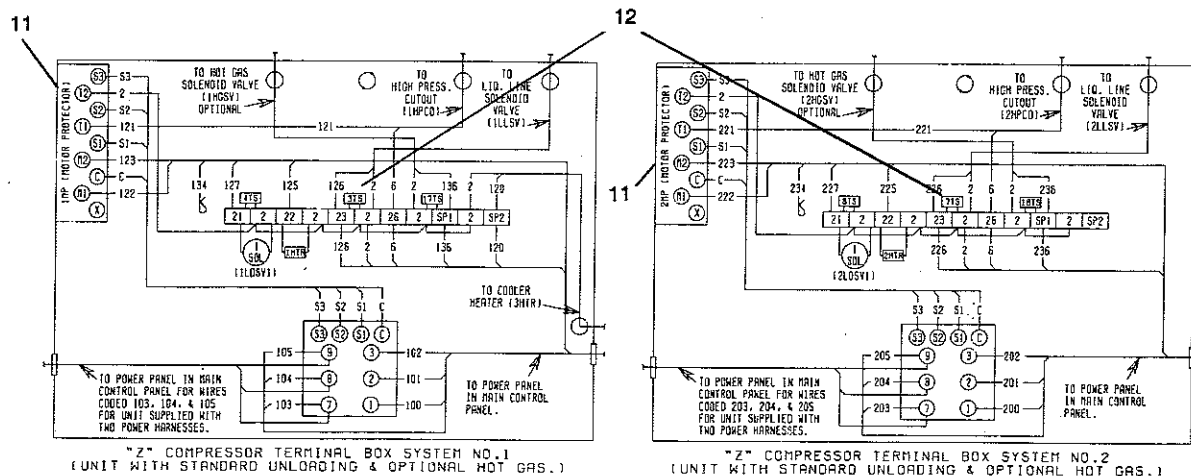

MODEL	SYSTEM	COILS
YCAZ88MR6	1	3 ROW
	2	3 ROW
YCAJ44MR7	1	3 ROW
	2	3 ROW
YCAJ44MR6	1	3 ROW
	2	3 ROW
YCAJ55MR7	1	3 ROW
	2	3 ROW
YCAJ44ST6	1	4 ROW
	2	4 ROW
YCAJ55ST7	1	4 ROW
	2	4 ROW
YCAJ54NS6	1	4 ROW
	2	3 ROW
YCAJ65NS7	1	4 ROW
	2	3 ROW
YCAJ55ST8	1	4 ROW
	2	4 ROW
YCAJ66ST9	1	4 ROW
	2	4 ROW
YCAJ65ST8	1	4 ROW
	2	4 ROW
YCAJ76ST9	1	4 ROW
	2	4 ROW
YCAJ66XT8	1	4 ROW
	2	4 ROW
YCAJ77XT9	1	4 ROW
	2	4 ROW

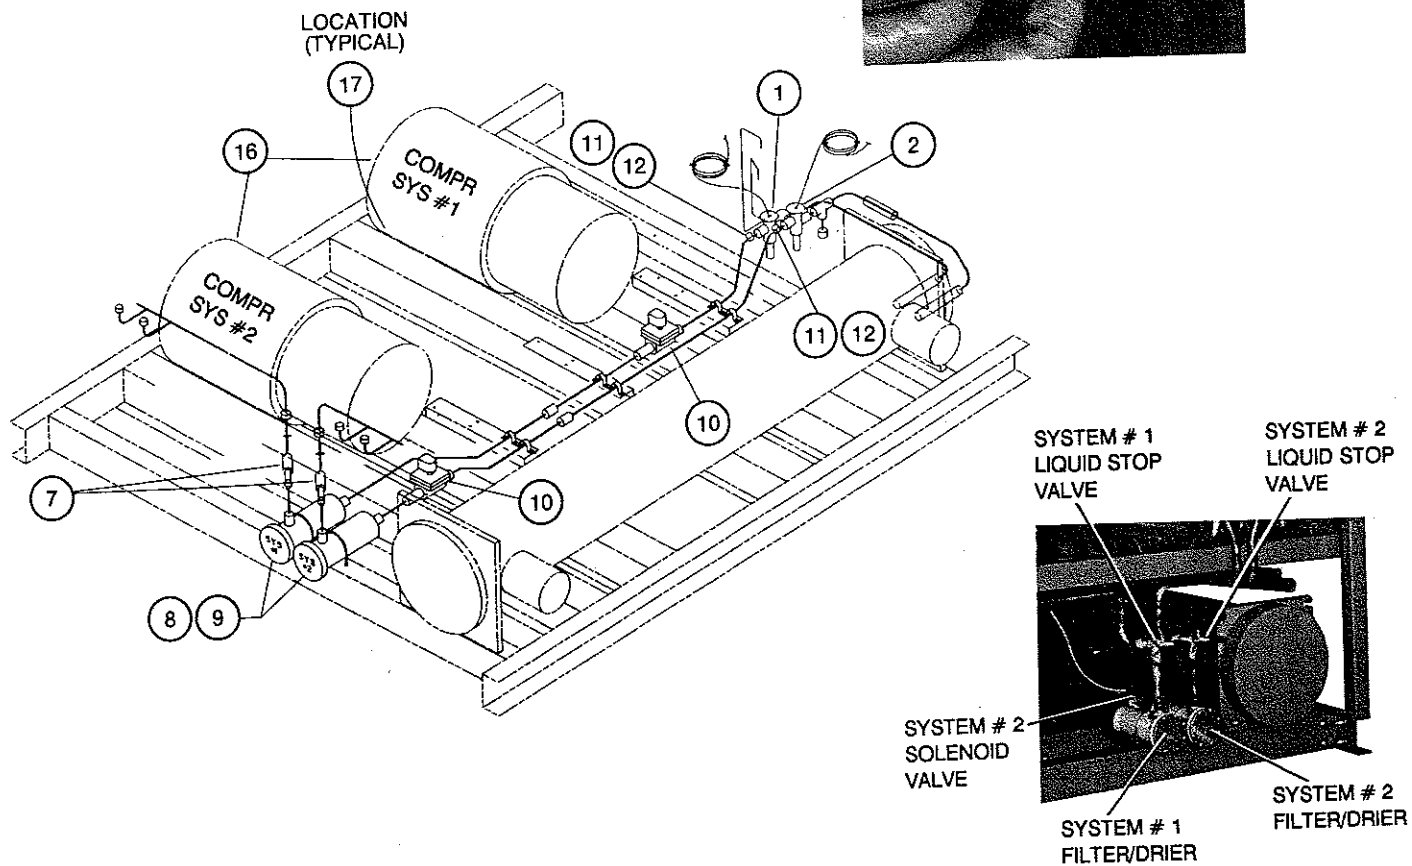
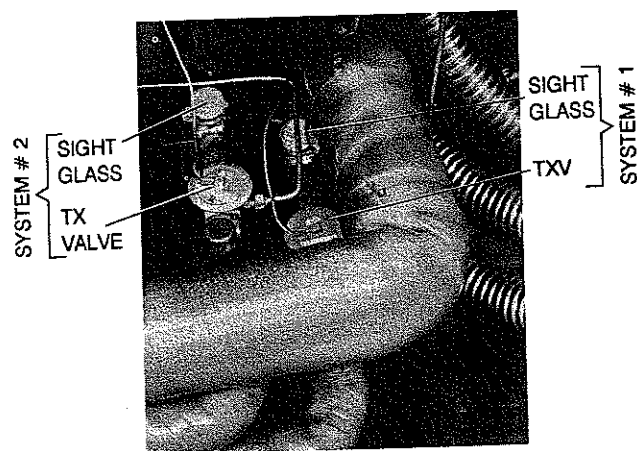
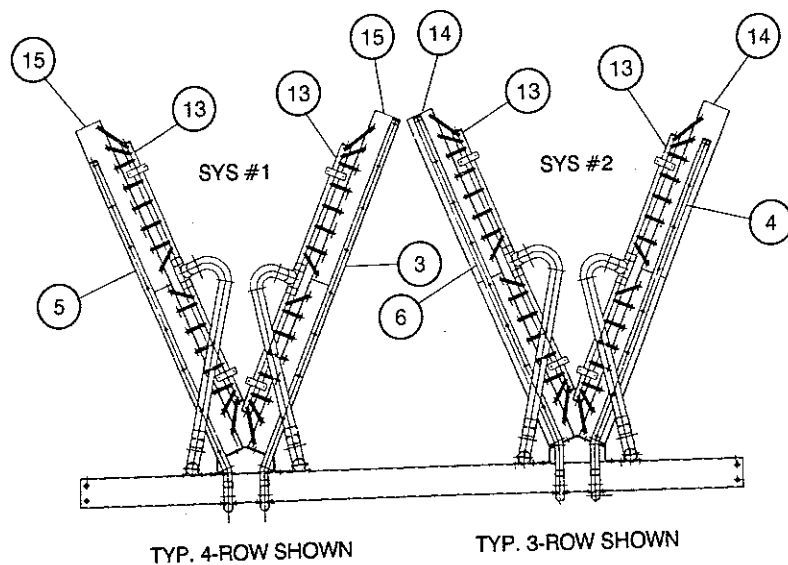



FIG. 2 — REFRIGERANT PIPING

REFRIGERANT SYSTEM COMPONENTS (See Figure 2)

ITEM NO.	QUANT PER UNIT	DESCRIPTION	SYSTEM NO.	60 HZ UNIT MODEL						
				YCAZ88MR6	YCAJ44MR6	YCAJ44ST6	YCAJ54NS6	YCAJ55ST8	YCAJ65ST8	YCAJ66XT8
				60 HZ PARTS						
①1a	1	Valve Thermal Expansion	1	025-23211	025-21955	025-21955	025-21955	025-21955	025-25944	025-25944
①2a	1		2	025-23211	025-21955	025-21955	025-21955	025-21955	025-21955	025-25944
				50 HZ UNIT MODEL						
				YCAJ44MR7	YCAJ55MR7	YCAJ55ST7	YCAJ85NS7	YCAJ66ST9	YCAJ76ST9	YCAJ77XT9
				50 HZ PARTS						
①1b	1	Valve Thermal Expansion	1	025-21955	025-21955	025-21955	025-21955	025-25944	025-25944	025-25944
①2b	1		2	025-21955	025-21955	025-21955	025-21955	025-25944	025-25944	025-25944
				60 HZ/50 HZ COMMON PARTS						
3a	1	Header, Liquid (R.H.) For Al fin coil—standard	1	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
4a	1		2	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
3b	1	For Cu fin coil—option	1	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
4b	1		2	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
3c	1	For Heresite coil—option	1	375-02558	375-02558	375-02561	375-02558	375-02561	375-02561	375-02561
4c	1		2	375-02558	375-02558	375-02561	375-02558	375-02561	375-02561	375-02561
5a	1	Header, Liquid (L.H.) For Al fin coil—standard	1	375-01910	375-01910	375-01912	375-01910	375-01912	375-01912	375-01912
6a	1		2	375-01910	375-01910	375-01912	375-01910	375-01912	375-01912	375-01912
5b	1	For Cu fin coil—option	1	375-01910	375-01910	375-01912	375-01910	375-01912	375-01912	375-01912
6b	1		2	375-01910	375-01910	375-01912	375-01910	375-01912	375-01912	375-01912
5c	1	For Heresite coil—option	1	375-02559	375-02559	375-02562	375-02559	375-02562	375-02562	375-02562
6c	1		2	375-02559	375-02559	375-02562	375-02559	375-02562	375-02562	375-02562
7	2	Valve, Liquid Stop	1,2	022-08739	022-08739	022-08739	022-08739	022-08739	022-08739	022-08739
8	2	Dehydrator, Body	1,2	026-21055	026-21055	026-21055	026-21055	026-21055	026-21055	026-21055
⑨9	4	Dehydrator, Core (Use with Item 8)	1,2	026-18328	026-18328	026-18328	026-18328	026-18328	026-18328	026-18328
10	2	Valve, Liquid Solenoid	1,2	025-28376	025-28376	025-28376	025-28376	025-28376	025-28376	025-28376
11	2	Moisture Indicator, Body	1,2	026-20147	026-20147	026-20147	026-20147	026-20147	026-20147	026-20147
12	2	Moisture Indicator, Cap Assy	1,2	026-16958	026-16958	026-16958	026-16958	026-16958	026-16958	026-16958
13a	4	Header Discharge For Al fin coil—standard	1,2	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929
13b	4	For Cu fin coil—option	1,2	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929
13c	4	For Heresite coil—option	1,2	375-02560	375-02560	375-02560	375-02560	375-02560	375-02560	375-02560
14a	4	Coil, Condenser Al fins—standard	1	026-31588	026-31588	026-31589	026-31589	026-31589	026-31589	026-31589
15a	4		2	026-31588	026-31588	026-31589	026-31588	026-31589	026-31589	026-31589
14b	4	Cu fins—option	1	026-31646	026-31646	026-31647	026-31647	026-31647	026-31647	026-31647
15b	4		2	026-31646	026-31646	026-31647	026-31646	026-31647	026-31647	026-31647
14c	4	Heresite—option	1	326-31642	326-31642	326-31641	326-31641	326-31641	326-31641	326-31641
15c	4		2	326-31642	326-31642	326-31641	326-31642	326-31641	326-31641	326-31641
16	2	Compressor	*	*	*	*	*	*	*	*
17	8	Pad, Isolator	1,2	066-92335	066-92335	066-92335	066-92335	066-92335	066-92335	066-92335

* See page 4

⑨ Recommended Stock Spare Part

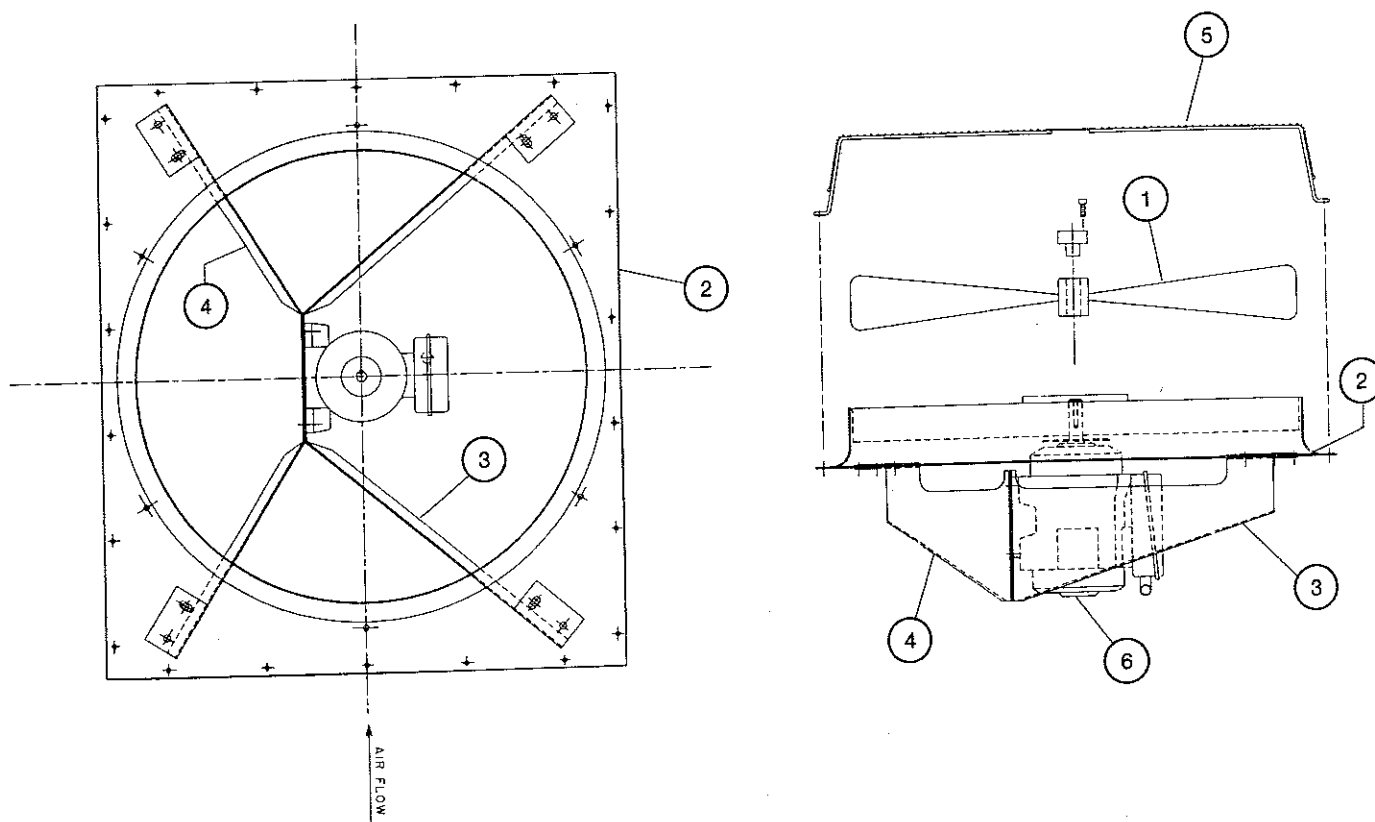


FAN COMPONENTS

ITEM NO.	DESCRIPTION	VOLTAGE CODE	60 HZ UNIT MODEL						
			YCAZ88MR6	YCAJ44MR6	YCAJ44ST6	YCAJ54NS6	YCAJ55ST8	YCAJ65ST8	YCAJ66XT8
①	Blade	-17	026-31604-000	026-31604-000	026-31604-000	026-31604-000	026-31603-000	026-31603-000	026-31603-000
		-28	026-31604-000	026-31604-000	026-31604-000	026-31604-000	026-31603-000	026-31603-000	026-31603-000
		-40	026-31604-000	026-31604-000	026-31604-000	026-31604-000	026-31603-000	026-31603-000	026-31603-000
		-46	026-31604-000	026-31604-000	026-31604-000	026-31604-000	026-31603-000	026-31603-000	026-31603-000
		-58	026-31604-000	026-31604-000	026-31604-000	026-31604-000	026-31603-000	026-31603-000	026-31603-000
			026-31604-000	026-31604-000	026-31604-000	026-31604-000	026-31603-000	026-31603-000	026-31603-000
2	Orifice	ALL	026-31601-000	026-31601-000	026-31601-000	026-31601-000	026-31601-000	026-31601-000	026-31601-000
3	Support, Motor	ALL	075-01901-000	075-01901-000	075-01901-000	075-01901-000	075-01899-000	075-01899-000	075-01899-000
4	Support, Motor	ALL	075-01902-000	075-01902-000	075-01902-000	075-01902-000	075-01898-000	075-01898-000	075-01898-000
5	Guard	ALL	026-31602-000	026-31602-000	026-31602-000	026-31602-000	026-31602-000	026-31602-000	026-31602-000
⑥	Motor	-17	024-25179-002	024-25179-002	024-25179-002	024-25179-002	024-24604-002	024-24604-002	024-24604-002
		-28	024-25179-002	024-25179-002	024-25179-002	024-25179-002	024-24604-002	024-24604-002	024-24604-002
		-40	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001	024-24604-001
		-46	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001	024-24604-001
		-58	024-25250-000	024-25250-000	024-25250-000	024-25250-000	024-24758-000	024-24758-000	024-24758-000
			024-25250-000	024-25250-000	024-25250-000	024-25250-000	024-24758-000	024-24758-000	024-24758-000

ITEM NO.	DESCRIPTION	VOLTAGE CODE	50 HZ UNIT MODEL						
			YCAJ44MR7	YCAJ55MR7	YCAJ55ST7	YCAJ65NS7	YCAJ66ST9	YCAJ76ST9	YCAJ77XT9
①	Blade	-50	026-31603-000	026-31603-000	026-31603-000	026-31603-000	026-31639-000	026-31639-000	026-31639-000
		-64	026-31603-000	026-31603-000	026-31603-000	026-31603-000	026-31639-000	026-31639-000	026-31639-000
2	Orifice	ALL	026-31601-000	026-31601-000	026-31601-000	026-31601-000	026-31601-000	026-31601-000	026-31601-000
3	Support, Motor	ALL	075-01901-000	075-01901-000	075-01901-000	075-01901-000	075-01899-000	075-01899-000	075-01899-000
4	Support, Motor	ALL	075-01902-000	075-01902-000	075-01902-000	075-01902-000	075-01898-000	075-01898-000	075-01898-000
5	Guard	ALL	026-31602-000	026-31602-000	026-31602-000	026-31602-000	026-31602-000	026-31602-000	026-31602-000
⑥	Motor	-50	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001	024-24604-001
		-64	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001	024-24604-001

© Recommend Stock Spare Parts

FIG. 3 – FAN COMPONENTS

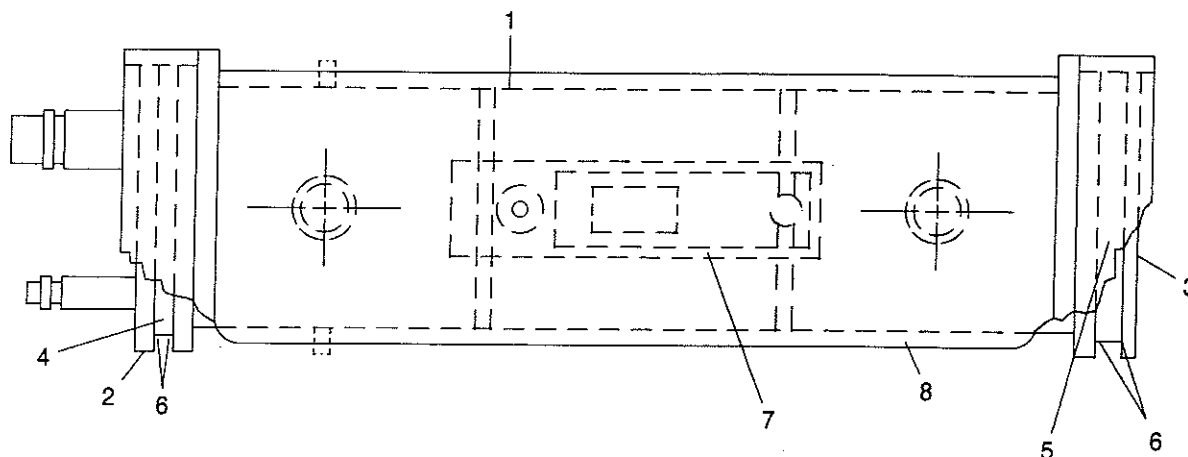

COOLER COMPONENTS (See Figure Above)

ITEM NO.	QUANT PER UNIT	DESCRIPTION	HZ	UNIT MODEL						
			60	YCAZ88MR6	YCAJ44MR6	YCAJ44ST6	YCAJ54NS6	YCAJ55ST8	YCAJ65ST8	YCAJ66XT8
			50	YCAJ44MR7	YCAJ55MR7	YCAJ55ST7	YCAJ65NS7	YCAJ66ST9	YCAJ76ST9	YCAJ77XT9
1	1	Cooler, Less Insulation and Heater (Includes Items 2–6)	375-02039	375-02039	366-93064	366-93504	366-93064	366-93064	375-02277	
2	1	Head, Connection End	366-93091	366-93091	366-93093	366-93091	366-93093	366-93093	375-02276	
3	1	Head, Back End	366-87740	366-87740	366-92896	366-87740	366-92896	366-92896	366-93552	
4	1	Baffle, Pass, Connection End	066-93085	066-93085	066-92884	066-93085	066-92884	066-92884	066-93545	
5	1	Baffle, Pass, Back End	066-93084	066-93084	066-92882	066-93084	066-92882	066-92882	066-93547	
⑥†	4	Gasket, Pass Baffle and Head	066-93083	066-93083	066-92899	066-93083	066-92899	066-92899	066-93554	
⑦	Varies with unit	Heater, Cooler Number of Heaters Per Unit	025-22692 1	025-22692 1	025-22690 1	025-22692 1	025-22690 1	025-22690 1	025-22691 2	
8	3	Insulation 3/4" x 49" x 65"	010-04198	010-04198	010-04198	010-04198	010-04198	010-04198	010-04198	

† When replacing gasket, Item 6, use:

⑥ Sealer, Gasket, 013-02827

⑥ Primer, 013-01753

⑥ Recommended Stock Spare Parts

COMPONENTS FOR UNIT OPTIONS

ITEM NO.	QTY. PER UNIT	DESCRIPTION	VOLT-AGE CODE	ALL MODELS	HZ 60 50	UNIT MODEL							
						YCAJ88MR6	YCAJ44MR6	YCAJ44ST6	YCAJ54NS6	YCAJ55ST8	YCAJ65ST8	YCAJ66XT8	
						YCAJ44MR7	YCAJ55MR7	YCAJ55ST7	YCAJ65NS7	YCAJ66ST9	YCAJ76ST9	YCAJ77XT9	
A	2	REMOTE COOLER Valve , Thermal Expansion (See NOTE 1)	-17 -28 -40 -46 -50 -58 -64			025-23211 025-23211 025-23211 025-23211 025-21955 025-23211 025-21955	025-21955 025-21955 025-21955 025-21955 025-21955 025-21955 025-21955	025-21955 025-21955 025-21955 025-21955 025-21955 025-21955 025-21955	025-21955 025-21955 025-21955 025-21955 025-25944 025-21955 025-25944	025-21955 025-21955 025-21955 025-21955 025-25944 025-21955 025-25944	025-21955 025-21955 025-21955 025-21955 025-25944 025-21955 025-25944	025-25944 025-25944 025-25944 025-25944 025-25944 025-25944 025-25944	
B	1	POWER DISCONNECT SWITCH (PDS) Switch, Disconnect	-17 -28 -40 -46 -50 -58 -64			024-25563 024-25563 024-25564 024-25564 024-25564 024-25564 024-25564	024-25563 024-25563 024-25564 024-25564 024-25564 024-25564 024-25564	024-25562 024-25562 024-25564 024-25564 024-25564 024-25564 024-25564	024-25562 024-25562 024-25564 024-25564 024-25564 024-25564 024-25564	024-25562 024-25562 024-25564 024-25564 024-25564 024-25564 024-25564	024-25562 024-25562 024-25564 024-25564 024-25564 024-25564 024-25563	024-25562 024-25562 024-25562 024-25562 024-25562 024-25564 024-25562	
C	1	LOW AMBIENT KIT Fan Contactor w/ Suppressor (See NOTE 2)	-17 -28 -40 -46 -50 -58 -64			024-25545 024-25545 024-25545 024-25545 024-25545 024-25545 024-25545	024-25545 024-25545 024-25545 024-25545 024-25545 024-25545 024-25545	024-25545 024-25545 024-25545 024-25545 024-25545 024-25545 024-25545	024-25545 024-25545 024-25545 024-25545 024-25545 024-25545 024-25545	024-25547 024-25547 024-25547 024-25545 024-25545 024-25545 024-25545	024-25547 024-25547 024-25545 024-25545 024-25545 024-25545 024-25545	024-25547 024-25547 024-25545 024-25545 024-25545 024-25545 024-25545	
D	1	CONTROL TRANSFORMER (1T) Transformer	-17 -28 -40 -46 -50 -58 -64	025-29627-001 025-29627-002 025-29627-003 025-29627-002 025-29627-003 025-29627-004 N/A									
E	2	FUSE (3FU, 4FU)	-17 -28 -40 -46 -50 -58 -64	025-27699-000 025-27509-015 025-28967-000 025-25584-000 025-28967-000 025-21145-000 N/A									
F ‡	1	PUMP CONTROL KIT / RELAY BOARD KIT Relay Control Board	ALL	031-01093-000									
G H	2 * 2 *	DISCHARGE PRESSURE READOUT KIT Transducer, Discharge Pressure Adapter (Use with Item G)	ALL ALL	025-29139-001 023-16272-000									
I J	2 2	LOADMINDER (HOT GAS BYPASS) Valve, Regulator, Hot Gas Suppressor (See NOTE 3)	ALL ALL	025-29944-000 031-01117-000									
K	1	FLOW CONTROL SWITCH Switch, Fan	ALL	024-15793-000									
L	1	REMOTE CONTROL CENTER Control, Micro Board	ALL	031-01196-000									
M	1	WALL-MOUNTED TRANSFORMER Transformer, Primary Voltage 115v 230v (See NOTE 4)	— —	025-29917-001 025-29917-002									
N O	1 1	MULTIPLE UNIT SEQUENCING KIT Sensor, Temperature Resistor, Fixed, 180 ohm	ALL ALL	025-28935-000 025-29900-000									
P	1	BAS INTERFACE Control, Remote Reset	ALL	031-00814-000									

NOTES:

Key: — - Not Applicable N/A - Not Available
 * One (1) Required Per Compressor
 † Relay Board Kit is a standard component of the following units
 and is not required as an option accessory with any options:
 — — YCAJ65ST7 YCAJ66ST8
 YCAJ65NS7 YCAJ66ST9 YCAJ76ST9 YCAJ77XT9

NOTES:

1. All other parts for this option are same as standard, including cooler, controls and unit components.
2. This option also requires Relay Board Kit, Item F, and Discharge Pressure Readout Kit, Items G, H.
3. Loadminder Option also requires Relay Board Kit, Item F.
4. Used with Remote Control Center if specified.



FIG. 4 -POWER DISCONNECT SWITCH



P.O. Box 1592, York, Pennsylvania USA 17405-1592
Copyright © by York International Corporation 1994
Form 152.60-RP2 (193)



Official Sponsor
of the 1992
U.S. Olympic Team

36USC380

Subject to change without notice. Printed in USA
ALL RIGHTS RESERVED
RPC 2M 1295 .90
CODES: ERR, SN4, RNP