


MODELS LCH130W & 150W LCH130A & 150A (STYLE A)

UNIT NOMENCLATURE

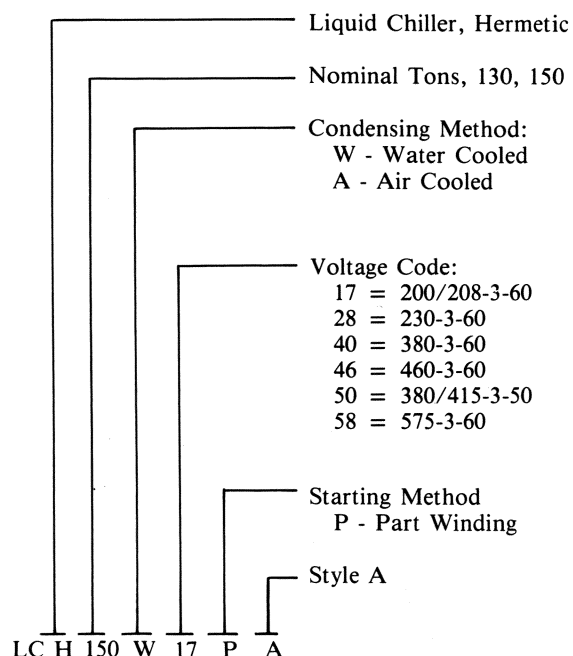

COMPRESSOR NOMENCLATURE

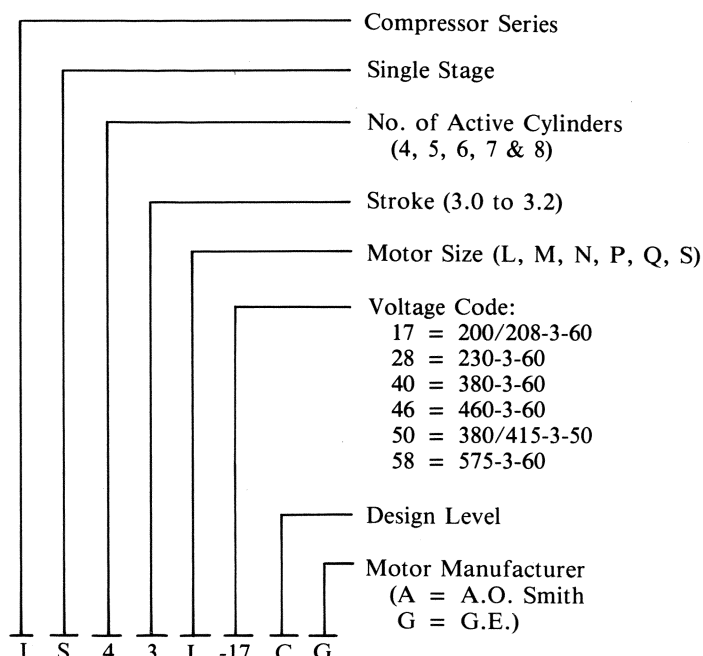


TABLE 1 — MODEL J HERMETIC COMPRESSORS USED ON MODEL LCH130 & 150 CHILLERS

UNIT		LCH130W		LCH130A		LCH150W		LCH150A	
		50HZ	60HZ	50HZ	60HZ	50HZ	60HZ	50HZ	60HZ
COMPRESSOR MODEL	SYS. #1	JS44C-N	JS43C-L	JS44C-P	JS43C-M	JS54C-P	JS53C-M	JS54C-Q	JS53C-N
	SYS. #2	JS54C-P	JS53C-M	JS54C-Q	JS53C-N	JS64C-Q	JS63C-N	JS64C-S	JS63C-P

For Replacement Compressors and/or Compressor Parts Refer to Form 180.23-RP1 (Supl. 1).

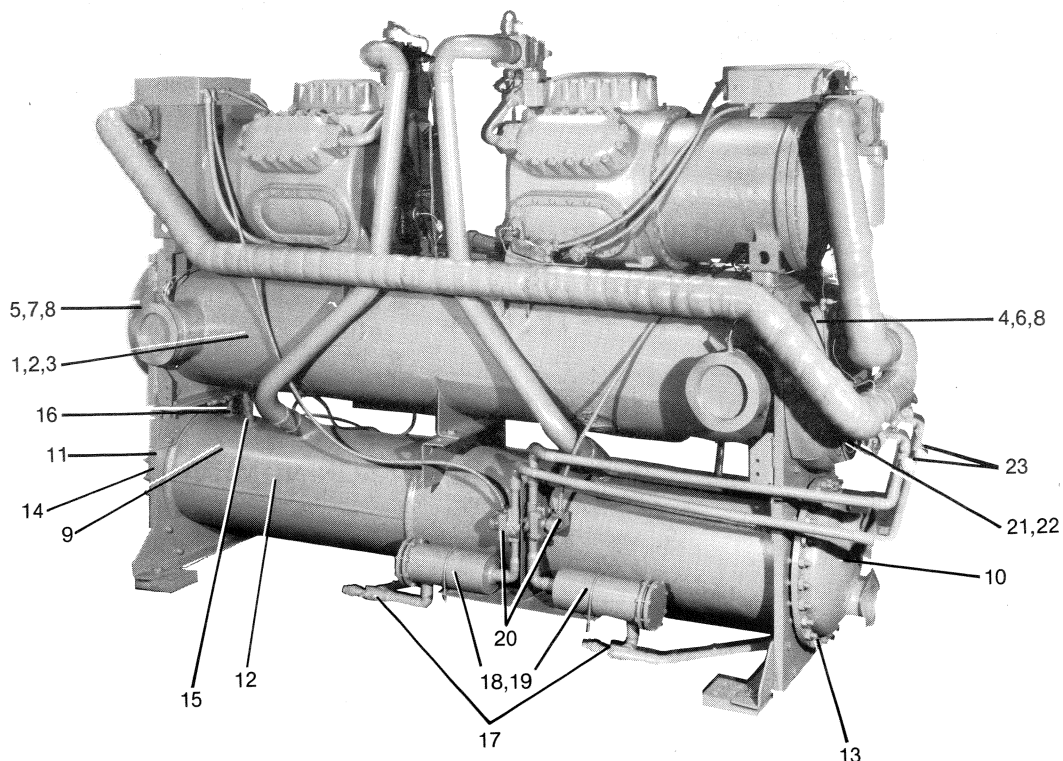


TABLE 2 — UNIT COMPONENTS

ITEM NO.	DESCRIPTION	LCH130W	LCH130A	LCH150W	LCH150A
1	COOLER, INSULATED	366-91262	366-91641	366-91263	366-91462
2	COOLER, NON-INSULATED	366-91256	366-91639	366-91257	366-91640
3	TUBE (528 REQ'D)	007-06743 -004	007-06743 -004	007-06743 -004	007-06743 -004
4	HEAD, CONNECTION END	366-91264	366-91264	366-91264	366-91264
5	HEAD, BACK END	366-87596	366-87596	366-87596	366-87596
6	BAFFLE, PASS, CONNECTION END	366-87621	366-87621	366-87621	366-87621
7	BAFFLE, PASS, BACK END	066-87634	066-87634	066-87634	066-87634
8	GASKET, PASS BAFFLE AND HEAD	066-87637	066-87637	066-87637	066-87637
9	CONDENSER (INCLUDES ITEMS 10-14)	366-91629	—	366-90770	—
10	HEAD, FRONT	366-90688	—	366-90688	—
11	HEAD, REAR	366-30753	—	366-30753	—
12	TUBE NO. REQ'D.	007-07424 176	— —	007-07424 200	— —
13	GASKET, HEAD, FRONT	067-77469	—	067-77469	—
14	GASKET, HEAD, REAR	067-77468	—	067-77468	—
15	VALVE, RELIEF	022-01887	—	022-01887	—
16	VALVE, PURGE	022-01582	—	022-01582	—
17	VALVE, LIQUID STOP	022-03043	022-03043	022-03043	022-03043
18	DEHYDRATOR	026-20155	026-20155	026-20155	026-20155
19	CARTRIDGE (2 REQ'D. PER DEHYDRATOR)	026-15304	026-15304	026-15304	026-15304
20	VALVE, SOLENOID	025-20997	025-20997	025-20997	025-20997
21	VALVE, TX, LESS BODY	025-16570	025-16570	025-25977	025-25977
22	VALVE, TX, BODY	025-16571	025-16571	025-16571	025-16571
23	MOISTURE INDICATOR BODY CAP ASS'Y.	026-16957 026-16958	026-16957 026-16958	026-16957 026-16958	026-16957 026-16958

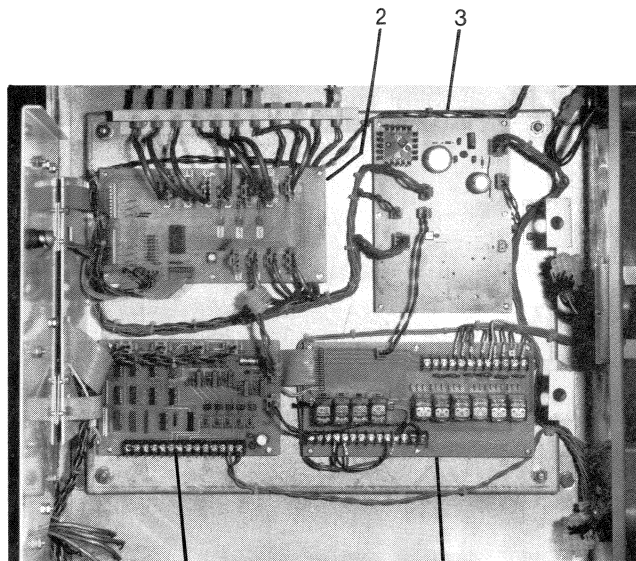
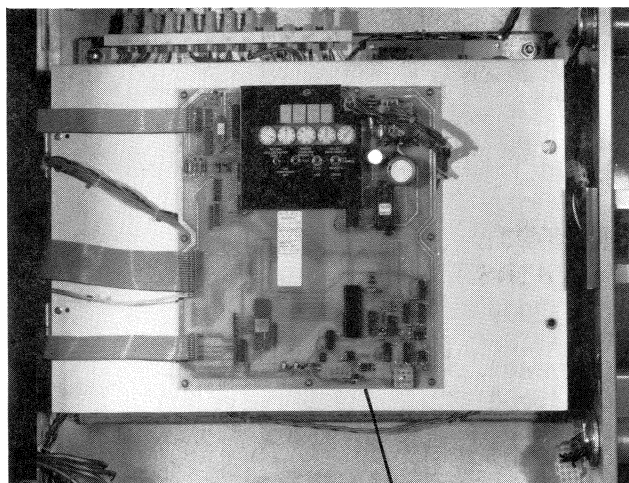


TABLE 3 — MICROPROCESSOR CONTROL PANEL COMPONENTS

ITEM NO.	DESCRIPTION	PART NO.
1	MICRO BOARD	031-00805
2	ANALOG BOARD	031-00772
3	POWER SUPPLY BOARD	031-00777
4	DIGITAL INPUT BOARD	031-00802
5	RELAY BOARD	031-00769

**FOR POWER PANEL COMPONENTS, CONTACT
THE YORK FACTORY OR OBTAIN LOCALLY.**

REPLACEMENT COMPRESSORS*

COMPRESSOR MODEL	PART NO.
JS43C	364-46915
JS53C	364-46916
JS63C	364-46917
JS44C	364-46929
JS54C	364-46930
JS64C	364-46931

* Compressors are evacuated, dehydrated, and charged with nitrogen before being sealed for shipment. Compressor part numbers listed do NOT include motor, motor housing, discharge manifold, crankcase heater, capacity control devices or oil charge. Crankcase is closed with blank handhole covers on both sides. For parts not included with replacement compressors, use parts from original compressor (if usable) or order new parts listed separately in Form 180.23-RP1.

ACCESSORIES

FLOW SWITCH 024-15793

CONTROL TRANSFORMERS

200/208-3-60 (-17) — 025-12809
230-3-60 (-28) — 025-15368
380-3-60 (-40) — 025-16802
460-3-60 (-46) — 025-15368
380/415-3-50 (-50) — 025-16802
575-3-60 (-58) — 025-16801

ISOLATORS

W MODELS 029-19823 (4 REQ'D)
A MODELS 029-19824 (4 REQ'D)

