



PACKAGED LIQUID CHILLERS
AIR-COOLED - RECIPROCATING HERMETIC

RENEWAL PARTS

Supersedes: Nothing

FORM 150.60-RP4 (1295)


60 HZ MODELS

**YEAZ88DR6, YEAJ44DR6, YEAJ44HT6, YEAJ54ES6,
YEAJ55HT8, YEAJ65HT8, YEAJ66MT8**

50 HZ MODELS

**YEAJ44DR7, YEAJ55DR7, YEAJ55HT7, YEAJ65ES7,
YEAJ66HT9, YEAJ76HT9, YEAJ77MT9**

STYLE A

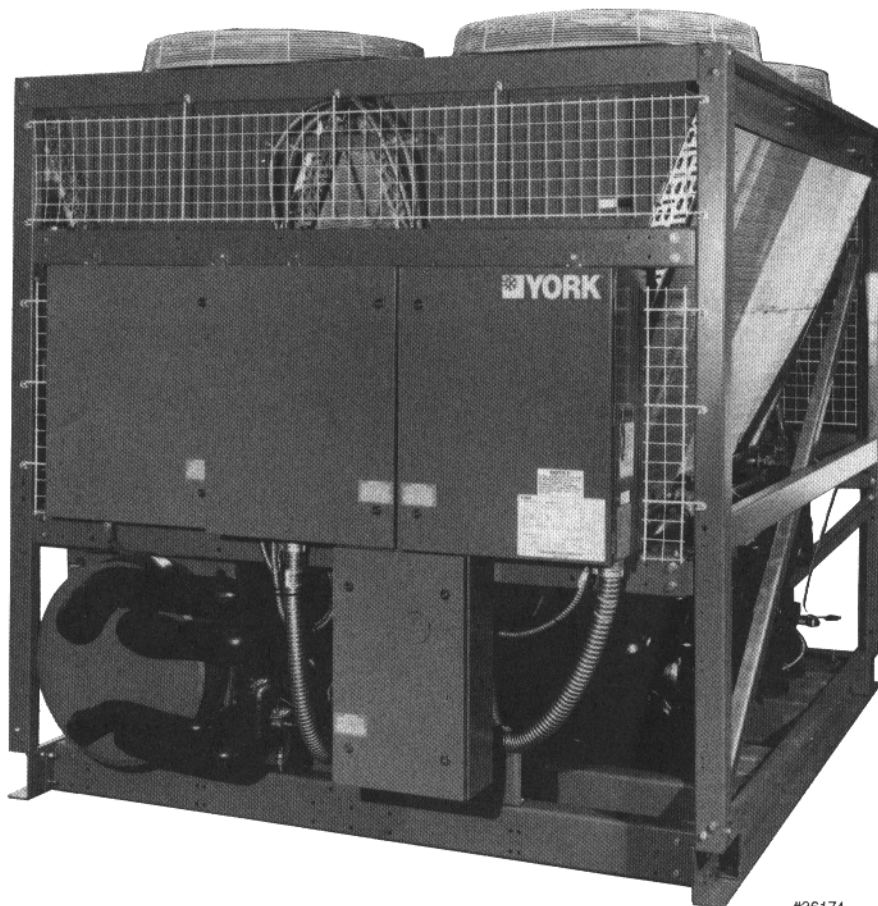

#26174

WARNING

HIGH VOLTAGE
is used in the operation of this equipment
DEATH OR SERIOUS INJURY
may result if personnel fail to observe precautions.

Work on electronic equipment should not be undertaken unless the individual(s) has (have) been trained in the proper maintenance of the equipment and is (are) familiar with its potential hazards.


Shut off power supply to equipment before beginning work and follow lockout procedures. When working inside equipment with power off, take special care to discharge every capacitor likely to hold dangerous potential.

Be careful not to contact high voltage connections when installing or operating this equipment.


LOW VOLTAGE
DO NOT be misled by the term "low voltage".
Voltages as low as 50 volts may cause death.

NOMENCLATURE


The model number denotes the following characteristics of the unit:

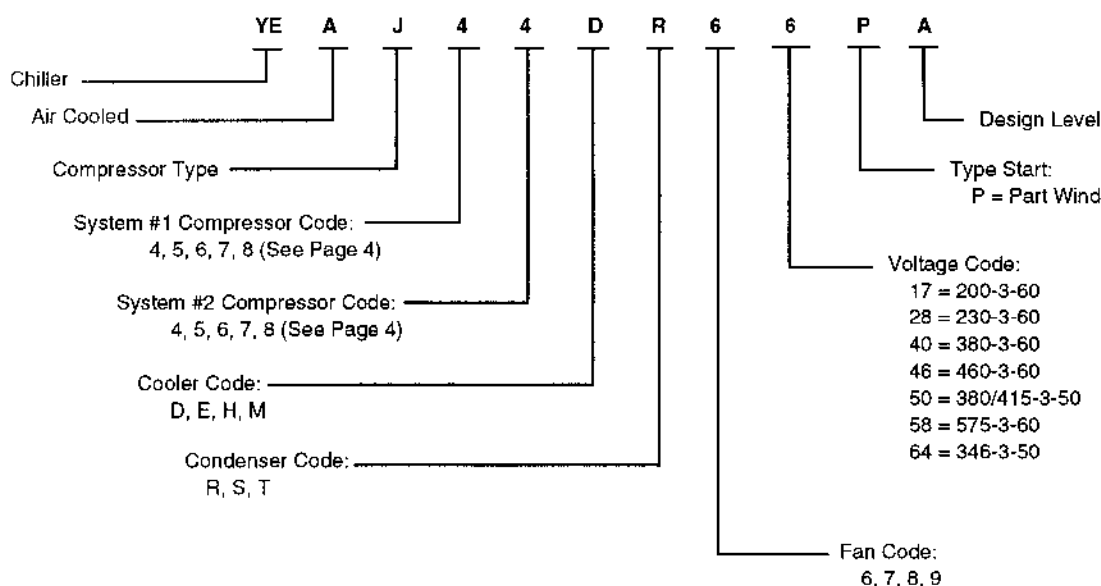

MAJOR UNIT COMPONENTS

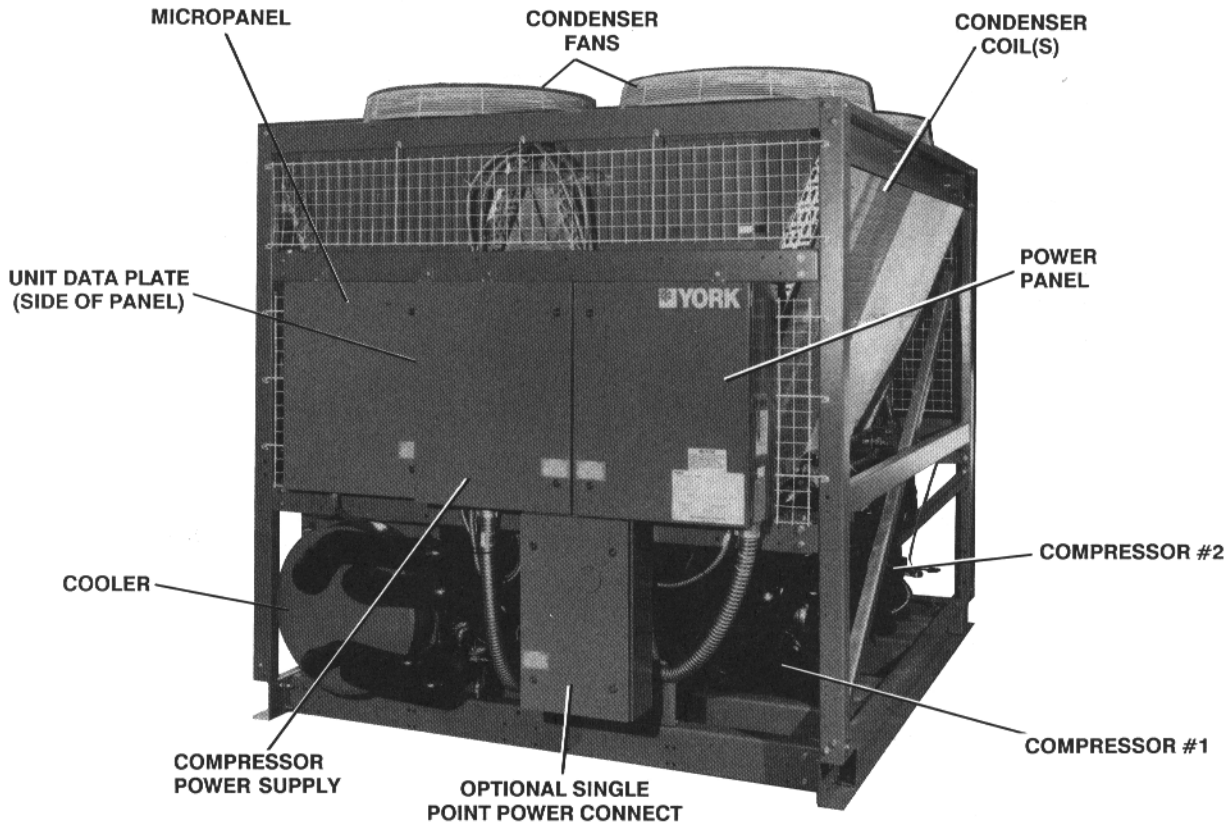


#26174

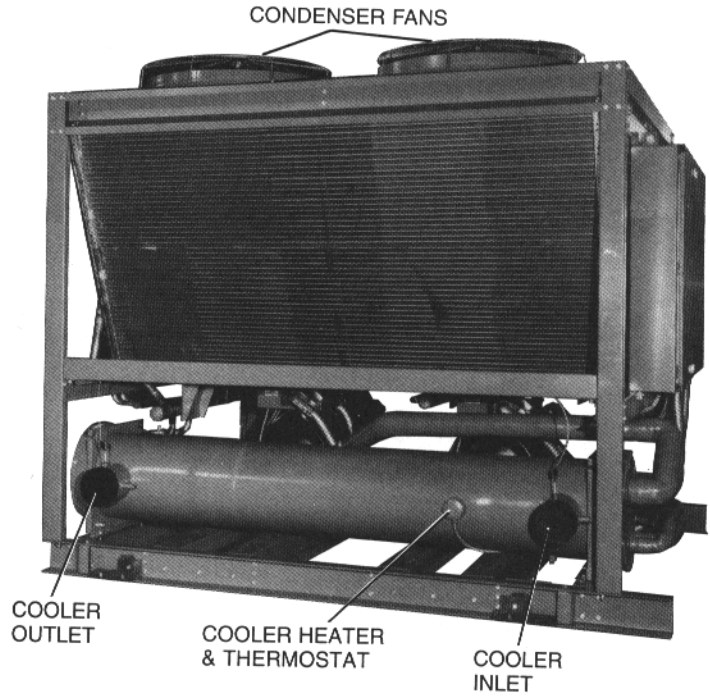


#25210

COMPRESSOR NOMENCLATURE Z MODELS

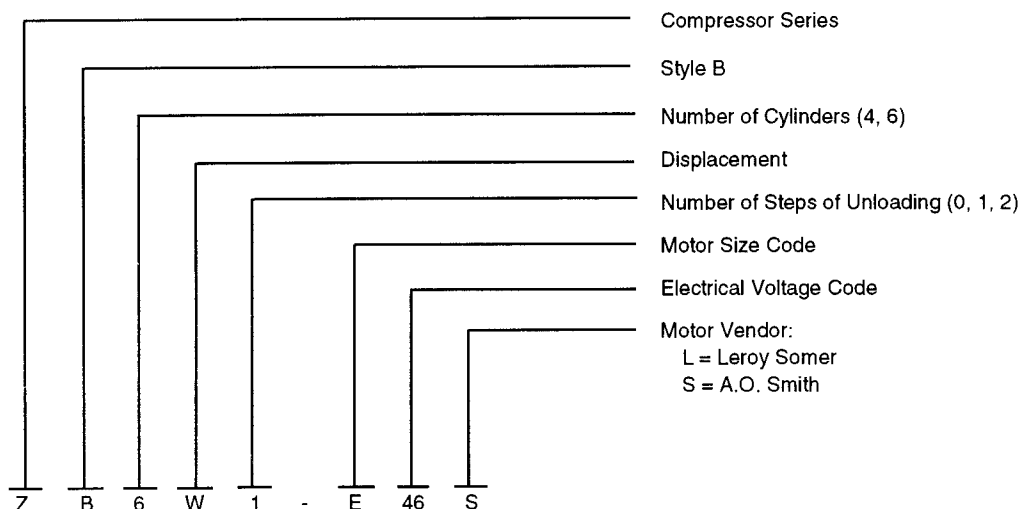

J MODELS

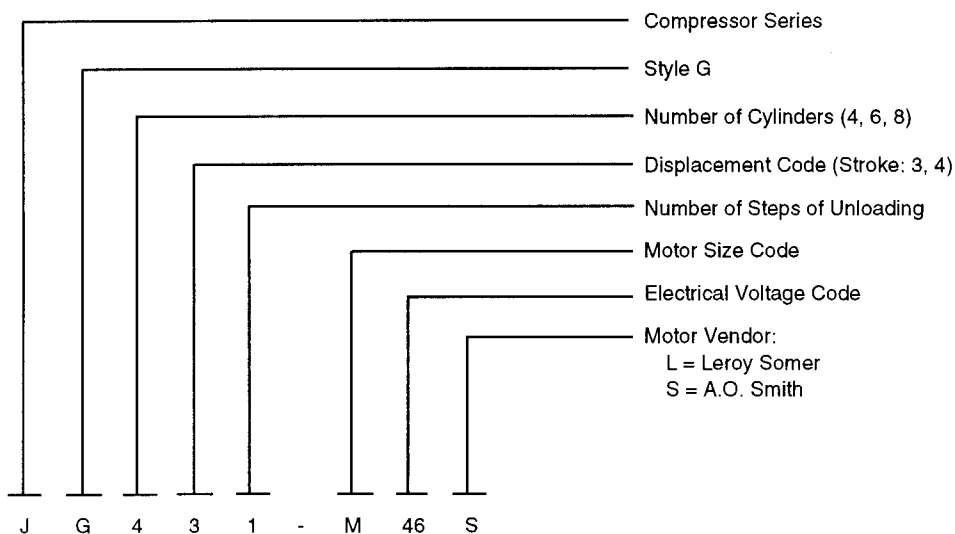

COMPRESSOR MODEL NUMBERS

60 HZ	UNIT MODEL	YEAZ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
COMPRESSOR MODEL	SYSTEM NO. 1	ZB6W1-E	JG431-M	JG431-M	JG441-P	JG441-P	JG632-Q	JG632-Q
	SYSTEM NO. 2	ZB6W1-E	JG431-M	JG431-M	JG431-M	JG441-P	JG441-P	JG632-Q
50 HZ	UNIT MODEL	YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ65ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
COMPRESSOR MODEL	SYSTEM NO. 1	JG431-M	JG441-P	JG441-P	JG632-Q	JG632-Q	JG642-S	JG642-S
	SYSTEM NO. 2	JG431-M	JG441-P	JG441-P	JG441-P	JG632-Q	JG632-Q	JG642-S

For replacement compressors and / or parts, refer to the following, as appropriate:

"Z" Compressors - Form 180.45-RP2

"J" Compressors - Form 180.23-RP4

Remanufactured compressors are available from the Wheeling, Illinois manufacturing facility.

Contact the local YORK International Office.

^sCOMPRESSOR MOTOR CONTACTORS

VOLTAGE CODE/ TYPE START	SYSTEM	60 HZ UNIT MODEL						
		YEAZ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
-17P	1	024-25549	024-25549	024-25549	024-25548	024-25548	024-25548	024-25548
	2	024-25549	024-25549	024-25549	024-25548	024-25548	024-25548	024-25548
-28P	1	024-25549	024-25549	024-25549	024-25549	024-25549	024-25548	024-25548
	2	024-25549	024-25549	024-25549	024-25549	024-25549	024-25548	024-25548
-40P	1	024-25550	024-25550	024-25550	024-25550	024-25550	024-25549	024-25549
	2	024-25550	024-25550	024-25550	024-25550	024-25550	024-25549	024-25549
-46P	1	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550
	2	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550
-58P	1	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550
	2	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550	024-25550

VOLTAGE CODE/ TYPE START	SYSTEM	50 HZ UNIT MODEL						
		YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ65ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
-50P	1	024-25550	024-25550	024-25550	024-25550	024-25550	024-25549	024-25549
	2	024-25550	024-25550	024-25550	024-25550	024-25550	024-25549	024-25549
-64P	1	024-25550	024-25550	024-25550	024-25550	024-25550	024-25549	024-25549
	2	024-25550	024-25550	024-25550	024-25550	024-25550	024-25549	024-25549


NOTES:

^s = Recommended Stock Spare Parts


P = Part Winding

Part Winding (Start) compressors require two (2) contactors per compressor (system).

Contactors include suppressors.

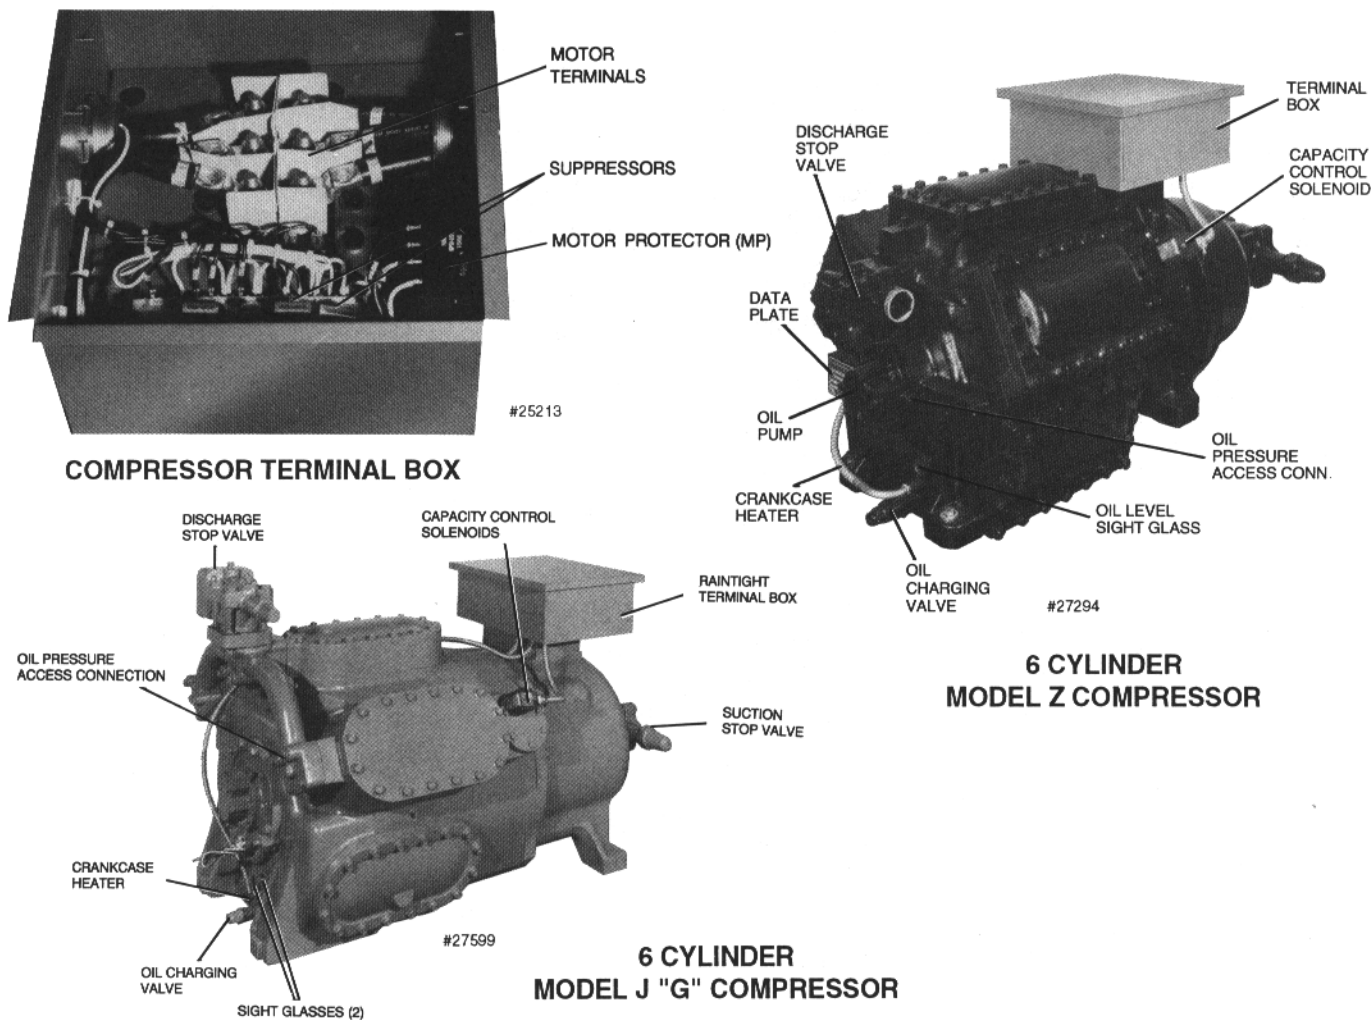COMPRESSOR COMPONENTS

CONTROL PANEL

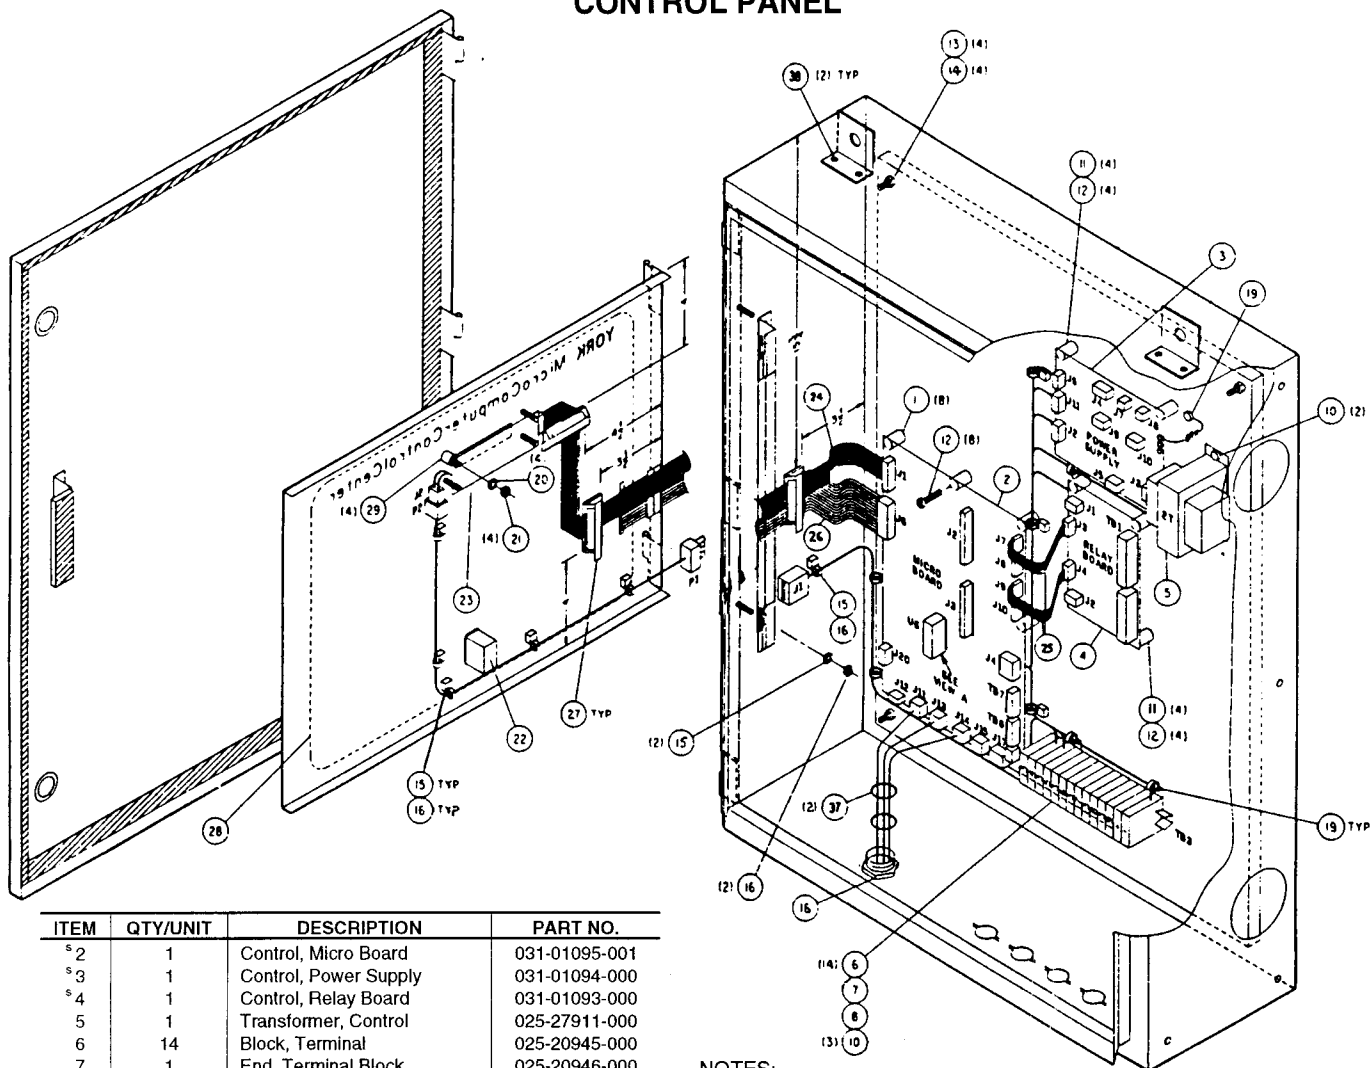

ITEM	QTY/UNIT	DESCRIPTION	PART NO.
^s 2	1	Control, Micro Board	031-01095-001
^s 3	1	Control, Power Supply	031-01094-000
^s 4	1	Control, Relay Board	031-01093-000
5	1	Transformer, Control	025-27911-000
6	14	Block, Terminal	025-20945-000
7	1	End, Terminal Block	025-20946-000
8	1	Strip, Marker (14 Pole)	025-29159-000
9	2	Catch, Magnetic	029-20878-000
10	5	Scr., Tap TH. #8 x 3/8 Lg	021-13783-000
11	16	Nut, Expansion	021-14661-000
12	16	Scr., Tap Pan Hd. #8 x 1-1/4	021-14667-000
13	4	Lock Washer, TH. Int. 3/8	021-01155-000
14	4	Nut, Hex 3/8 -16 UNC-2B	021-00467-000
15	10	Lock Washer, TH. Int. #10	021-01137-000
16	10	Nut, Hex #10-24	021-08282-000
17	3	Hsg., Connr. Plug, Mini-Univ.	025-28383-000
18	1	Connr., Cable, Str. 3/4	025-09389-000
19	14	Scr., Tap, Pan Hd. #10 x 1/2	021-13789-000
20	4	Lock Washer, Hel. Spg. #4	021-17576-000
21	4	Nut, Hex #4-40	021-10056-000
22	1	Switch, Unit ON/OFF	024-25517-000
23	1	Display	031-01110-000
24	1	Ribbon Cable	031-01109-211
25	2	Ribbon Cable	031-01109-212
26	1	Ribbon Cable	031-01109-213
27	3	Clamp, Ribbon Wire	025-25156-000
28	1	Switch, Keypad	024-25504-000
29	4	Spacer, Nylon 7/16 Lg.	021-17575-000
30	1	Harness, Sensor - Suct. #1 ¹	371-01226-231
31	1	Harness, Sensor - Oil #1 ¹	371-01226-233
32	1	Harness, Sensor - Suct. #2 ¹	371-01226-232
33	1	Harness, Sensor - Oil #2 ¹	371-01226-234
34	1	Harness, Sensor - LWT ¹	371-01226-241
35	1	Harness, Sensor - EWT ¹	371-01226-242
36	1	Harness, Sensor - OAT ¹	371-01226-243
37	3	Strap, Cable	025-18167-000
38	4	Nut, KEPS 1/4 - 20	021-17269-000
39	1	Label, Caution	035-03908-000
^s 40	1	EPROM	031-01096-001
41	1	Harness, Hinged Panel	571-01226-212
42	3	Suppressor for Options ²	031-00808-000

NOTES:


^s = Recommended Stock Spare Part

1. Not Shown. Sensor Harness without Sensor.


2. Not Shown, shipped loose for field use to place across the coil of any relay or contactor connected to the Control Panel or its 115VAC Power Supply including the application of:

- Alarm Circuit Relays
- Pump Starter (Contactor or Pilot Relay)
- Flow Switch Inputs
- BAS Inputs

Not Shown.
Sensor Harness
W/O Sensor

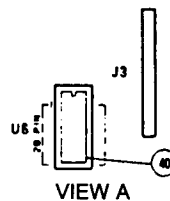

VIEW A

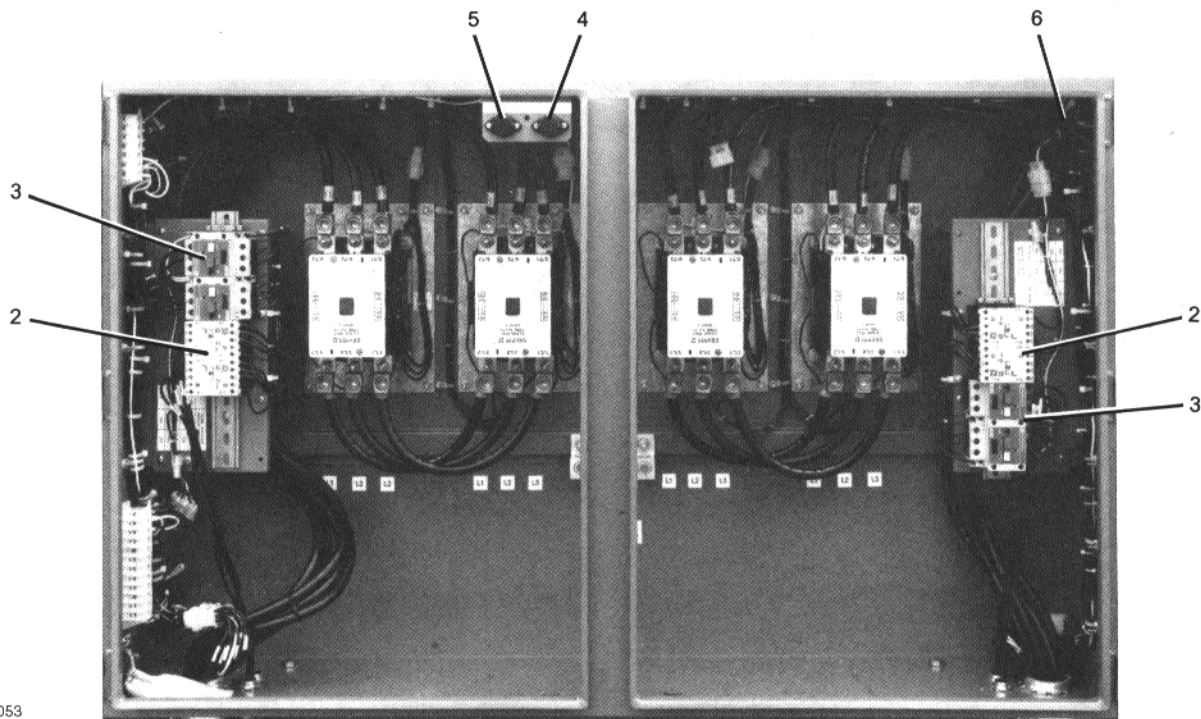

#26053

POWER PANEL

POWER PANEL CONTROL COMPONENTS



ITEM NO.	QTY PER UNIT	DESCRIPTION		VOLT. CODE	PART NO. ALL MODELS
^s 1	See page 5	CONTACTORS	Contactors	ALL	See page 5
^s 2			Contactors	ALL	See Table Below
^s 3	2	OVERLOADS	Overload, Fan	ALL	See Table Below
^s 4	1	FUSES	Electronic Power Supply Circuit (5 amp), 2FU	ALL	025-27922-000
^s 5	1		Control Circuit (20 amp), 1FU	ALL	025-28967-000
6	2	TRANSFORMERS	Transformer, Current	ALL	025-27408-000

^s FAN MOTOR CONTACTORS AND OVERLOADS


VOLT CODE	CONTACT./ O/L	60 HZ UNIT MODEL						
		YEAZ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
-17	CONTACT.	024-25521	024-25521	024-25521	024-25521	024-25526	024-25526	024-25526
	O/L	024-25518	024-25518	024-25518	024-25518	024-25544	024-25544	024-25544
-28	CONTACT.	024-25521	024-25521	024-25521	024-25521	024-25526	024-25526	024-25526
	O/L	024-25518	024-25518	024-25518	024-25518	024-25518	024-25518	024-25518
-40	CONTACT.	024-25522	024-25522	024-25522	024-25522	024-25521	024-25521	024-25521
	O/L	024-25519	024-25519	024-25519	024-25519	024-25518	024-25518	024-25518
-46	CONTACT.	024-25522	024-25522	024-25522	024-25522	024-25521	024-25521	024-25521
	O/L	024-25519	024-25519	024-25519	024-25519	024-25518	024-25518	024-25518
-58	CONTACT.	024-25522	024-25522	024-25522	024-25522	024-25521	024-25521	024-25521
	O/L	024-25519	024-25519	024-25519	024-25519	024-25518	024-25518	024-25518

VOLT CODE	CONTACT./ O/L	50 HZ UNIT MODEL						
		YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ65ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
-50	CONTACT.	024-25522	024-25522	024-25522	024-25522	024-25521	024-25521	024-25521
	O/L	024-25519	024-25519	024-25519	024-25519	024-25518	024-25518	024-25518
-64	CONTACT.	024-25522	024-25522	024-25522	024-25522	024-25521	024-25521	024-25521
	O/L	024-25519	024-25519	024-25519	024-25519	024-25518	024-25518	024-25518


NOTES: ^s = Recommended Stock Spare Parts
Contactors include suppressors.

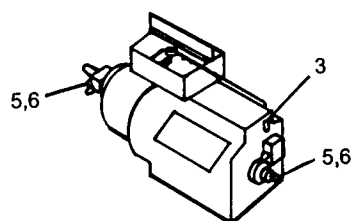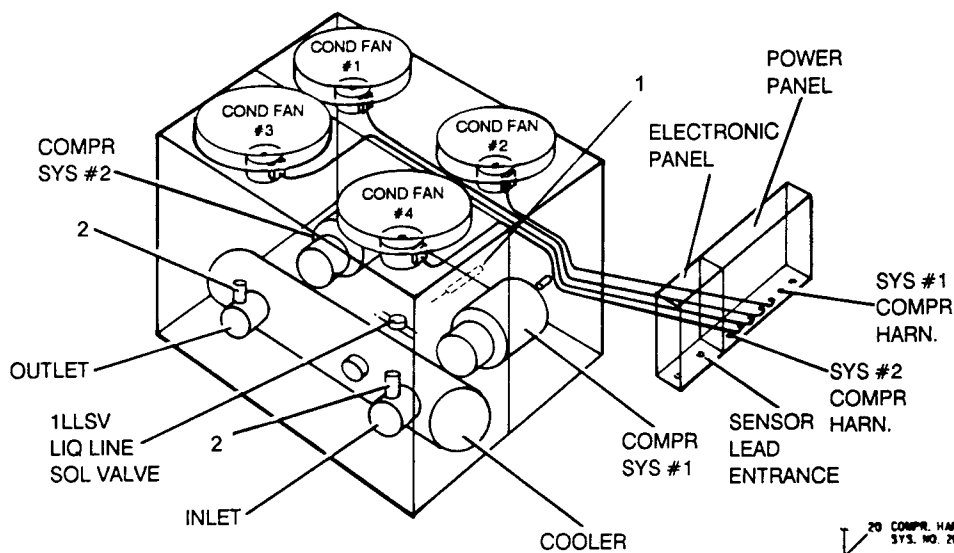

6 CYLINDER "Z" COMPRESSOR

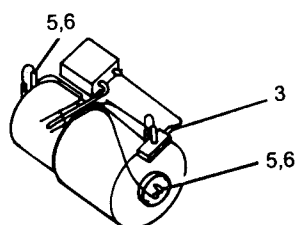

4 & 6 CYLINDER "J" COMPRESSOR

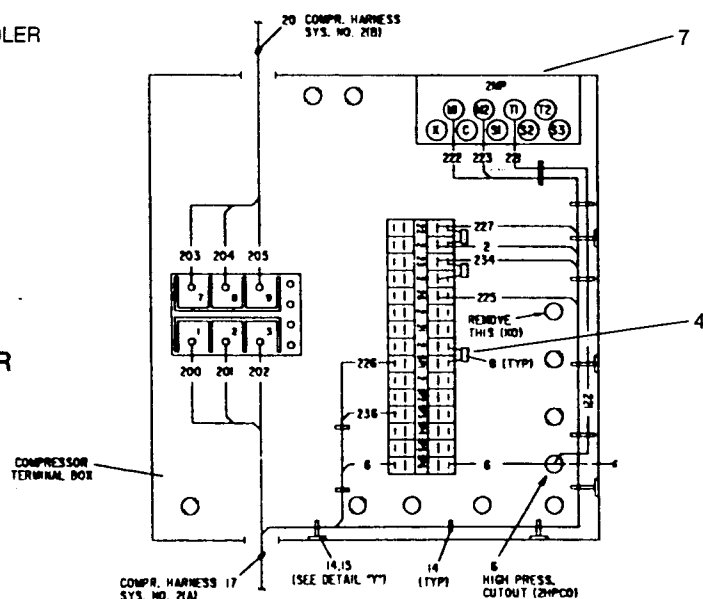

(Typical)

"J" COMPRESSOR SYSTEM #1

(Std. Step Unloading & Optional Hot Gas Bypass)

SYSTEM CONTROL COMPONENTS


ITEM NO.	QTY PER UNIT	DESCRIPTION	VOLT. CODE	PART NO. ALL MODELS
^s 1	1	Sensor, Outside Air (OAT)	ALL	025-28663-001
^s 2	2	Sensor, Water Temperature (LWT,RWT)	ALL	025-29964-000
^s 3	2	High Pressure Cutout	ALL	025-28985-002
^s 4	See Table Below	Suppressor, Compressor Unloading Solenoids and Liquid Line Solenoids	ALL	031-01117-000
^s 5	4	Transducer (Oil & Suction Pressure)	ALL	025-29583-000
6	4	Brass Adaptor (Use with Item 5)	ALL	023-16272-000
7	2	Module, Motor Protector	ALL	025-27522-000
8	1	Heat Conductive Compound (Use with Item 2)	ALL	013-00898-000

SUPPRESSOR QUANTITY


60 HZ UNIT	YEAZ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
QUANTITY	4	4	4	4	4	5	6

50 HZ UNIT	YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ65ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
QUANTITY	4	4	4	5	6	6	6

^s Recommended Stock Spare Part

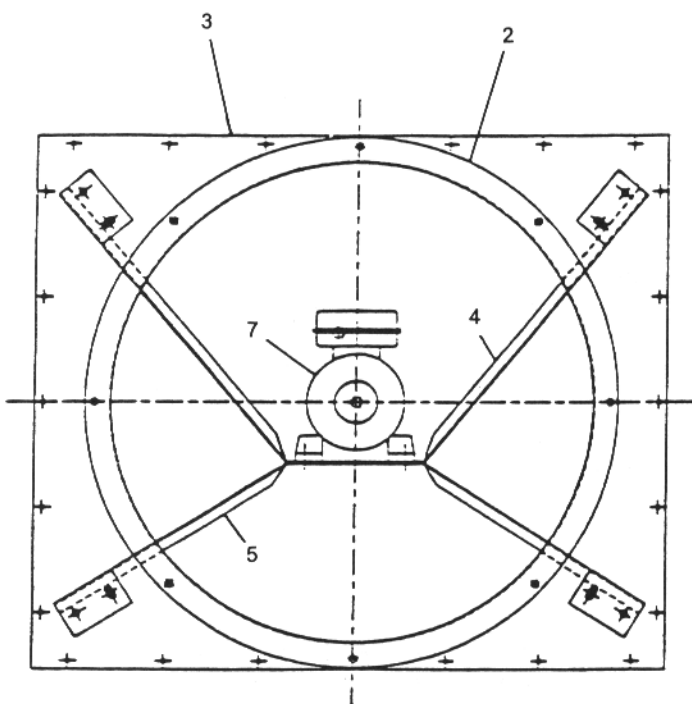

TOP VIEW
(Less Impeller and Guards)


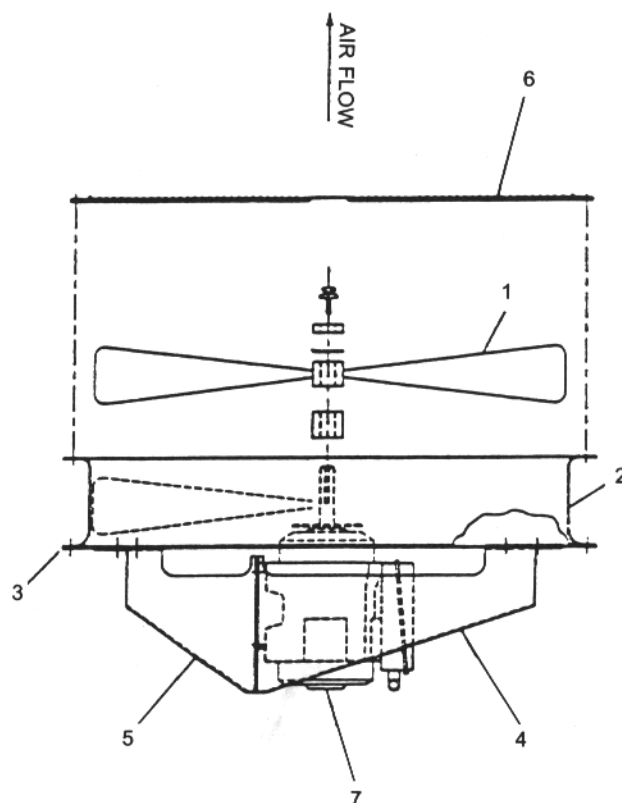


FAN COMPONENTS

ITEM NO.	DESCRIPTION	60 HZ UNITS						
		YEAZ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
^s 1	Blade	026-33615	026-33615	026-33615	026-33615	026-33664	026-33664	026-33664
2	Orifice	326-32804	326-32804	326-32804	326-32804	326-32804	326-32804	326-32804
3	Orifice Plate	375-10849	375-10849	375-10849	375-10849	375-10849	375-10849	375-10849
4	Support, Motor	075-01901	075-01901	075-01901	075-01901	075-01899	075-01899	075-01899
5	Support, Motor	075-01902	075-01902	075-01902	075-01902	075-01898	075-01898	075-01898
6	Guard	026-32807	026-32807	026-32807	026-32807	026-32807	026-32807	026-32807
^s 7	Motor:							
	VOLT. CODE	-17	024-25179-002	024-25179-002	024-25179-002	024-25179-002	024-24604-002	024-24604-002
		-28	024-25179-002	024-25179-002	024-25179-002	024-25179-002	024-24604-002	024-24604-002
		-40	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001
		-46	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001
		-58	024-25250-000	024-25250-000	024-25250-000	024-25250-000	024-24758-000	024-24758-000
ITEM NO.	DESCRIPTION	50 HZ UNITS						
		YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ67ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
^s 1	Blade	026-33615	026-33615	026-33615	026-33615	026-33672	026-33672	026-33672
2	Orifice	326-32804	326-32804	326-32804	326-32804	326-32804	326-32804	326-32804
3	Orifice Plate	375-10849	375-10849	375-10849	375-10849	375-10849	375-10849	375-10849
4	Support, Motor	075-01901	075-01901	075-01901	075-01901	075-01899	075-01899	075-01899
5	Support, Motor	075-01902	075-01902	075-01902	075-01902	075-01898	075-01898	075-01898
6	Guard	026-32807	026-32807	026-32807	026-32807	026-32807	026-32807	026-32807
^s 7	Motor:							
	VOLT. CODE	-50	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001
		-64	024-25179-001	024-25179-001	024-25179-001	024-25179-001	024-24604-001	024-24604-001

^s Recommended Stock Spare Part

MODEL	SYSTEM	COILS
YEAZ88DR6	1	3 ROW
	2	3 ROW
YEAJ44DR7	1	3 ROW
	2	3 ROW
YEAJ44DR6	1	3 ROW
	2	3 ROW
YEAJ55DR7	1	3 ROW
	2	3 ROW
YEAJ44HT6	1	4 ROW
	2	4 ROW
YEAJ55HT7	1	4 ROW
	2	4 ROW
YEAJ54ES6	1	4 ROW
	2	3 ROW
YEAJ65ES7	1	4 ROW
	2	3 ROW
YEAJ55HT8	1	4 ROW
	2	4 ROW
YEAJ66HT9	1	4 ROW
	2	4 ROW
YEAJ65HT8	1	4 ROW
	2	4 ROW
YEAJ76HT9	1	4 ROW
	2	4 ROW
YEAJ66MT8	1	4 ROW
	2	4 ROW
YEAJ77MT9	1	4 ROW
	2	4 ROW

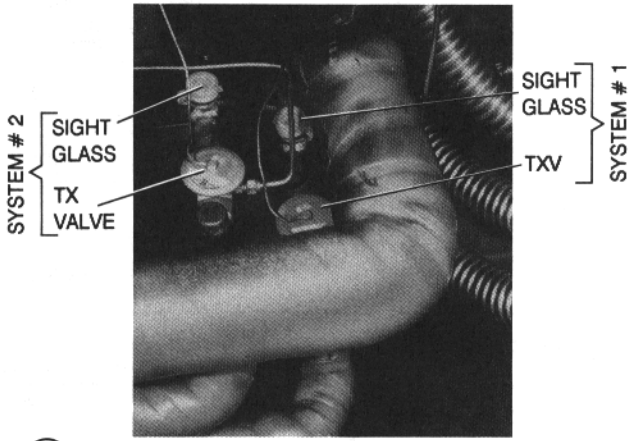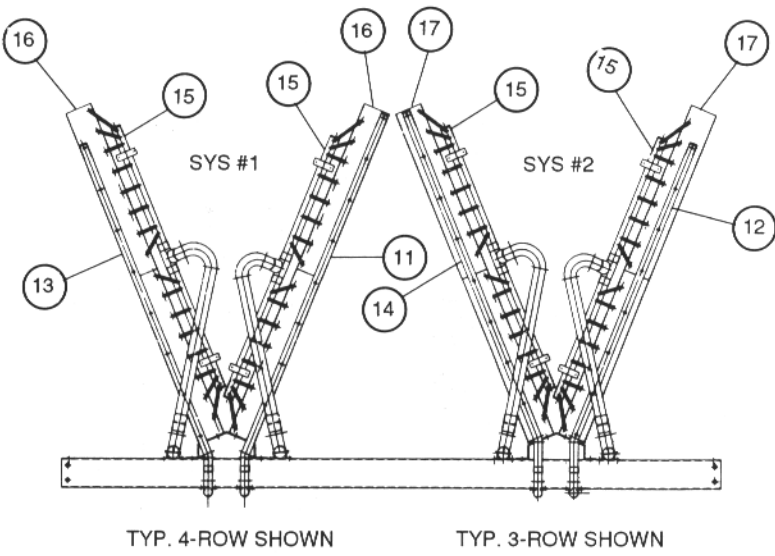

#25216

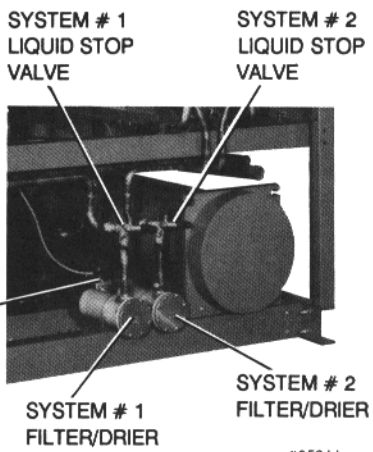
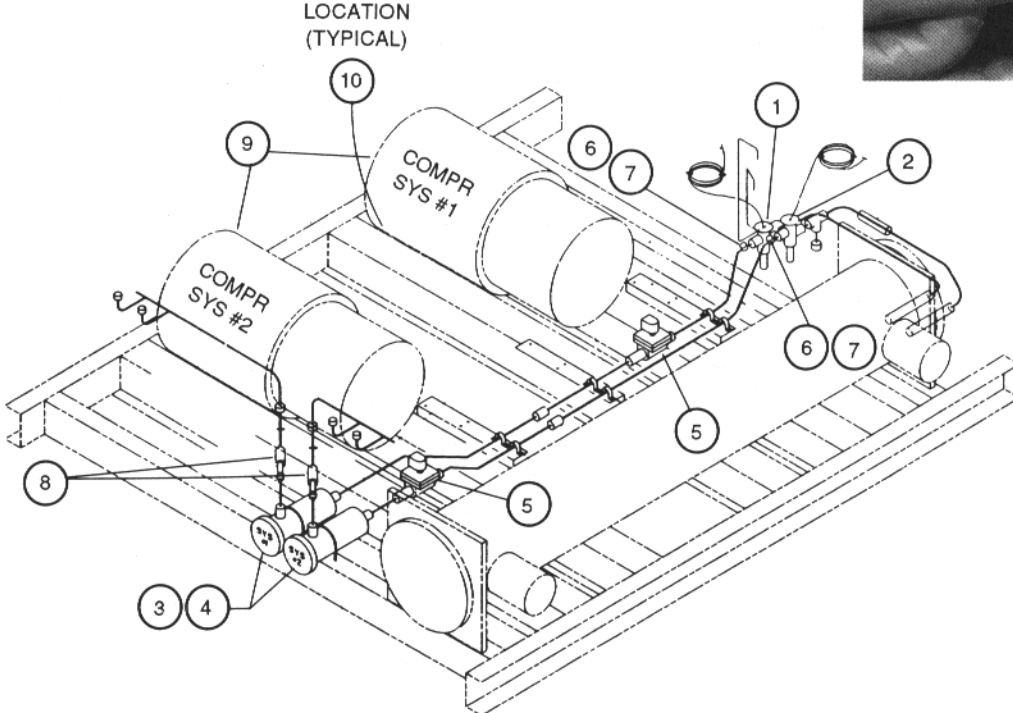


FIG. 1 - REFRIGERANT SYSTEM


#25211

REFRIGERANT SYSTEM COMPONENTS

(See Fig. 1)

ITEM NO.	QTY PER UNIT	DESCRIPTION	SYS. NO.	60 HZ UNIT MODEL						
				YEAJ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
				60 HZ PARTS						
^s 1a	1	Valve, Thermal Expansion	1	025-23211	025-21955	025-21955	025-21955	025-21955	025-25944	025-25944
^s 2a	1		2	025-23211	025-21955	025-21955	025-21955	025-21955	025-21955	025-25944
				50 HZ UNIT MODEL						
				YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ65ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
				50 HZ PARTS						
^s 1b	1	Valve, Thermal Expansion	1	025-21955	025-21955	025-21955	025-21955	025-25944	025-25944	025-25944
^s 2b	1		2	025-21955	025-21955	025-21955	025-21955	025-25944	025-25944	025-25944
60 HZ / 50HZ COMMON PARTS										
3	2	Dehydrator, Body (Replaceable Core)		026-21055	026-21055	026-21055	026-21055	026-21055	026-21055	026-21055
^s 4	4	Dehydrator, Core (Use with Item 3)		026-18328	026-18328	026-18328	026-18328	026-18328	026-18328	026-18328
5	2	Valve, Liquid Solenoid		025-28376	025-28376	025-28376	025-28376	025-28376	025-28376	025-28376
6	2	Moisture Indicator, Body		026-32398	026-32398	026-32398	026-32398	026-32398	026-32398	026-32398
7	2	Moisture Indicator, Cap Assembly		026-32800	026-32800	026-32800	026-32800	026-32800	026-32800	026-32800
8	2	Valve, Liquid Stop		022-08739	022-08739	022-08739	022-08739	022-08739	022-08739	022-08739
9	2	Compressor		See Page 4						
10	8	Pad, Isolator		066-92335	066-92335	066-92335	066-92335	066-92335	066-92335	066-92335
ALUMINUM FIN COILS - STANDARD										
11	1	Header, Liquid (R.H.)	1	375-01909	375-01909	375-01911	375-01911	375-01911	375-01911	375-01911
12	1		2	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
13	1	Header, Liquid (L.H.)	1	375-01910	375-01910	375-01912	375-01912	375-01912	375-01912	375-01912
14	1		2	375-01910	375-01910	375-01912	375-01910	375-01912	375-01912	375-01912
15	4	Header, Discharge	1, 2	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929
16	4	Coil, Condenser	1	026-31588	026-31588	026-31589	026-32589	026-31589	026-31589	026-31589
17	4		2	026-31588	026-31588	026-31589	026-31588	026-31589	026-31589	026-31589
HERESITE-COATED COILS - OPTION										
11	1	Header, Liquid (R.H.)	1	375-02558	375-02558	375-02561	375-02561	375-02561	375-02561	375-02561
12	1		2	375-02558	375-02558	375-02561	375-02558	375-02561	375-02561	375-02561
13	1	Header, Liquid (L.H.)	1	375-02559	375-02559	375-02562	375-02562	375-02562	375-02562	375-02562
14	1		2	375-02559	375-02559	375-02562	375-02559	375-02562	375-02562	375-02562
15	4	Header, Discharge	1, 2	375-02560	375-02560	375-02560	375-02560	375-02560	375-02560	375-02560
16	4	Coil, Condenser	1	326-31642	326-31642	326-31641	326-31641	326-31641	326-31641	326-31641
17	4		2	326-31642	326-31642	326-31641	326-31642	326-31641	326-31641	326-31641
COPPER FIN COILS - OPTION										
11	1	Header, Liquid (R.H.)	1	375-01909	375-01909	375-01911	375-01911	375-01911	375-01911	375-01911
12	1		2	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
13	1	Header, Liquid (L.H.)	1	375-01910	375-01910	375-01912	375-01912	375-01912	375-01912	375-01912
14	1		2	375-01910	375-01910	375-01912	375-01910	375-01912	375-01912	375-01912
15	4	Header, Discharge	1, 2	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929
16	4	Coil, Condenser	1	026-31646	026-31646	026-31647	026-31647	026-31647	026-31647	026-31647
17	4		2	026-31646	026-31646	026-31647	026-31646	026-31647	026-31647	026-31647
BLACK FIN COILS - OPTION										
11	1	Header, Liquid (R.H.)	1	375-01909	375-01909	375-01911	375-01911	375-01911	375-01911	375-01911
12	1		2	375-01909	375-01909	375-01911	375-01909	375-01911	375-01911	375-01911
13	1	Header, Liquid (L.H.)	1	375-01910	375-01909	375-01912	375-01912	375-01912	375-01912	375-01912
14	1		2	375-01910	375-01909	375-01912	375-01910	375-01912	375-01912	375-01912
15	4	Header, Discharge	1, 2	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929	375-01929
16	4	Coil, Condenser	1	026-33898	026-33898	326-33879	326-33879	326-33879	326-33879	326-33879
17	4		2	026-33898	026-33898	326-33879	326-33898	326-33879	326-33879	326-33879

^s Recommended Stock Spare Part

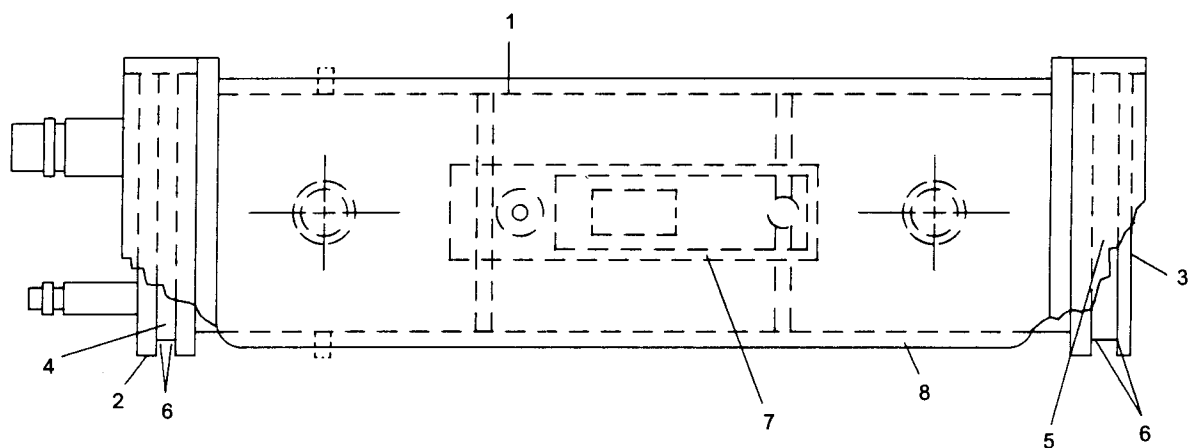

COOLER COMPONENTS

ITEM NO.	QTY PER UNIT	DESCRIPTION	UNIT MODEL						
			YEAZ88DR6 YEAJ44DR7	YEAJ44DR6 YEAJ55DR7	YEAJ44HT6 YEAJ55HT7	YEAJ54ES6 YEAJ65ES7	YEAJ55HT8 YEAJ66HT9	YEAJ65HT8 YEAJ76HT9	YEAJ66MT8 YEAJ77MT9
1	1	Cooler, Less Insulation and Heater (Includes Items 2 thru 6)	375-17507	375-17507	375-17511	375-17509	375-17511	375-17511	375-17515
2	1	Head, Connection End	375-17068	375-17068	375-18009	375-17068	375-18009	375-18009	375-17058
3	1	Head, Back End	375-17065	375-17065	375-18008	375-17065	375-17008	375-17008	375-17057
4	1	Pass Baffle, Connection End	375-17072	375-17072	375-17085	375-17072	375-17085	375-17085	375-17059
5	1	Pass Baffle, Back End	375-18175	375-18175	075-17084	375-18175	075-17084	075-17084	075-17049
^s 6 ¹	4	Gasket, Pass Baffle and Head	075-17071	075-17071	075-17082	075-17071	075-17082	075-17082	075-17050
^s 7	1	Heater	025-22692	025-22692	025-22690	025-22692	025-22690	025-22690	-
	1		-	-	025-22691	-	025-22691	025-22691	-
	2		-	-	-	-	-	-	025-22691
8	3	Insulation, 3/4" x 49" x 65"	010-04198	010-04198	010-04198	010-04198	010-04198	010-04198	010-04198

NOTES:

^s Recommended Stock Spare Part

1. When replacing gasket, Item 6, use:

^s Sealer, Gasket, 013-02827

^s Primer, 013-01753



#26288



#26289

FIG. 2 - POWER DISCONNECT SWITCH (OPTION)

REPLACEMENT COMPONENTS FOR UNIT OPTIONS ¹

ITEM NO.	QTY PER UNIT	DESCRIPTION		VOLT. CODE	ALL MODELS
A	2	REMOTE COOLER (Note 2)	Valve, Thermal Expansion	ALL	See Page 15
B	2	CHICAGO CODE	Valve, Relief	ALL	See Page 15
A	2	REMOTE COOLER (Note 2)	Valve, Thermal Expansion	ALL	See Page 15
B	2	CHICAGO CODE	Valve, Relief	ALL	See Page 15
C	1	POWER DISCONNECT SWITCH (PDS)	Switch, Disconnect (See Fig. 2)	-17 -28 -40 -46 -50 -58 -64	See Page 15
D	2	LOW AMBIENT KIT (Note 3)	Fan Contactor with Suppressor	-17 -28 -40 -46 -50 -58 -64	See Page 15
E	1	CONTROL TRANSFORMER (1T)	Transformer	-17 -28 -40 -46 -50 -58 -64	025-29627-001 025-29627-002 025-29627-003 025-29627-002 025-29627-003 025-29627-004 N/A
F	2		Fuse, Transformer	-17 -28 -40 -46 -50 -58 -64	025-27699-000 025-27509-015 025-28967-000 025-25584-000 025-28967-000 025-21145-000 N/A
G	1	PUMP CONTROL KIT/RELAY BOARD KIT	Relay Control Board	ALL	031-01093-000
H	2 *	DISCHARGE PRESSURE READOUT KIT	Transducer, Discharge Pressure	ALL	025-29139-001
I	2 *		Adaptor, Transducer (Use with Item H)		023-16272-000
J	2	LOADMINDER (HOT GAS BYPASS) (Note 4)	STANDARD UNIT Valve, Regulator, Hot Gas	ALL	025-27647-000
K	2		Suppressor	ALL	031-01117-000
L	2		UNIT WITH REMOTE COOLER Valve, Regulator, Hot Gas	ALL	025-29944-000
M	2		Suppressor	ALL	031-01117-000
N	1	FLOW CONTROL SWITCH	Switch, Flow	ALL	024-26116-000
O	1	REMOTE CONTROL CENTER	Control, Micro Board	ALL	031-01196-000
P	1	WALL-MOUNTED TRANSFORMER (Note 5)	Transformer: Primary Voltage: 115V (60 HZ) : 230V (50 HZ)	- -	025-29917-001 025-29917-002
Q	1	MULTIPLE UNIT SEQUENCING KIT	Sensor, Temperature	ALL	025-28935-000
R	1		Resistor, 180 Ohm Fixed	ALL	025-29900-000
S	1	BAS INTERFACE	Control, Remote Reset	ALL	031-00814-000

NOTES (For Pages 14 - 15):

- * One required per compressor
- Not Applicable

N/A Not Available

1. Parts listed on pages 14 and 15 are for single replacement parts contained in the Option Kits. Part Numbers provided **DO NOT** reflect part numbers for complete Option Kits. See the Installation Operation Manual, Form 150.60-NM4 for complete Option Kit Part Numbers.

2. All other parts for this option are the same as standard, including cooler, controls, and unit components.
3. This option also requires Relay Board Kit, Item G, and Discharge Pressure Readout Kit, Items H and I.
4. Loadminder Option also requires Relay Board Kit, Item G.
5. Used with Remote Control Center (If Specified).

REPLACEMENT COMPONENTS FOR UNIT OPTIONS ¹

ITEM NO.	60 HZ UNIT MODELS						
	YEAJ88DR6	YEAJ44DR6	YEAJ44HT6	YEAJ54ES6	YEAJ55HT8	YEAJ65HT8	YEAJ66MT8
A	025-23211-000	025-21955-000	025-21955-000	025-21955-000	025-21955-000	025-21955-000	025-25944-000
B	022-0881-000	022-08863-000	022-08863-000	022-08863-000	022-08863-000	022-08863-000	022-08863-000
	50 HZ UNIT MODELS						
	YEAJ44DR7	YEAJ55DR7	YEAJ55HT7	YEAJ65ES7	YEAJ66HT9	YEAJ76HT9	YEAJ77MT9
A	025-21955-000	025-21955-000	025-21955-000	025-21955-000	025-25944-000	025-25944-000	025-25944-000
B	022-08863-000	022-08863-000	022-08863-000	022-08863-000	022-08863-000	022-08863-000	022-08863-000
60 HZ / 50 HZ PARTS (BY MODEL NUMBER, SEE ABOVE, AND VOLTAGE CODE)							
C	024-25563-000	024-25563-000	024-25562-000	024-25562-000	024-25562-000	024-25562-000	024-25562-000
	024-25563-000	024-25563-000	024-25562-000	024-25563-000	024-25562-000	024-25562-000	024-25562-000
	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25563-000
	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000
	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25563-000
	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000
	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25564-000	024-25563-000	024-25563-000
D	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25547-000	024-25547-000	024-25547-000
	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25547-000	024-25547-000	024-25547-000
	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000
	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000
	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000
	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000
	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000	024-25545-000



P.O. Box 1592, York, Pennsylvania USA 17405-1592
Copyright © by York International Corporation 1995
FORM 150.60-RP4 (1295)



Proud Sponsor
of the 1996
U.S. Olympic Team

36USC380

Subject to change without notice. Printed in USA
ALL RIGHTS RESERVED
RPC 4M 196 .80
CODES: ERRI, RNP, SN4